



CE9.12 Cisco Webex Desk Pro User Guide

What's In This Guide

Introduction

Cisco Webex Desk Pro	4
Pair with a Bluetooth Headset and other devices.....	5
Use as a USB Camera	6
Log On With Your Own Credentials.....	7

Video Calls

Place a Call From Contact List.....	9
Edit a Contact Before Calling	10
Place a Call Using Name, Number, or Address.....	11
Incoming Calls.....	12
Receive a Call While in Another Call	13
Disconnect Yourself From a Call	14
Put Call on Hold and Resume a Call on Hold	15
Transfer an Ongoing Call.....	16
Change the Call Rate	17
Activate Do Not Disturb.....	18
Automated Forwarding of All Calls	19
View Keypad While in a Call	20
Add Additional Participants to an Existing Call	21
Disconnect a Participant From a Conference.....	22

Intelligent Proximity

Cisco Proximity Ultrasound Signal.....	24
--	----

Content Sharing

Share Content In a Call	26
Change Presentation Layout In a Call	27
Use as a Digital Whiteboard	28
Wired Touch Redirect.....	29

Scheduled Meetings

Join a Scheduled Meeting	31
Join a Webex Meeting	32

Contacts

Favorites, Recents, and Directory.....	34
Add Someone to Favorites, While in a Call	35
Add Someone to Favorites, Outside a Call.....	36
Edit an Existing Favorite	37

Camera Control

Turn Selfview On and Off	39
Move the Selfview PiP	40
Far-End Camera Control.....	41
Video Backgrounds.....	42

Settings

Available Settings.....	44
-------------------------	----

All entries in the table of contents are active hyperlinks that take you to the corresponding article.

To go between chapters, you can click on the icons in the sidebar.

Note: Some of the features described in this user guide may be optional in certain markets and they may not apply to your device.



 
 
Introduction

Cisco Webex Desk Pro

Use as PC monitor. Use an HDMI or USB-C cable to connect your computer (see below). If you use a USB-C cable, your laptop can be charged through the same cable.

To view the PC screen on Desk Pro, tap **Share Screen** and **Preview**.

Incoming calls appear as usual, irrespective of mode (PC or video) unless Do not disturb is active, see [“Activate Do Not Disturb” on page 18.](#)

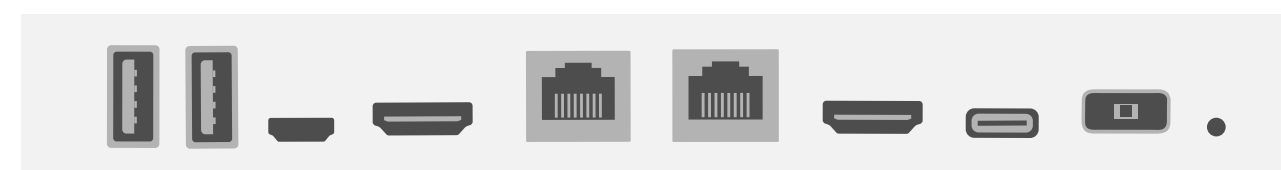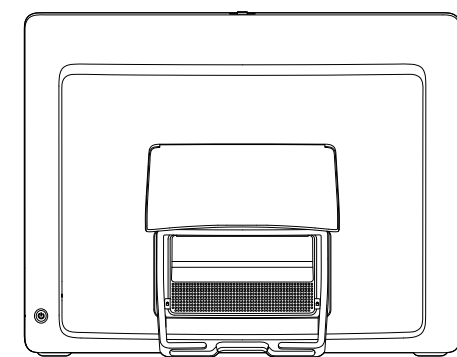

- 1 USB ports
- 2 Service port
- 3 HDMI out: screen
- 4 Network expansion connection. Connect your computer network here to let your Desk Pro and computer share a common connection
- 5 Network
- 6 HDMI in: content sharing
- 7 USB-C connector
- 8 Power
- 9 Factory reset pinhole



- 1 Camera with privacy shutter
- 2 Loudspeaker volume controls and microphone mute button
- 3 USB and mini-jack socket on the right side of the unit
- 4 Stylus
- 5 Loudspeaker
- 6 Microphones (6 locations)
- 7 Power On/Off on the back of the device

USB Headsets

The Desk Pro implements the standard protocol for USB wired audio devices.

Read more about this in <https://help.webex.com/nkiifbo/>.

Note that Desk Pro also supports the use of Bluetooth headsets—see the following page for more.

Manufacturers can implement the standard differently (called HID protocol).

Consequently, different models from the same manufacturer can behave differently and we can't guarantee that all headsets and handsets work.

We have only tested wired headsets or headsets with a dongle.

The provided list of headsets is by no means exhaustive, many other headsets should work. We recommend that you check with Jabra, Plantronics, and Sennheiser, as they also do their own testing and can provide their own list of headsets that support Desk Pro.

The following headsets have been tested by Cisco:

- Jabra Evolve 40
- Jabra Evolve 65
- Jabra Pro 9450
- Jabra Pro 9470
- Sennheiser MB Pro 2

Introduction

Pair with a Bluetooth Headset and other devices

You can use Bluetooth connection for both headsets and other devices. For headsets, you can use Bluetooth to either connect directly to a headset or through a USB dongle.

You can switch between the speaker of the Desk Pro and the devices connected through Bluetooth or USB. Select the icon in the status bar of the user interface, and choose from the available devices.

NOTE: You can't have both a headset and another device Bluetooth connected simultaneously.

Bluetooth Headsets

Bluetooth profiles supported:

- HFP (Hands-Free Profile)
- A2DP (Advanced Audio Distribution Profile)

Bluetooth headset is supported directly with the embedded Bluetooth radio or by using a USB Bluetooth dongle.

Multiple headsets can be paired with the device, but only one can be connected at a time.

 
The range is up to 10m (30ft). If you move outside the range when in a call, the audio switches to the speakers on the device.

Most headsets have built-in volume controls. When in a call, the volume of the headset and device is synchronized. When not in a call, the volume buttons on the headset and device operate independently.

Supported Bluetooth features:

- Answer incoming calls
- Reject incoming calls
- Hang up calls
- Hold and resume calls
- Volume up and down

Some headsets have mute control. This operates independently of the mute control on the device.

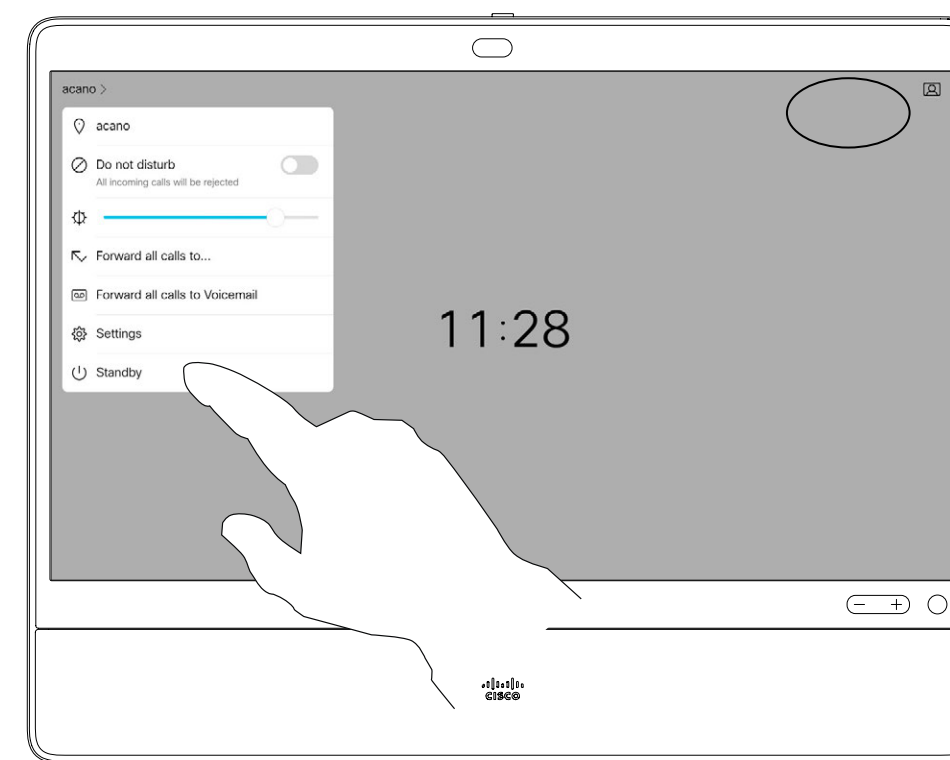

Icon appears here. Tap it to change between Desk Pro speakers and another device.

- Speakers
- Analog headset
- USB headset
- USB handset
- Bluetooth device

Pair a Bluetooth Headset

1. Activate Bluetooth pairing on the headset. If in doubt, consult the instruction manual for the headset.
2. Tap the device name in the upper left corner of your Desk Pro, tap **Settings** and **Bluetooth**. If Bluetooth is disabled, turn it on. Bluetooth is enabled by default.
3. The Desk Pro scans for devices. Upon successful discovery the Bluetooth headset should be displayed in the device list.
4. Select the device and pairing begins. It may take a few seconds for the pairing to complete.
5. If the pairing is successful, Desk Pro lists the headset as connected. The pairing is completed.

USB Bluetooth Dongle

When using the dongle the headset is detected as a USB headset.

Note that synchronization of headset volume and device volume doesn't work when using a dongle.

See also <https://help.webex.com/nkiifbo/>.

Pair other devices

You can also pair other devices to your Desk Pro, such as your mobile phone for listening music.

NOTE: You can't use Bluetooth to stream music while in a call.

1. Tap the device name in the upper left corner of your Desk Pro, tap **Settings** and **Bluetooth**. If Bluetooth is disabled, turn it on. Bluetooth is enabled by default.
2. Toggle on **Discoverable**.
You only need to set Desk Pro as Discoverable when you connect a new device. Desk Pro goes automatically out of Discoverable mode after five minutes.
3. Go to the Bluetooth settings on your device and scan for available devices.
4. Select Desk Pro from the devices list and pairing begins. It may take a few seconds for the pairing to complete.
5. If the pairing is successful, your Desk Pro is listed as connected. The pairing is completed.

Use as a USB Camera

The Cisco Webex Desk Pro may also be used as a USB camera.

If you did not register your Desk Pro with Cisco, you may use it as any other USB camera.

If you have registered the Desk Pro with Cisco, you can still use it as a USB camera, but kindly observe the following:

- The Desk Pro will enter do not disturb (DND) mode when the software client starts using the camera, and not when the cable is plugged.
- This will allow scenarios where a dedicated computer is connected to the Desk Pro at all times, but the Desk Pro can be still be used for regular Cisco calls.

To use the Desk Pro as a USB camera, connect it via a USB cable between your computer and the USB-C socket on the Desk Pro.

This configuration will make use of the microphones and the loudspeakers of the Desk Pro, ensuring a great sound experience.

If you want to extend the configuration to include an external monitor with this setup, connect your computer to the monitor in your usual way.

Other Device Settings are also fully accessible, with the exception of the Do Not Disturb, which cannot be disabled on a Cisco registered Desk Pro.

Used as USB Camera When Already Registered

When placing calls using a third party client, the camera, microphone and loudspeakers are selected based on the OS/app. defaults. You may override these settings.

To maintain privacy, the camera light indicator will be illuminated whenever the camera is active.

All other functionality is controlled by the third party client.

Used as USB Camera When Not Registered

The first time you start up a Cisco video device, the Setup Wizard will appear.

 
This wizard lets you specify how to register with Cisco Services (Cloud or on-premises). The Desk Pro provides the option of skipping the wizard if you are going to use it as a USB device only.

Detailed instructions are provided on-screen to show you how to do this.


If you later want to register the Desk Pro with Cisco, go to **Settings** and select **Device Activation**.

Log On With Your Own Credentials


About Extension Mobility

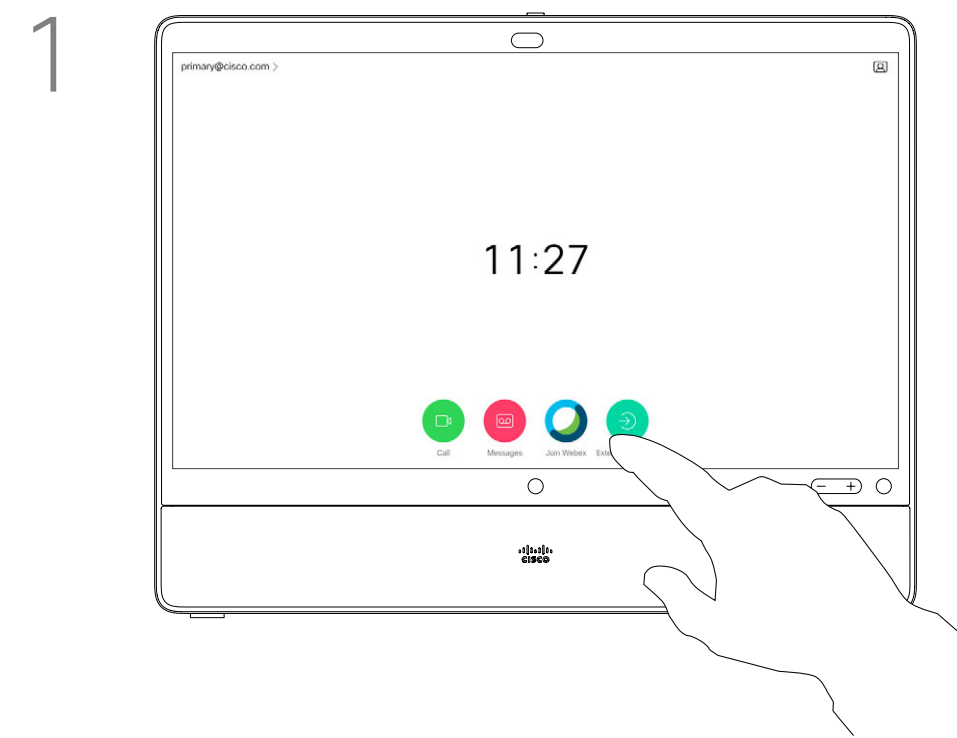

 
Tap the green **Extension Mobility** button.

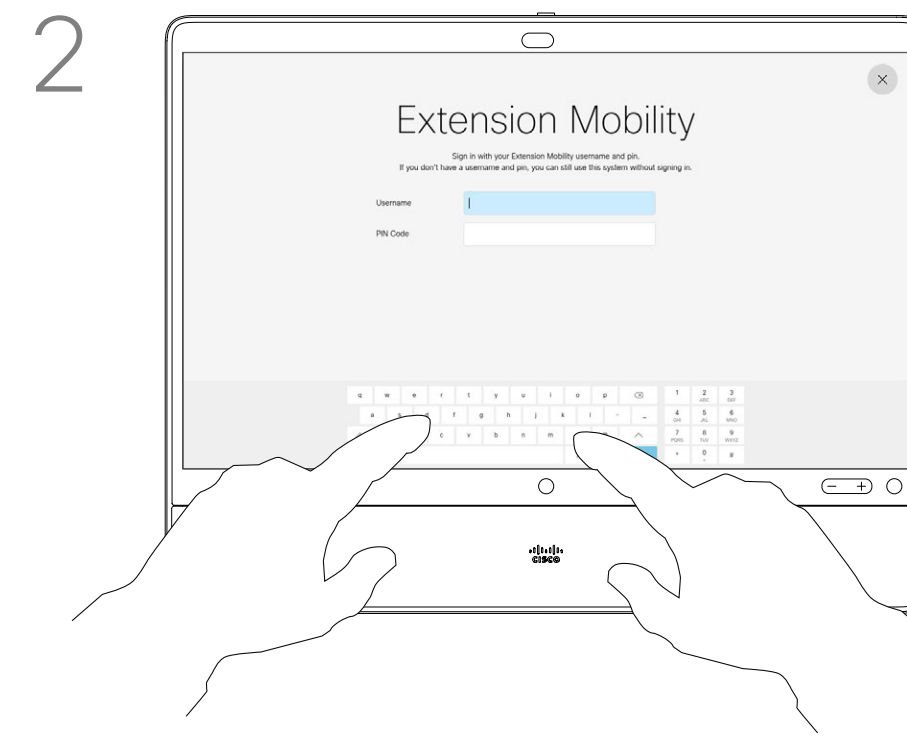


Key in your Username and PIN Code.

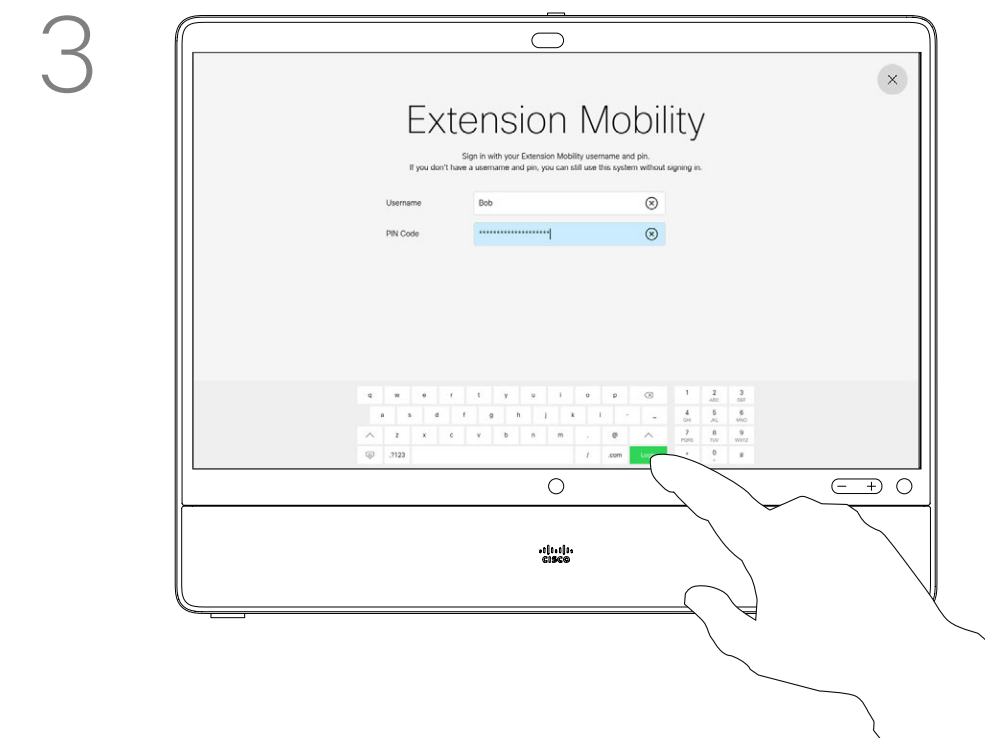 

Tap **Login**.

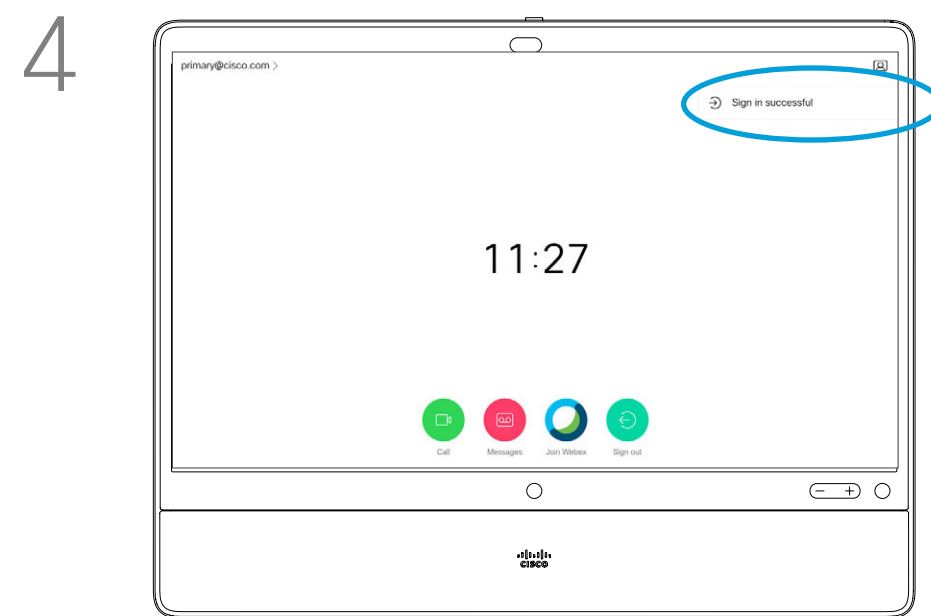 

 You can see a conformation that your Sign in was successful.

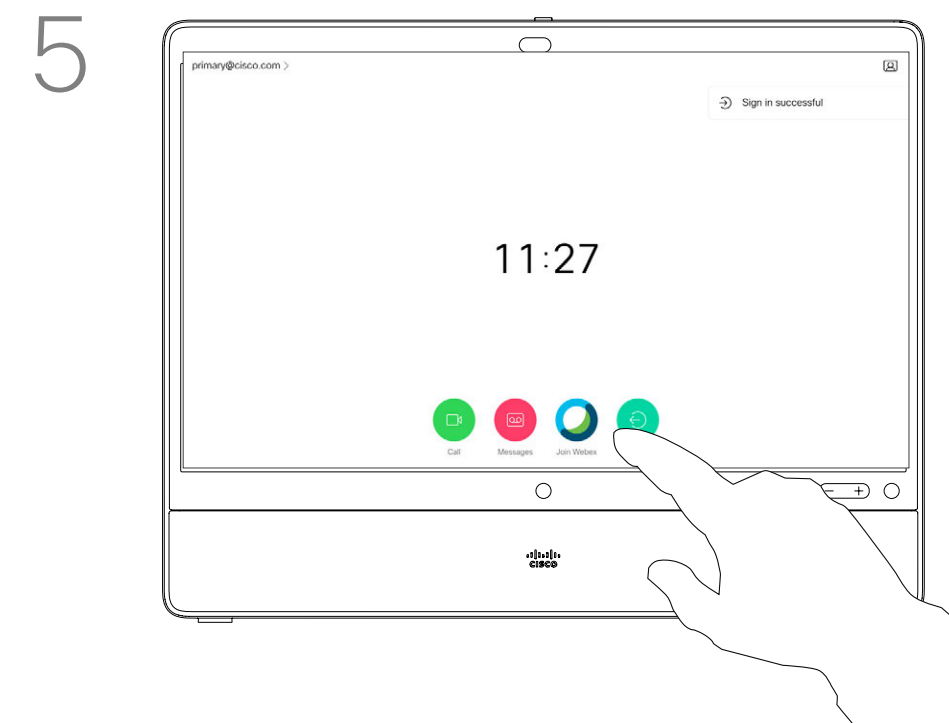

To log out again, tap **Sign out**, as shown.

Devices located in meeting rooms and quiet rooms and running under CUCM (Cisco Unified Communications Manager) may allow you to log in to the device with your own personal credentials.

CUCM then routes all of your incoming calls to that specific device.

Once you log out from Extension Mobility, your list of Recents is cleared from the device.

 
Extension Mobility is also referred to as Hot-desking.




Video Calls

Place a Call From Contact List


About the Lists of Contacts

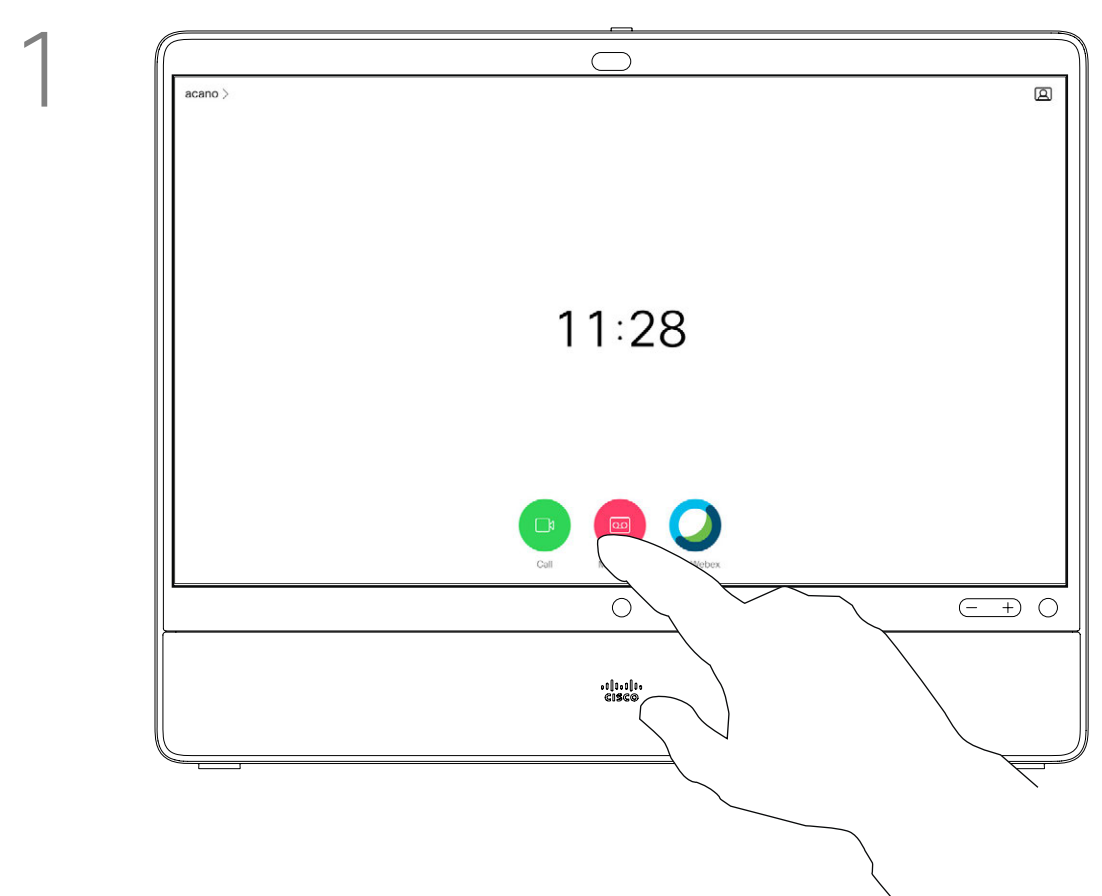


Tap the green **Call** button.

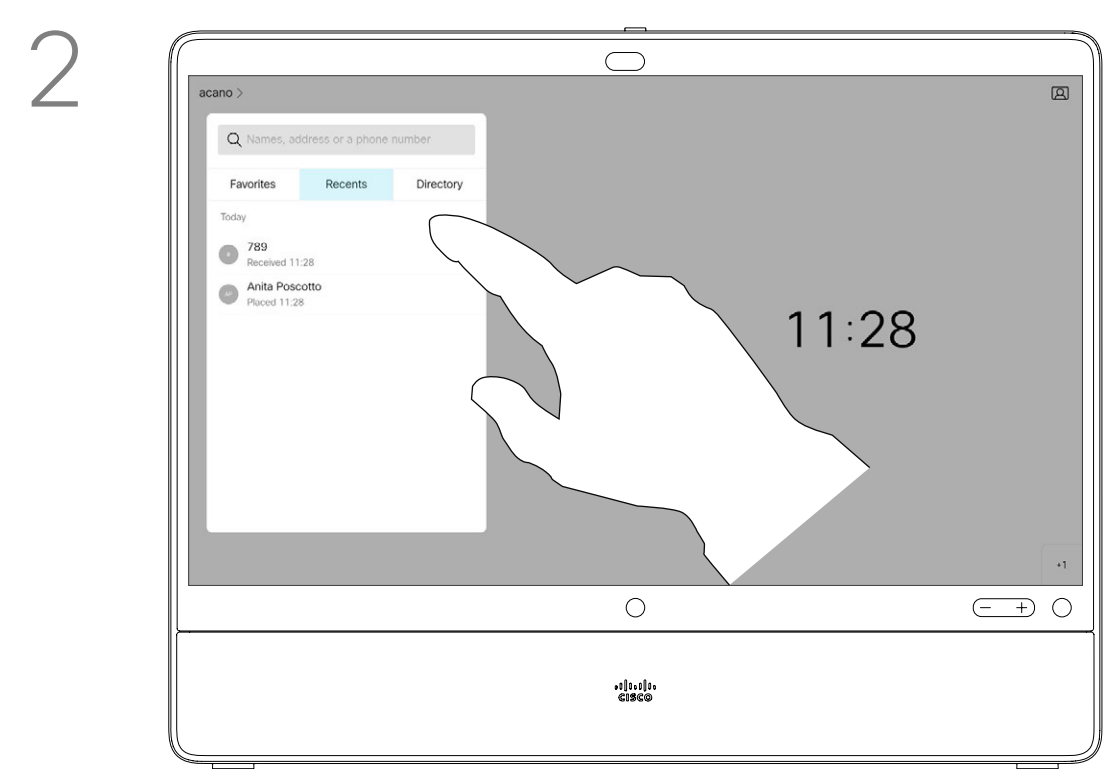 

 To search for someone in a specific list (*Favorites, Directory or Recents*), tap that list and then scroll down to locate the entry to be called.

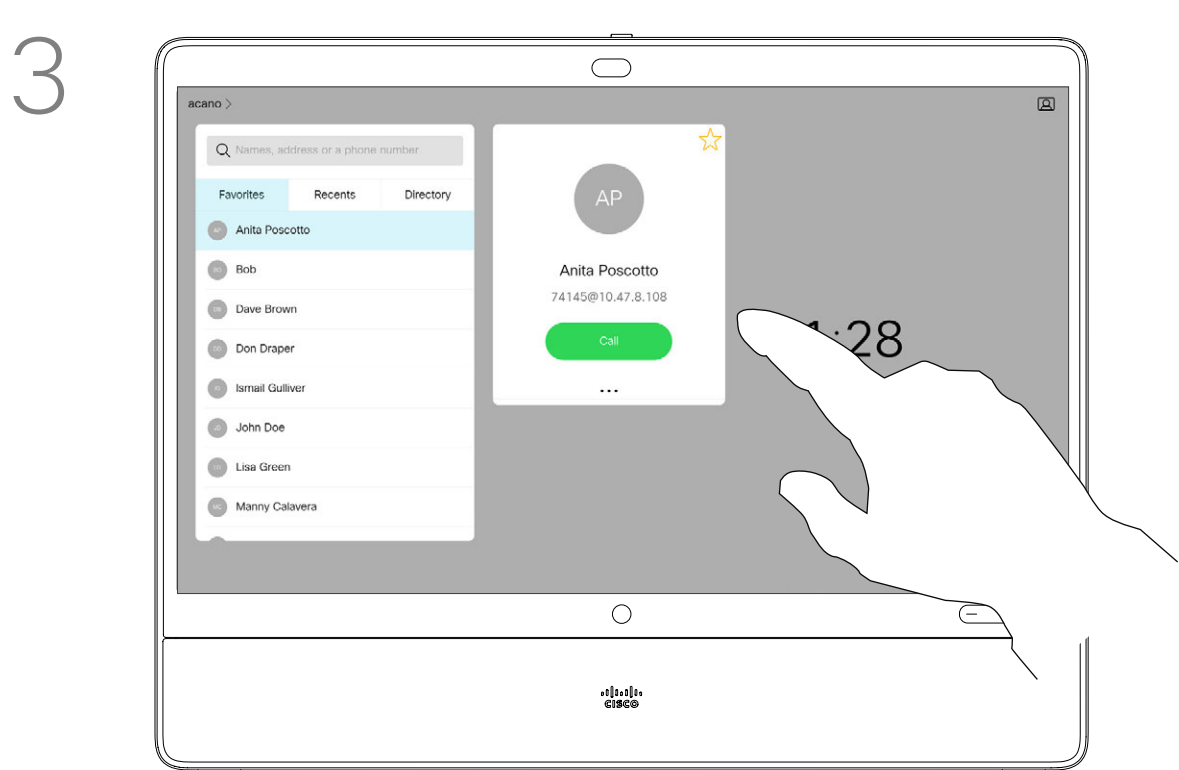

 Tap that entry to produce the green **Call** button. Then tap the green **Call** button, as shown.

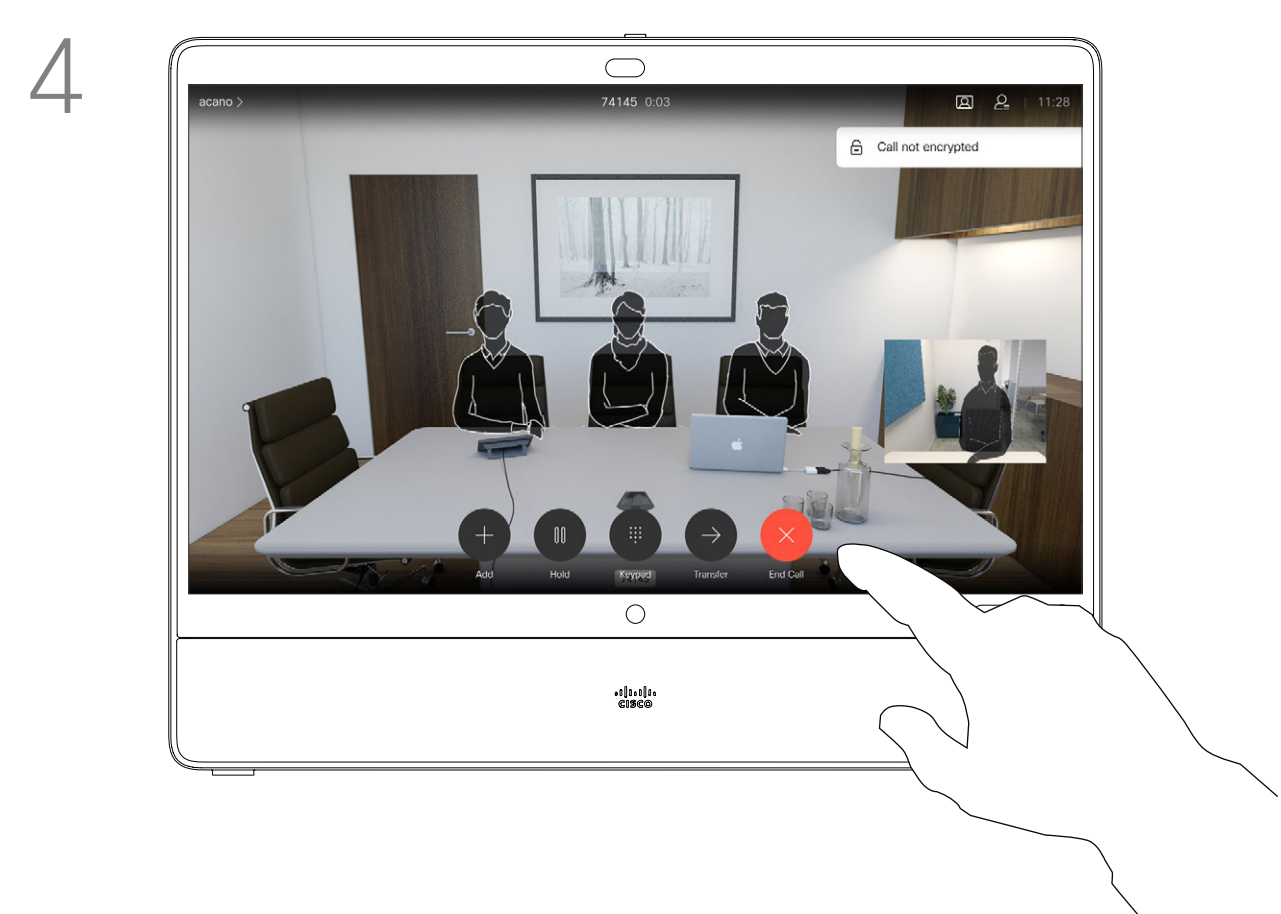

The call is placed. To end the call, tap the red **End** icon.

Your lists of Contacts consist of three parts:

Favorites. These contacts are put there by you. These entries are those you call frequently or otherwise need to access in a swift and convenient manner from time to time.

Directory is typically a corporate directory installed on your device by your video support team.

Recents is a list of calls you have placed, received or missed earlier.

 
The following options apply:

- You may key in a name, number, or an IP address and the device looks in all lists for you.
- You may add the entry to the list of *Favorites*; edit aspects of the entry before calling and change the call rate.

Note that removing entries from *Recents* can only be done from the web interface.

Edit a Contact Before Calling


About Entry Edits

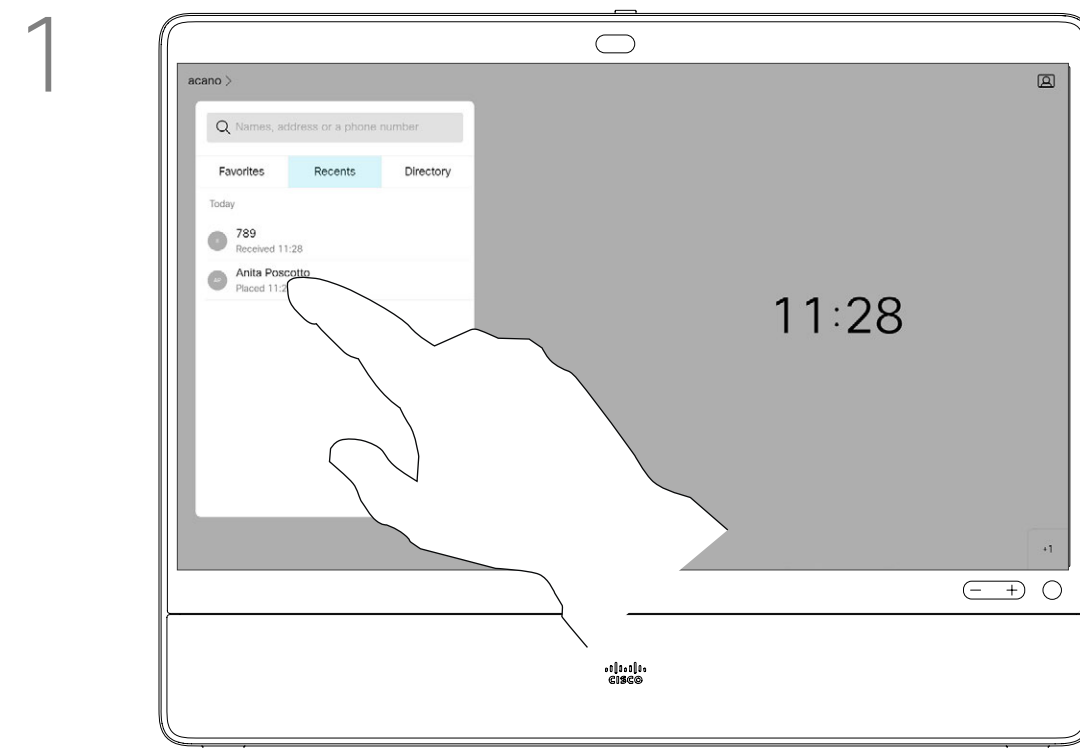


Locate the entry to be edited before a call is placed. Tap that entry. This opens the *Call* menu.



 Tap the **More (...)** icon just below the green **Call** button.

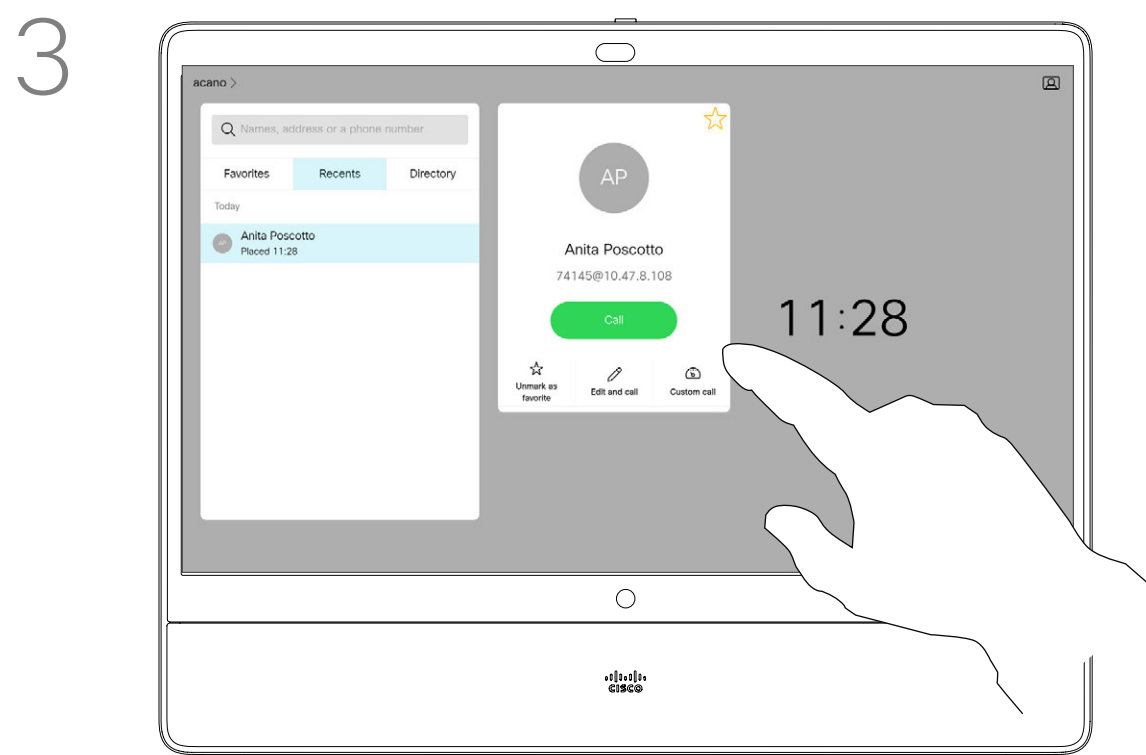

Tap Edit and Call.

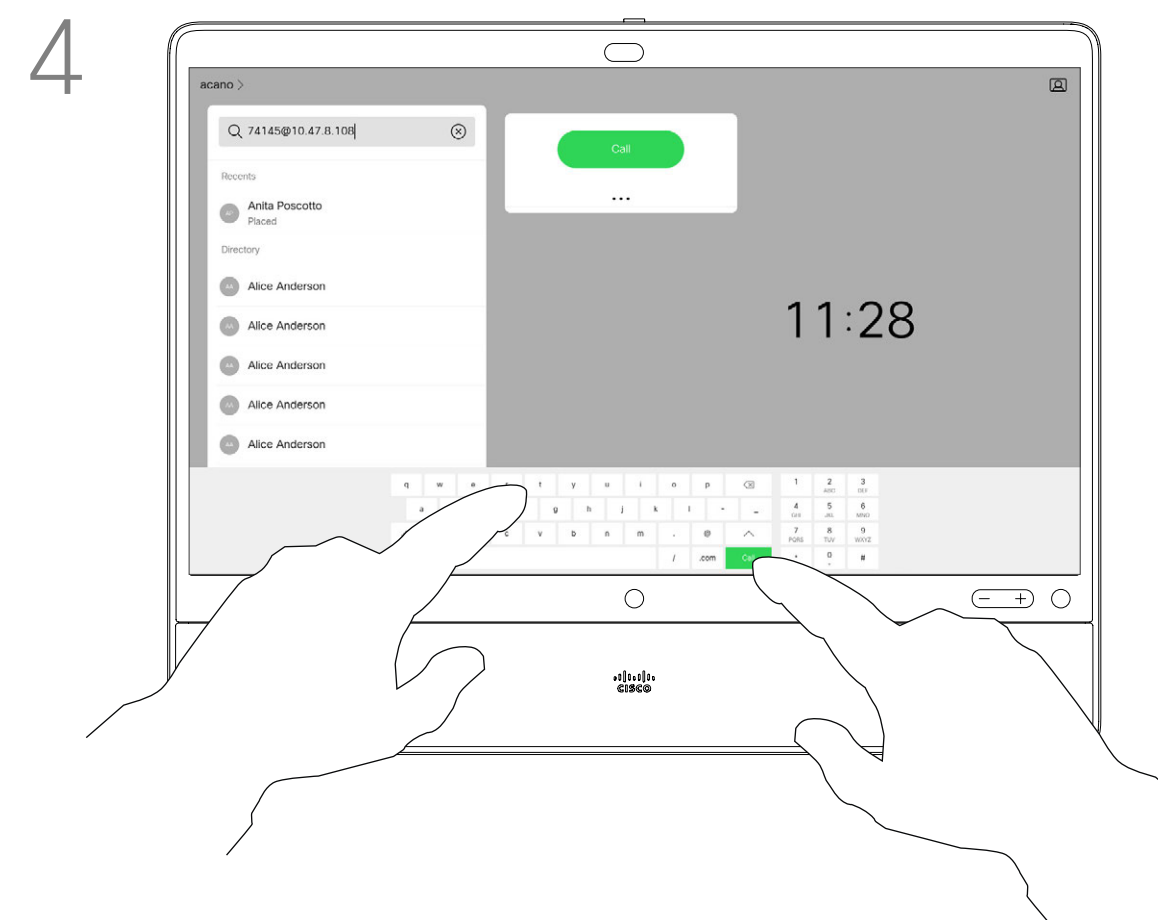 


Use the keyboard to edit and then tap either of the green **Call** buttons to place the call.

For how to enter the Contacts list, see the previous page.

You may have to edit an entry in one of the Contact lists before you place the call. There may be a need to add a prefix, a suffix, or otherwise alter the entry to ensure success.

Place a Call Using Name, Number, or Address

 
About Placing Calls

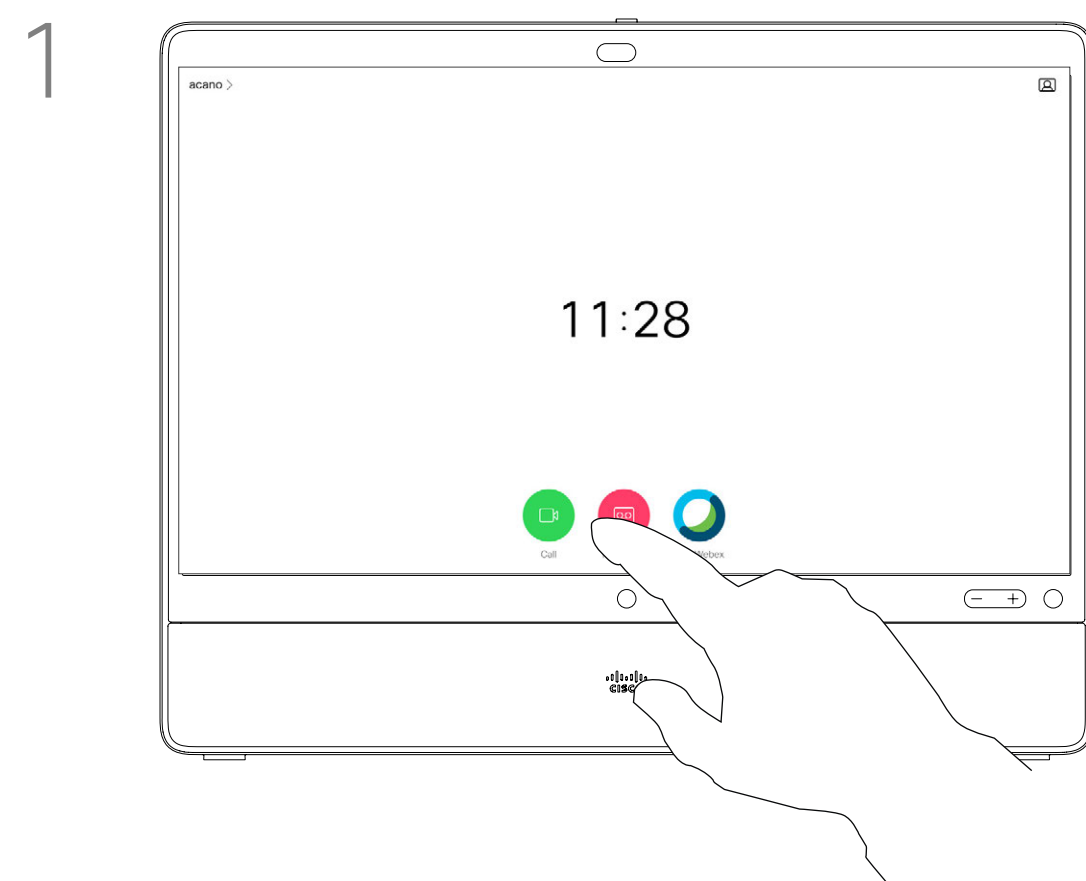


Tap the green **Call** button.



 Tap the **Search or Dial** field. This opens the keyboard

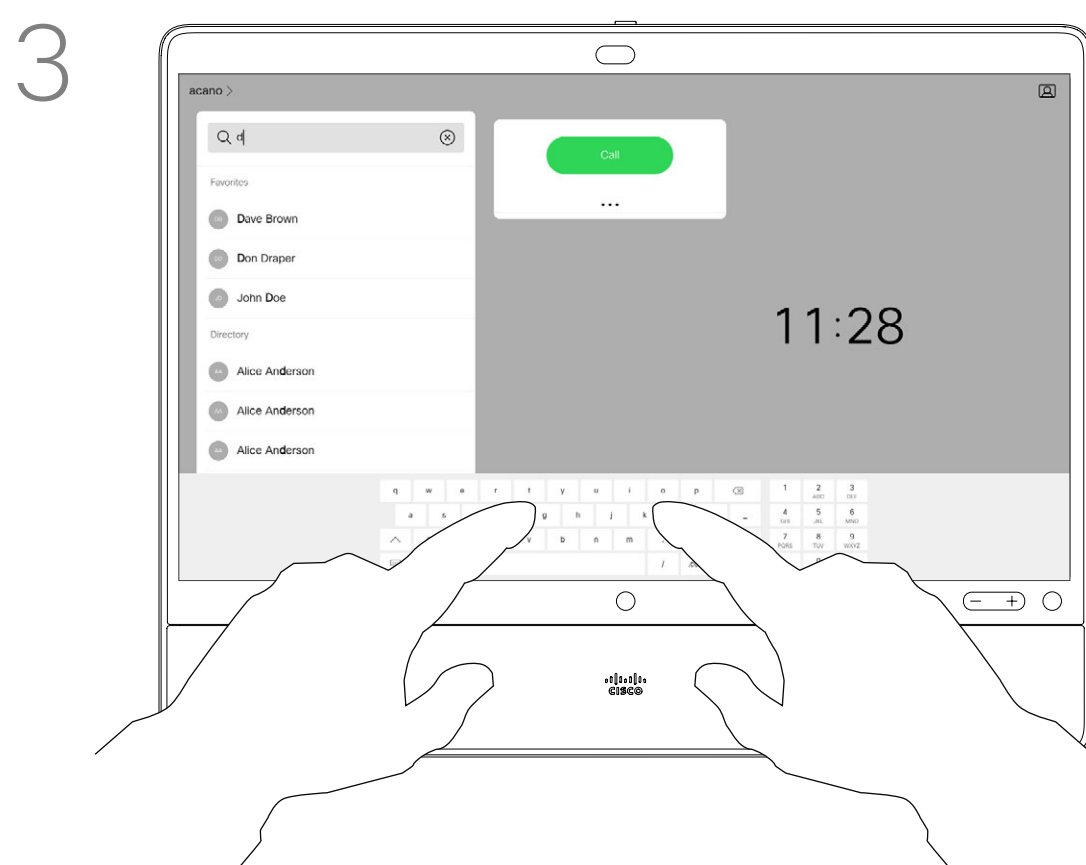

 Key in a name, number, or address. Matches and suggestions appear as you type. If the correct match appears, tap that match, otherwise keep typing.

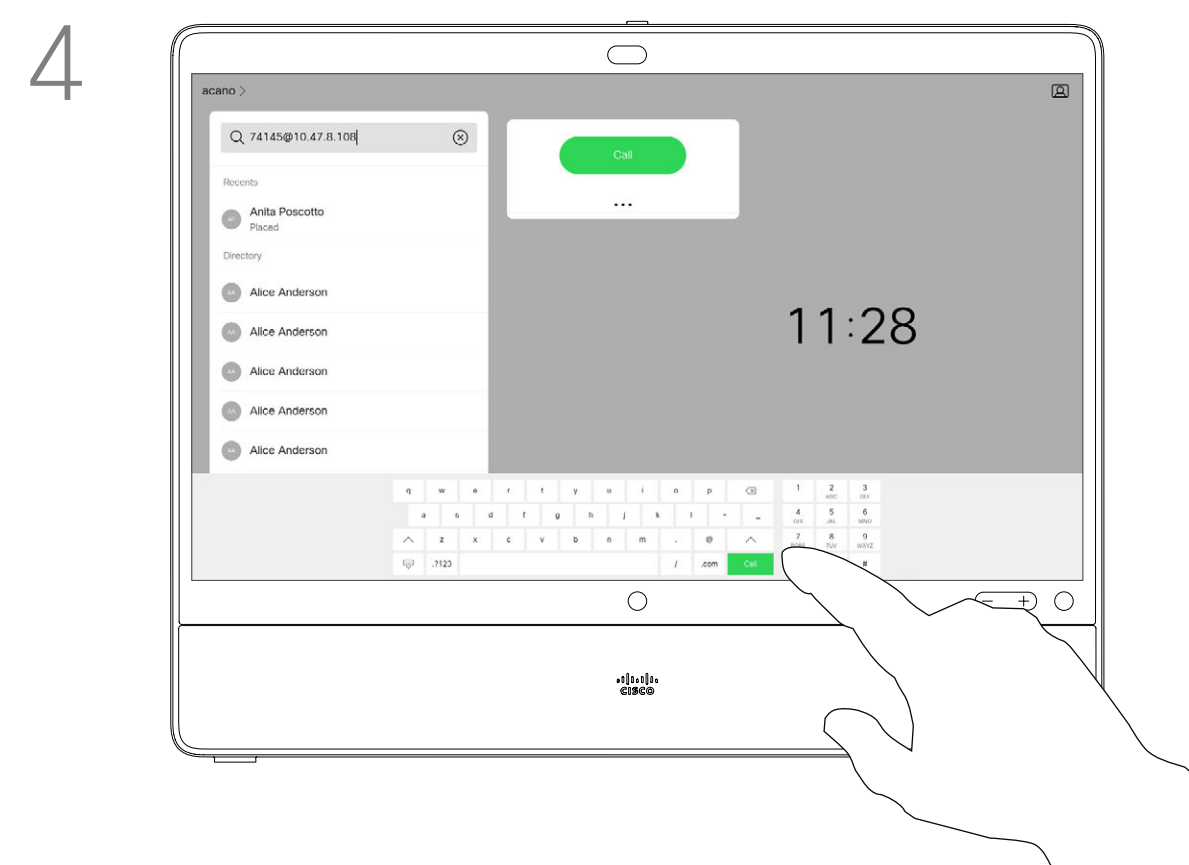

When you have typed or located whom to call, tap either of the green **Call** buttons to place the call.

You may call someone who is not listed in your list of contacts by keying in their name, address or number using the virtual keyboard appearing on the display.

Anyone you have previously called, or who has called you, appears in the *Recents* list and you may transfer any of them to your list of *Favorites*. This is described in the section *Contacts*.

Sometimes you need to enter numbers during a call, typically to reach extensions or to provide a pin code.

 
Tap **Touch Tones** (this button appears as soon as the call is placed) to invoke the keypad needed for this.

Note that Recents can be cleared from the web interface only.


Video Calls

Incoming Calls

If Someone Calls You

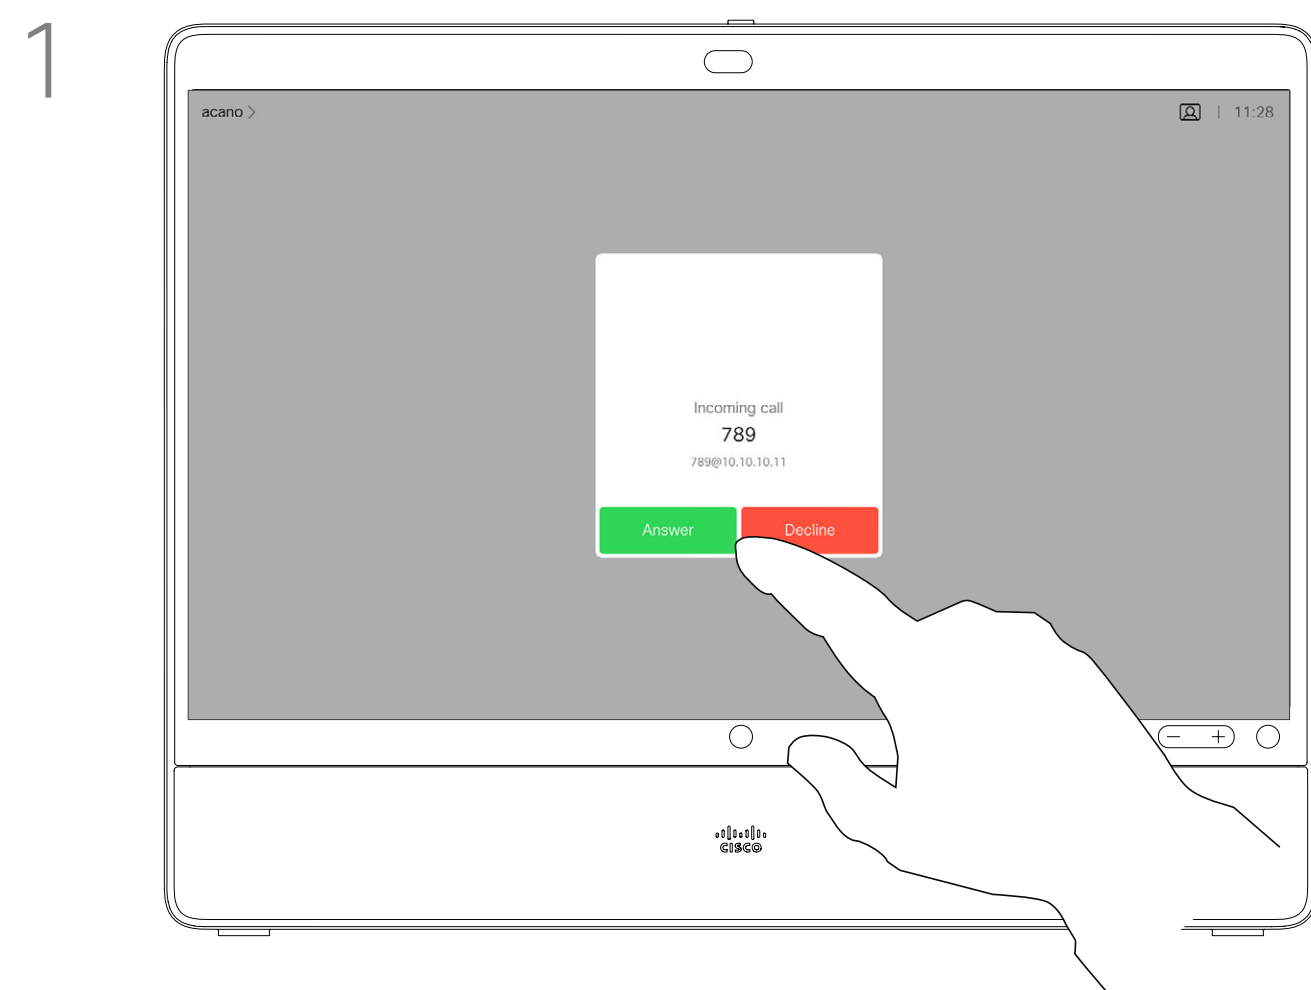

 Tap accordingly to accept (answer) or decline an incoming call.

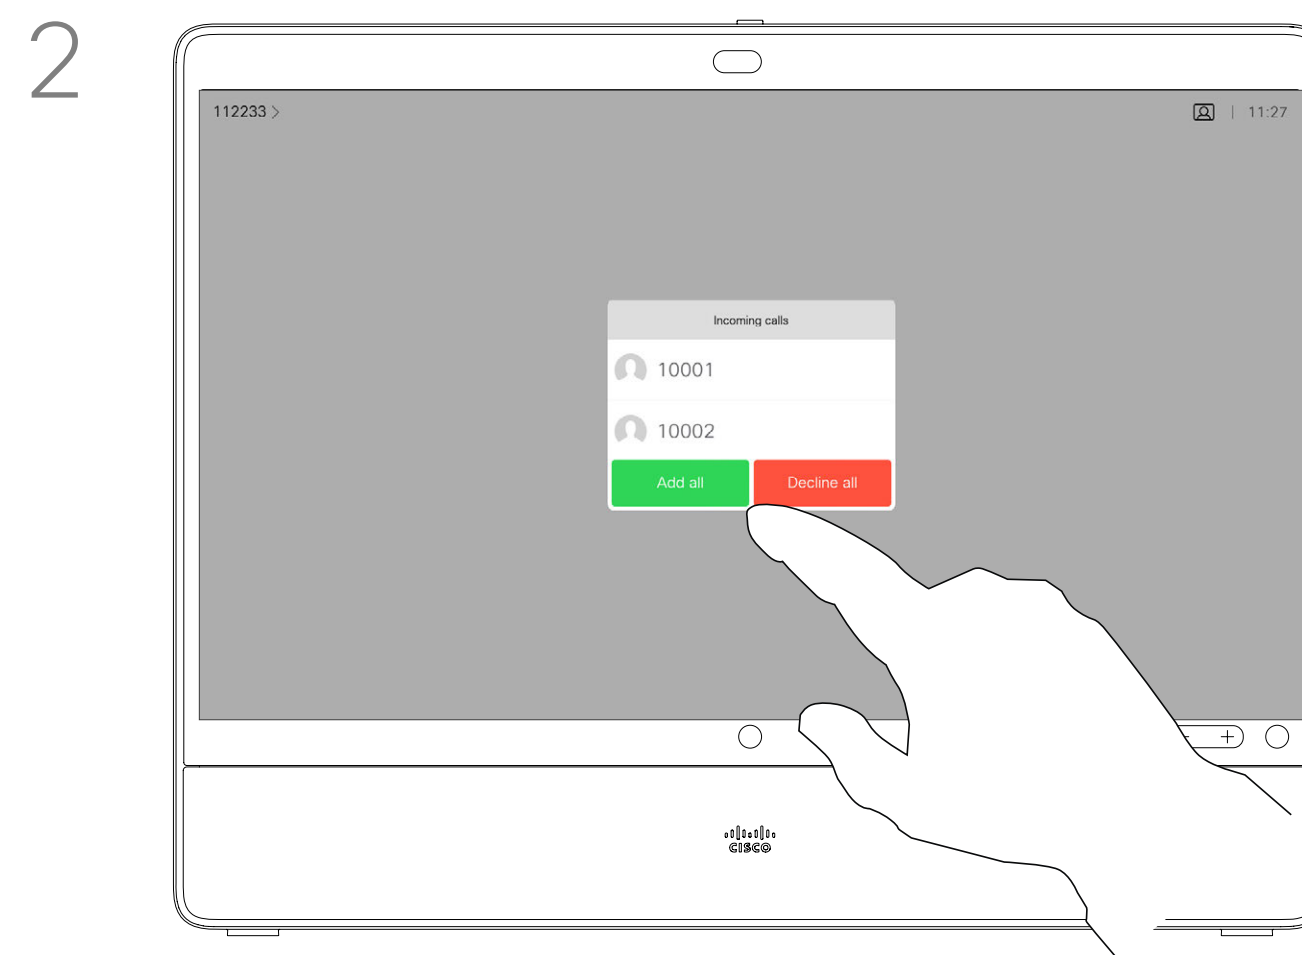

If your video infrastructure permits it, you may receive multiple incoming calls. You then have the choice to add them to an existing call, or decline them.

- If someone calls you, you may accept, decline, or ignore the call.
- If you decline the call, busy information is sent to the caller.
- If you ignore the call, the caller perceives this as if you were absent (you didn't pick up the call).
- Your video infrastructure may allow you to receive multiple incoming calls. Consult your video support team, if needed.

Receive a Call While in Another Call

About the Options

 
If you already are in a call, you may accept another incoming call under certain circumstances.

Add: If your device is running Ad-hoc conferencing under CUCM you can add incoming participants.

The identity of the new incoming call.

Decline the incoming call and carry on as you have been doing.


Accept & Hold: Answer the call and put the existing call on hold.

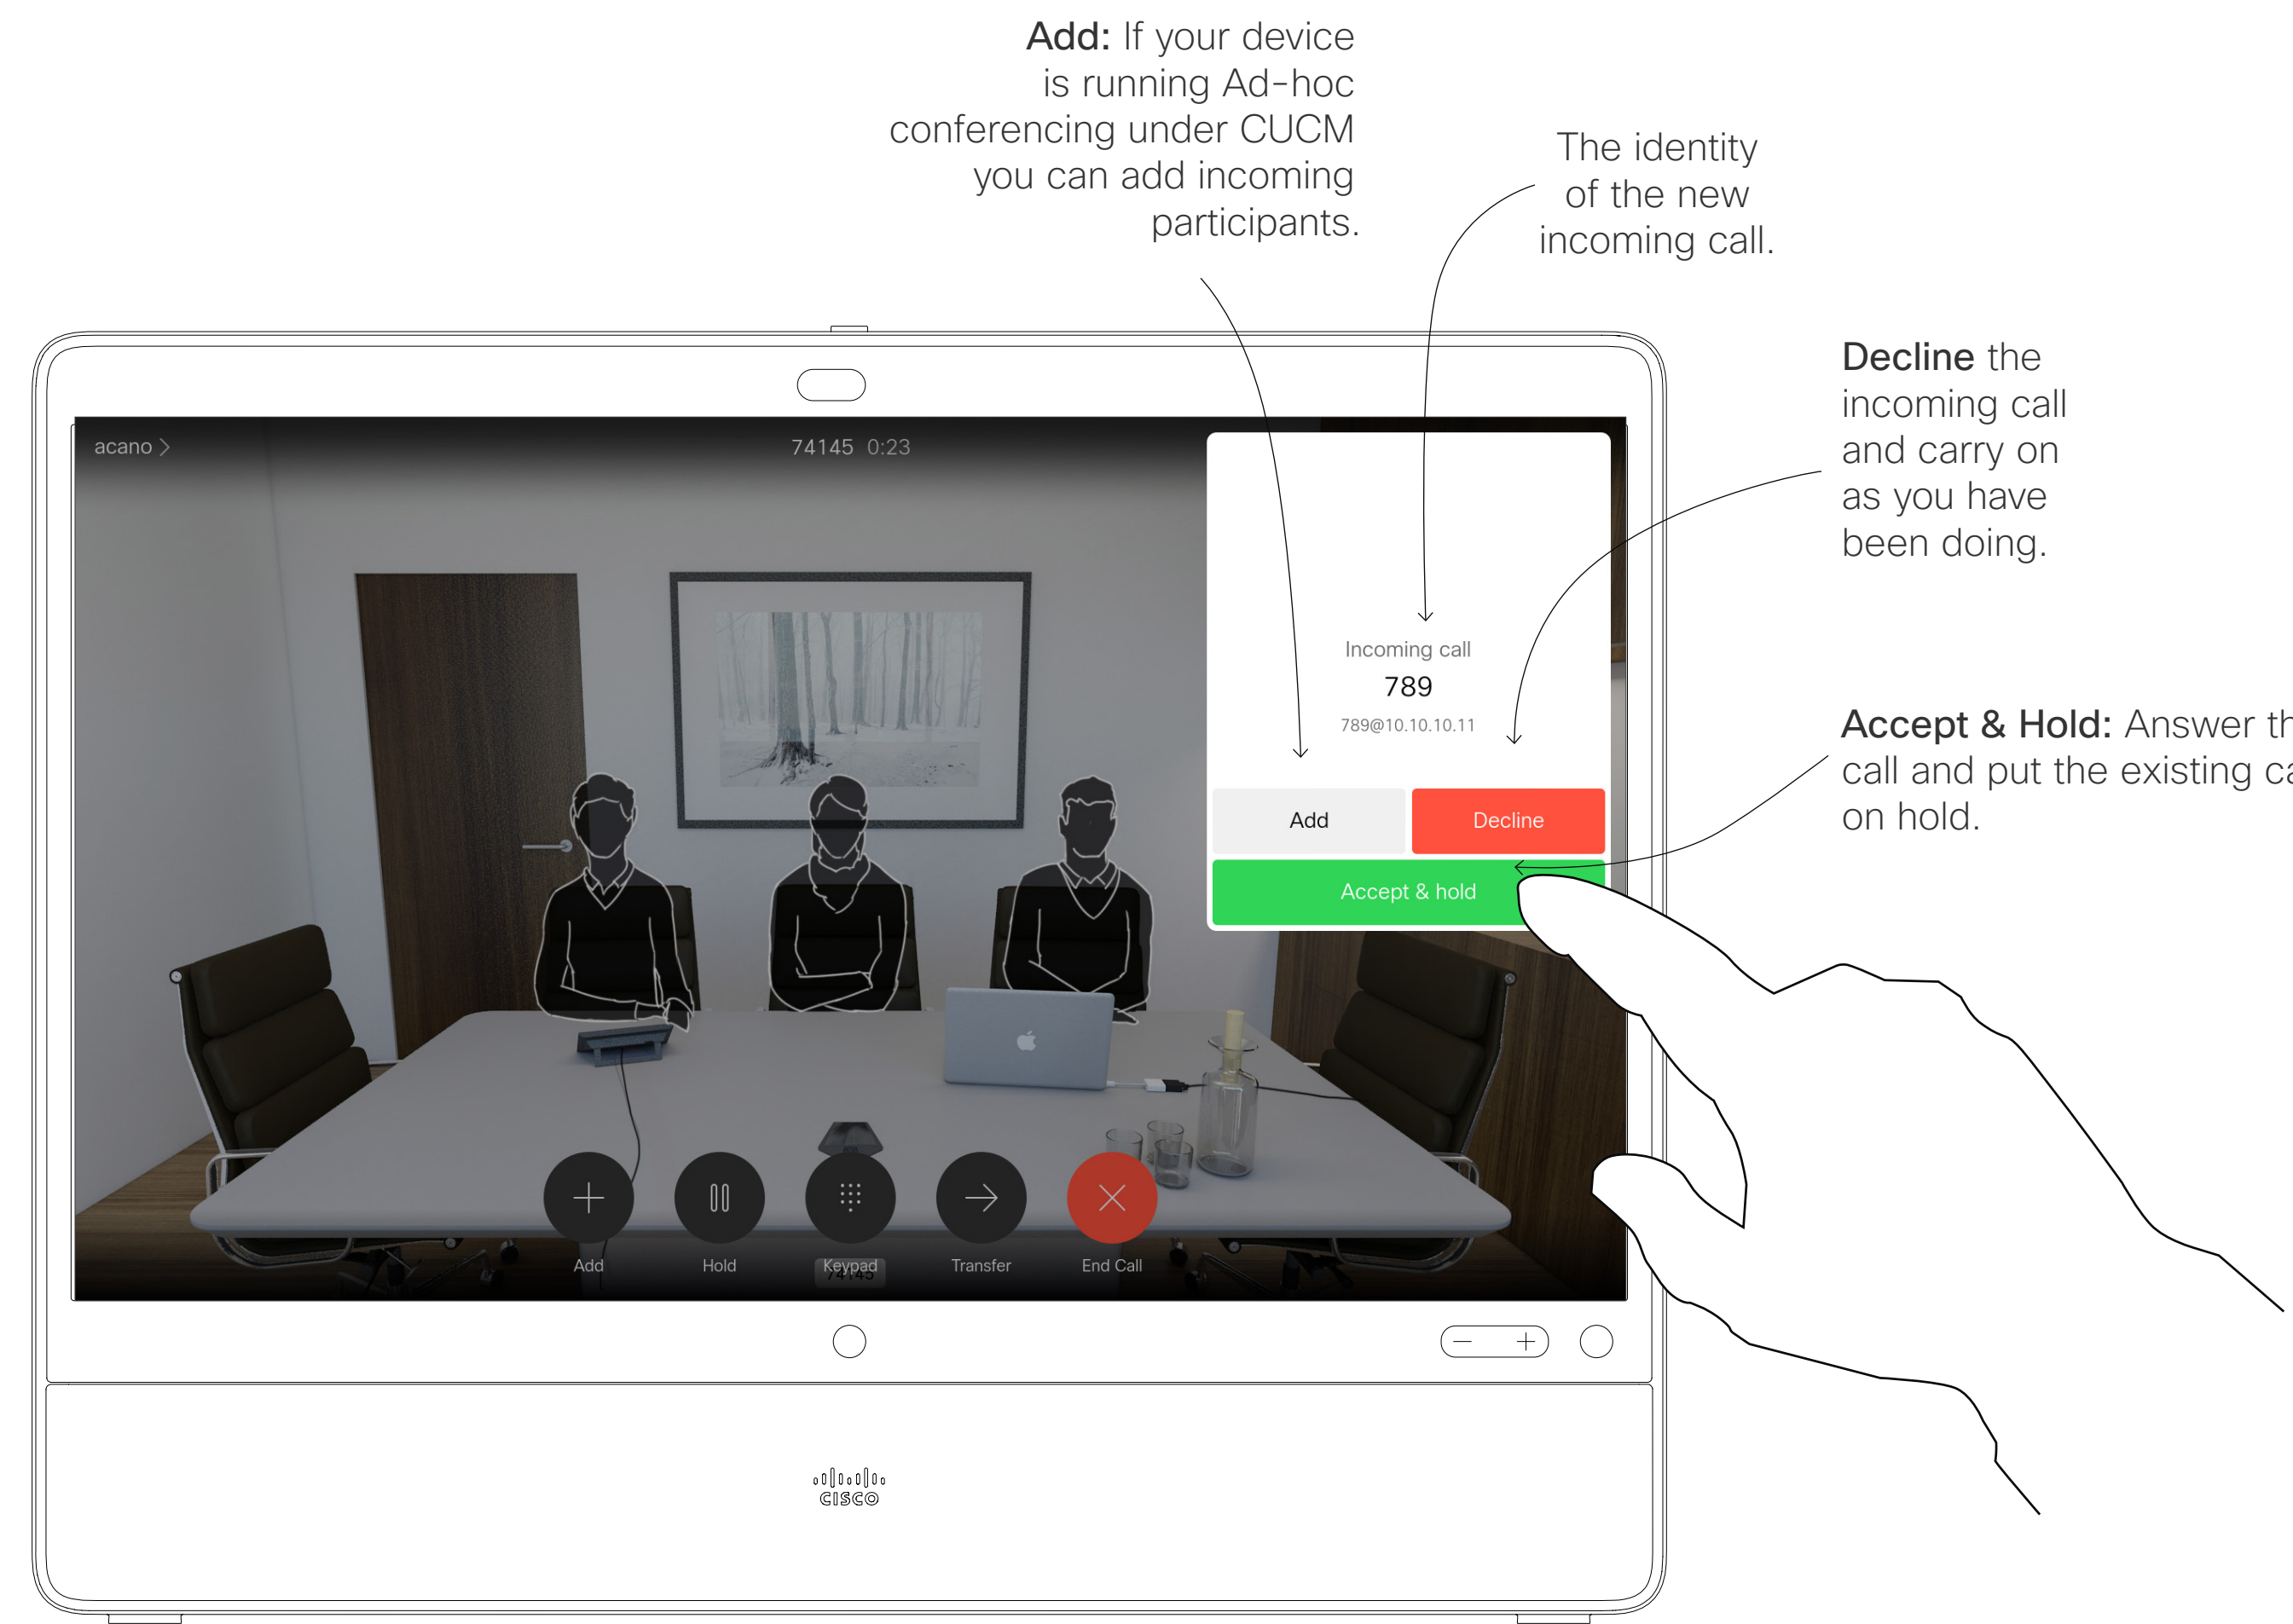

Disconnect Yourself From a Call

About Disconnecting Yourself

 Tapping **End** in a call disconnects you from a call. In a call with two parties only, this terminates the call.

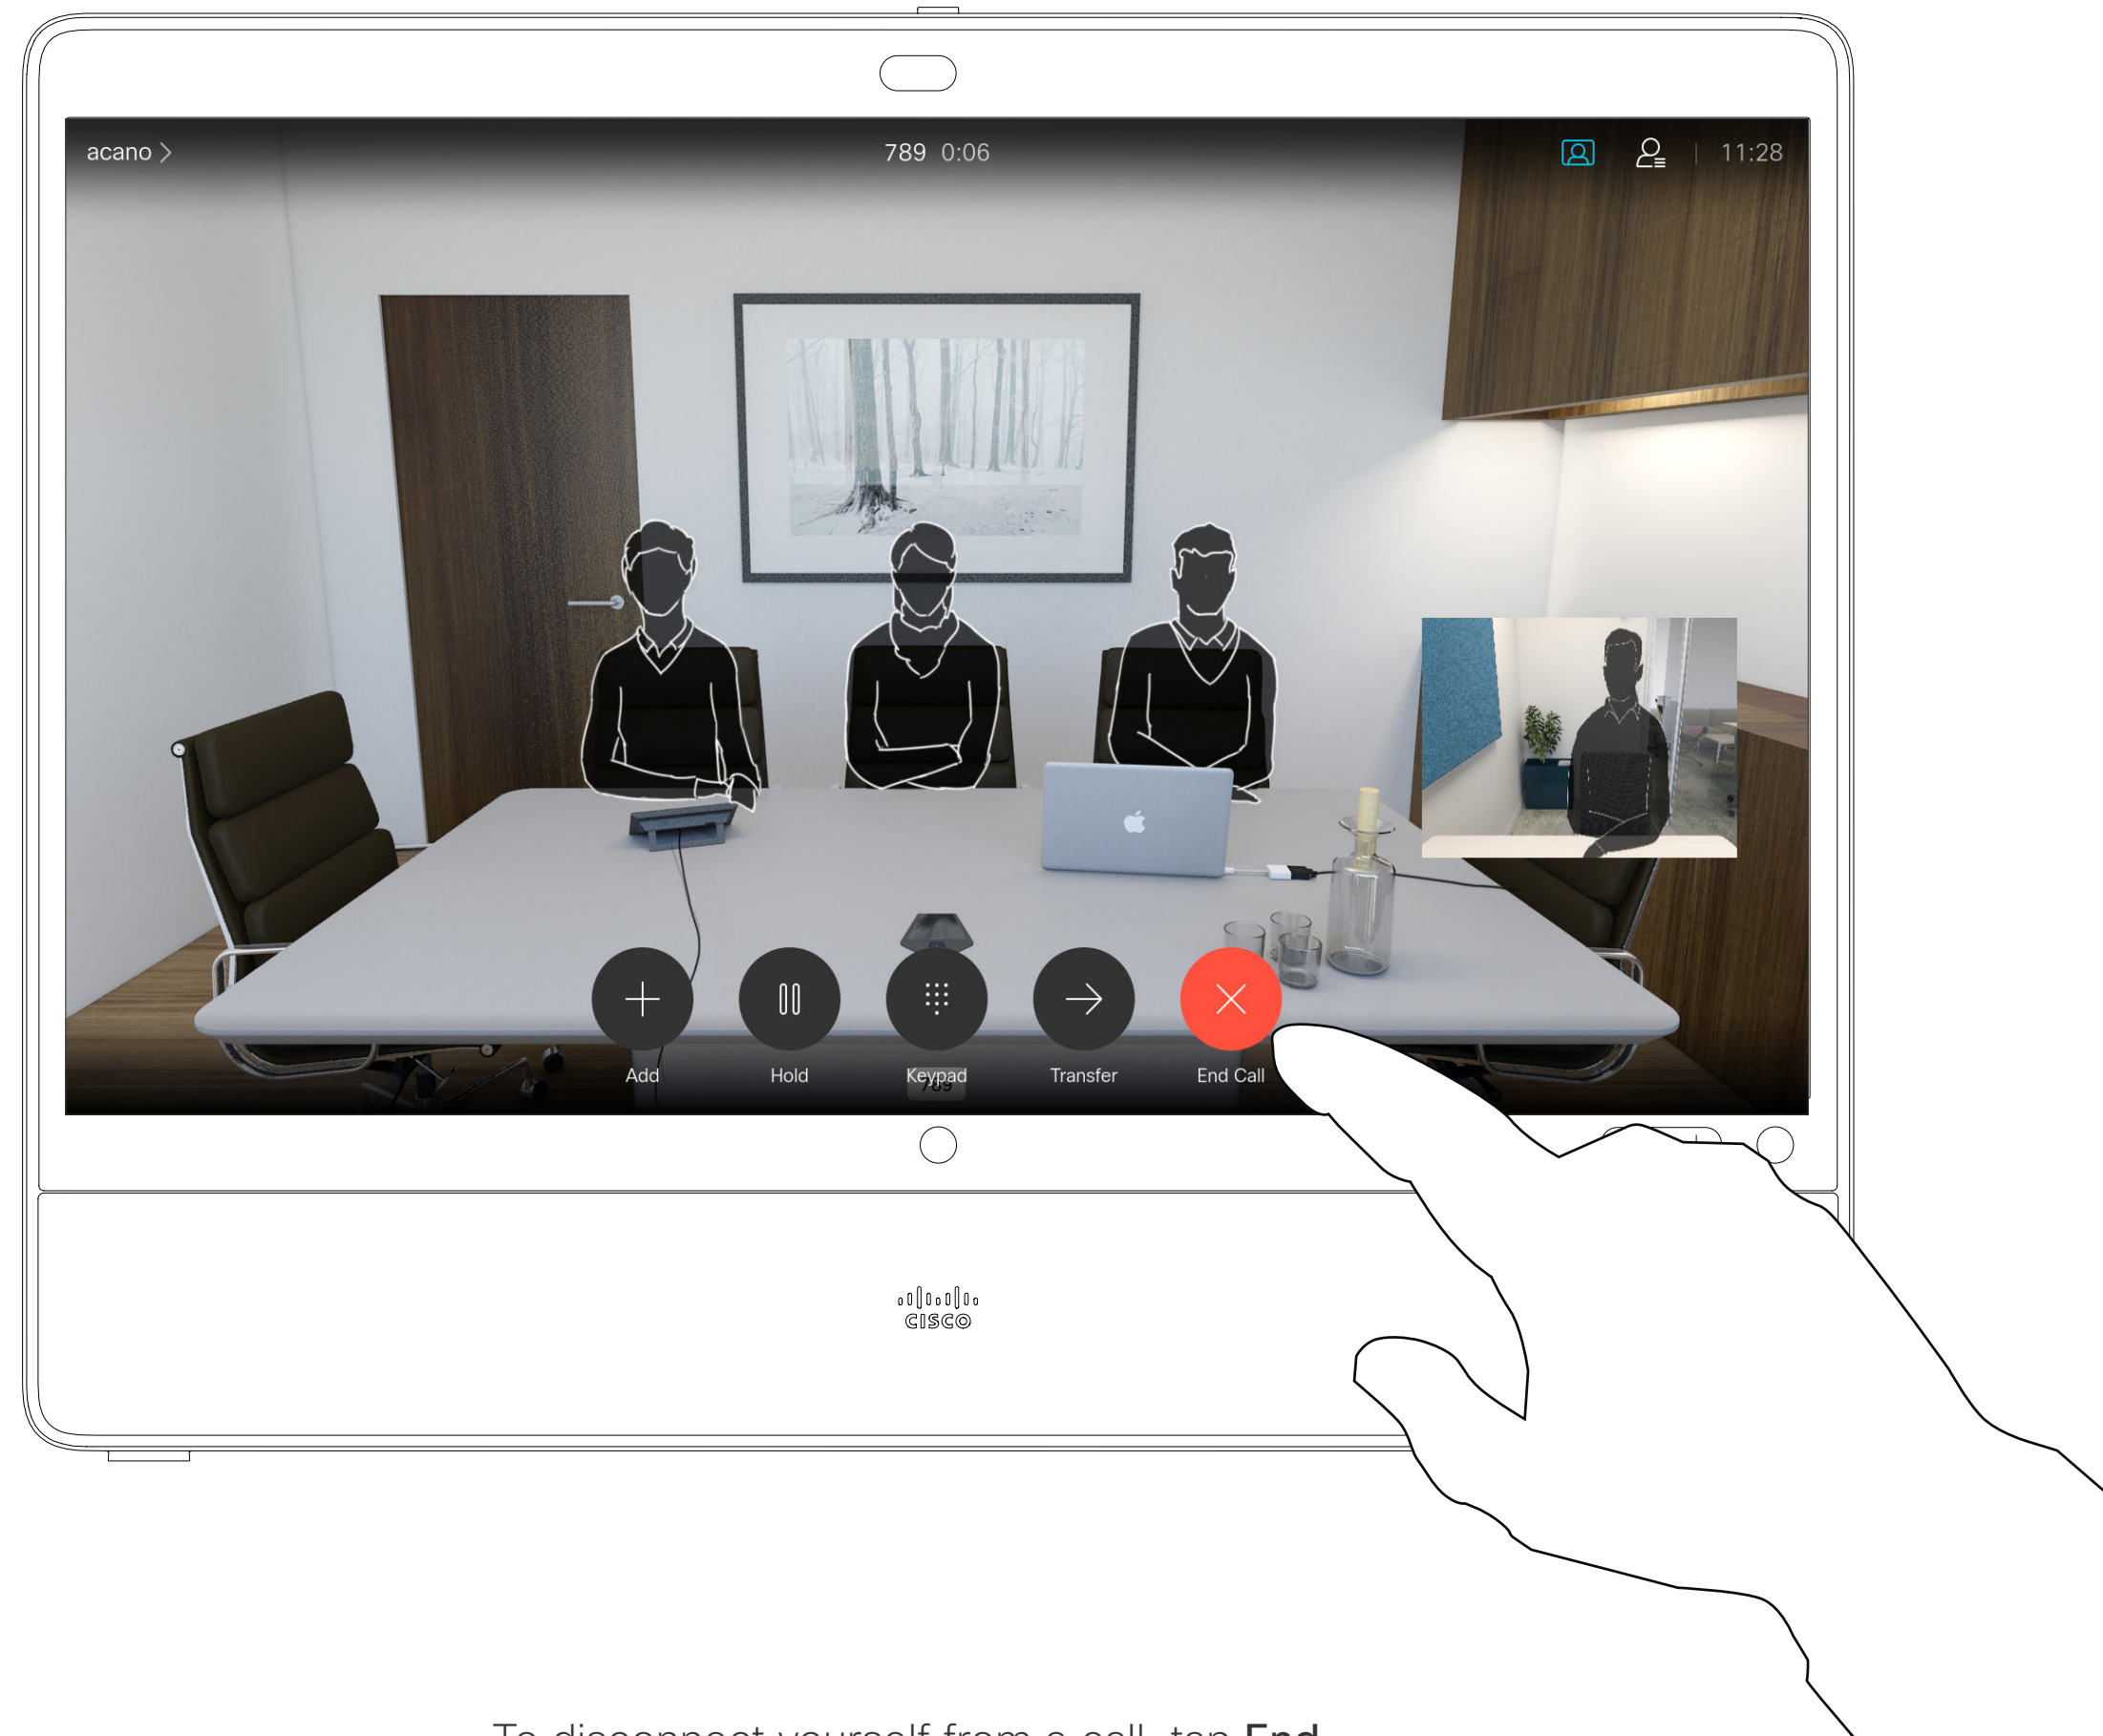


To disconnect yourself from a call, tap **End**.

Put Call on Hold and Resume a Call on Hold

About Putting on Hold



 In a call, tap **Hold**.

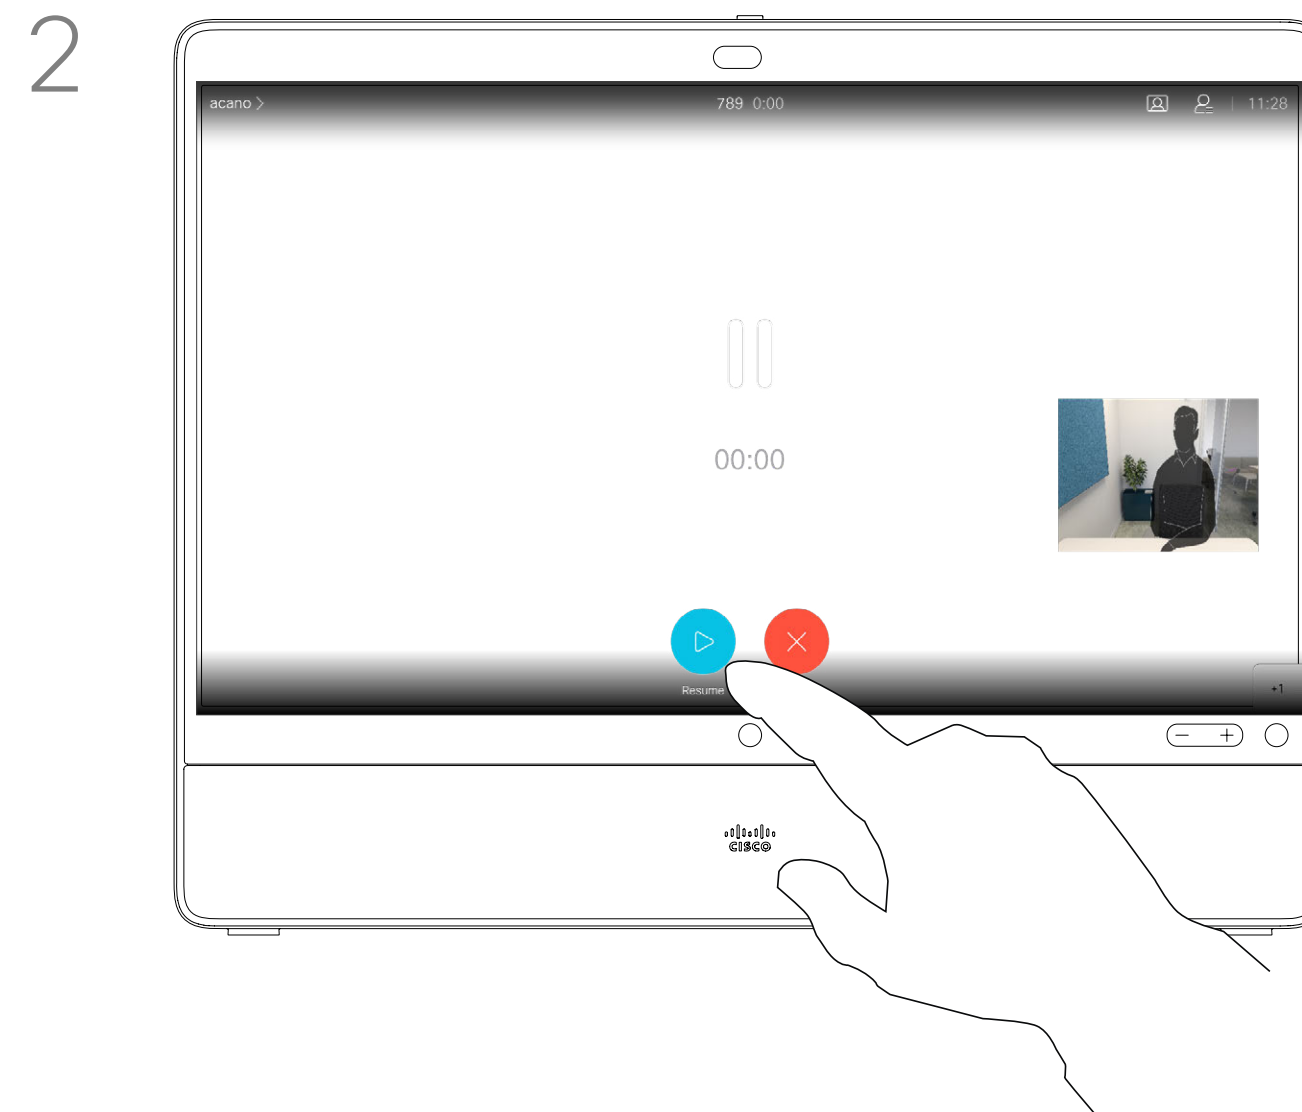

Tap **Resume** to go back to the one you were in call with (to undo your action).

Putting someone on hold is typically something you do as an initial step when transferring someone to another person. It can also be used when you need to consult a person, or as an alternative to muting when you want to also stop the video transmission.

Video Calls

 
Transfer an Ongoing Call

About Transfer


You may transfer an ongoing call to another person. Transfer is always consultative and you can talk to the person you are going to transfer a call to, before you actually transfer the call.




Tap the **Transfer** button. This puts the current call on hold.

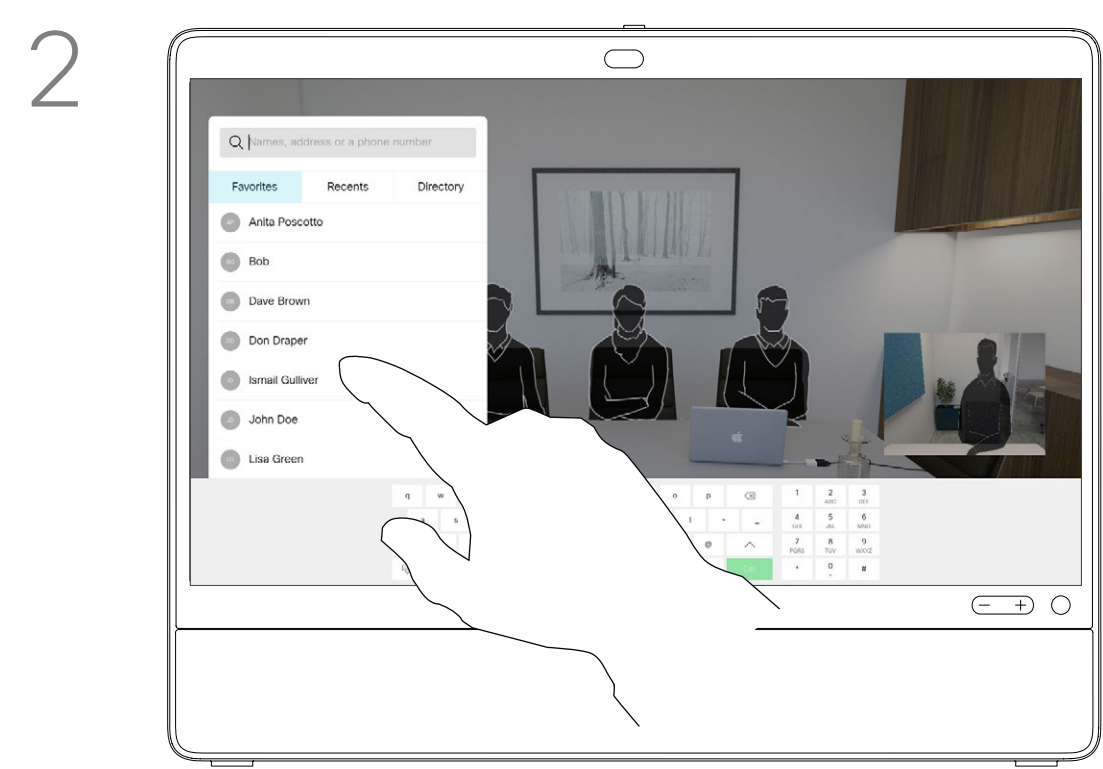

 Search for whom to call in the usual way.

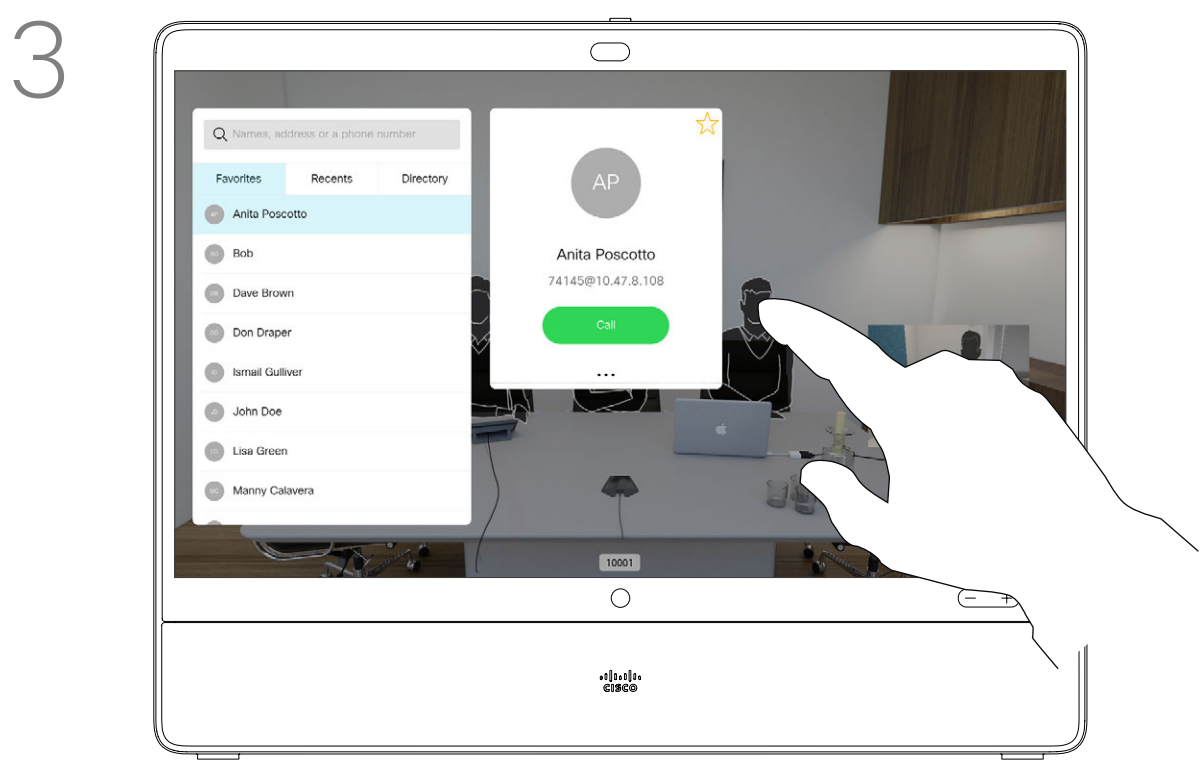

 
Tap the green **Call** button. Talk to the person to confirm that transfer is OK. The person to be transferred is still on hold.

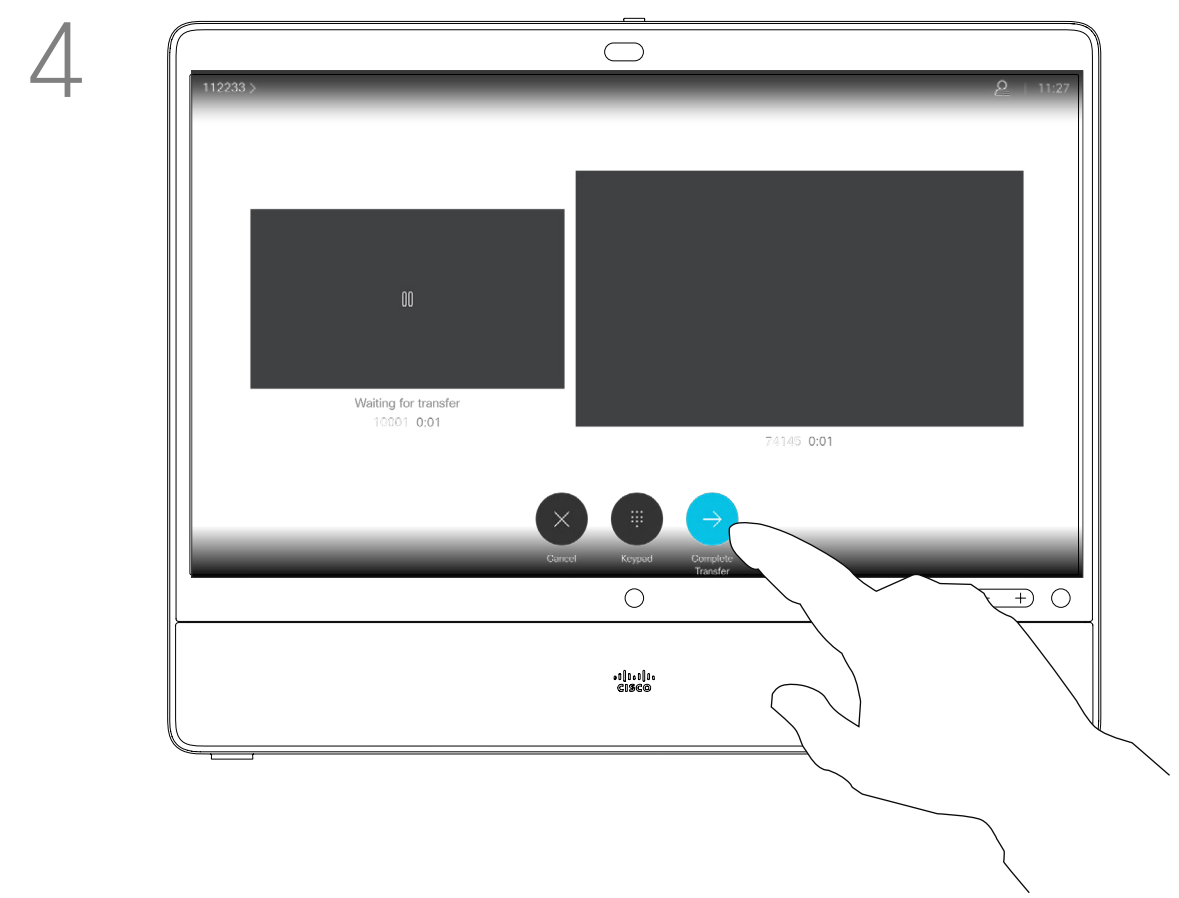


Tap **Complete Transfer**.

Change the Call Rate

 About Call Rate

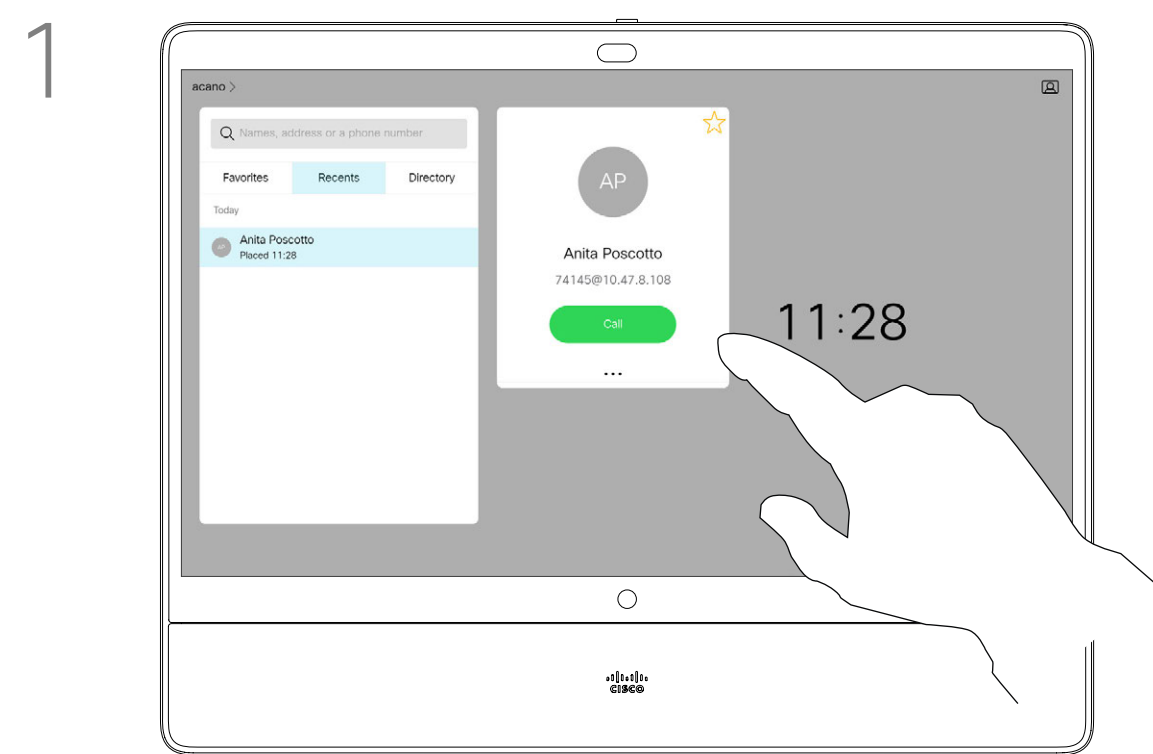

 Tap the **Call** button (not shown), then locate the entry whose call rate you want to alter (not shown). Tap this entry to produce the *Call* menu and then tap the **More (...)** icon below the green **Call** button, as shown.

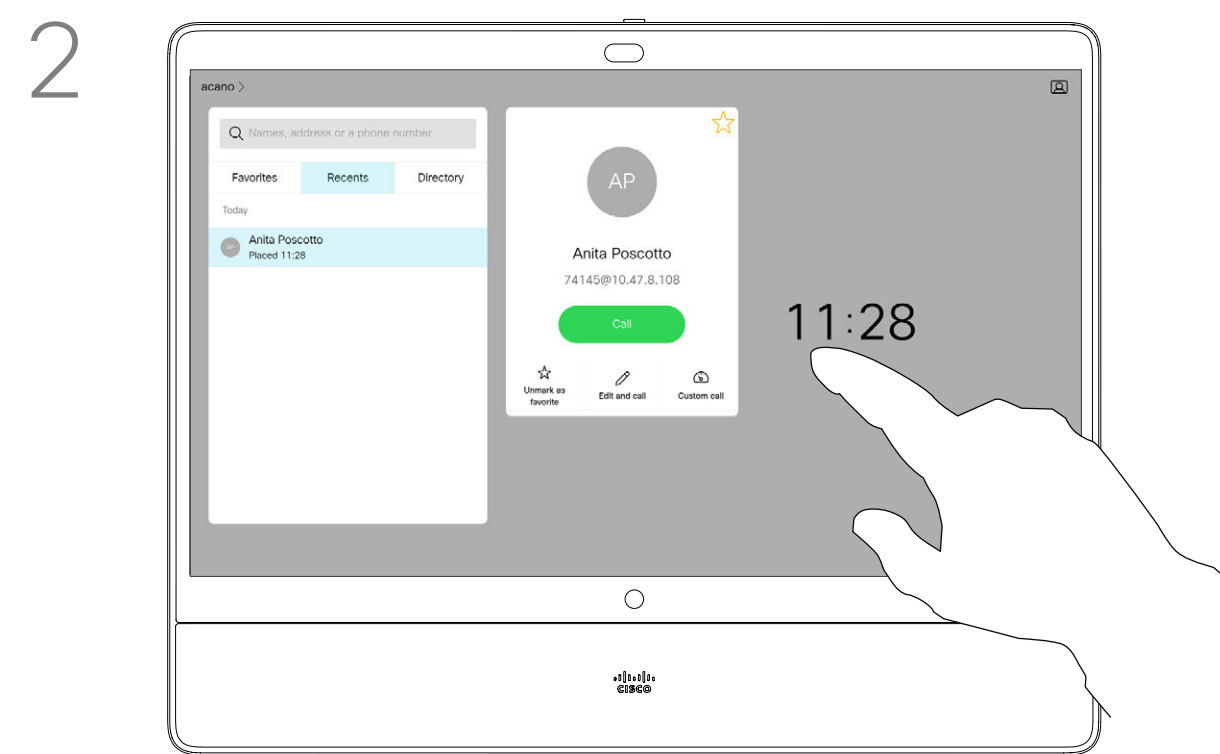

Tap **Custom call**.



Move the slider to the required setting.



Tap the green **Call** button to place the call.

Call rate is the term used to express the amount of bandwidth allocated to the call. It is measured in kbps (kilobits per second).

The higher the call rate is, the better the quality is, but on the expense of higher bandwidth consumption.

 
The device comes with a default call rate. This is normally set by your video support team. Under normal conditions the call rate is adjusted automatically by the device, whenever needed. This is done to avoid choking the video call when you try to call someone at a higher rate than their device and connection support.

If, for some reason, the automatic call rate setting fails, you may also do this manually as a last resort.


Call rate can't be changed during a call, but you may change it just before you place a call, as shown at left.

Activate Do Not Disturb

About Do Not Disturb

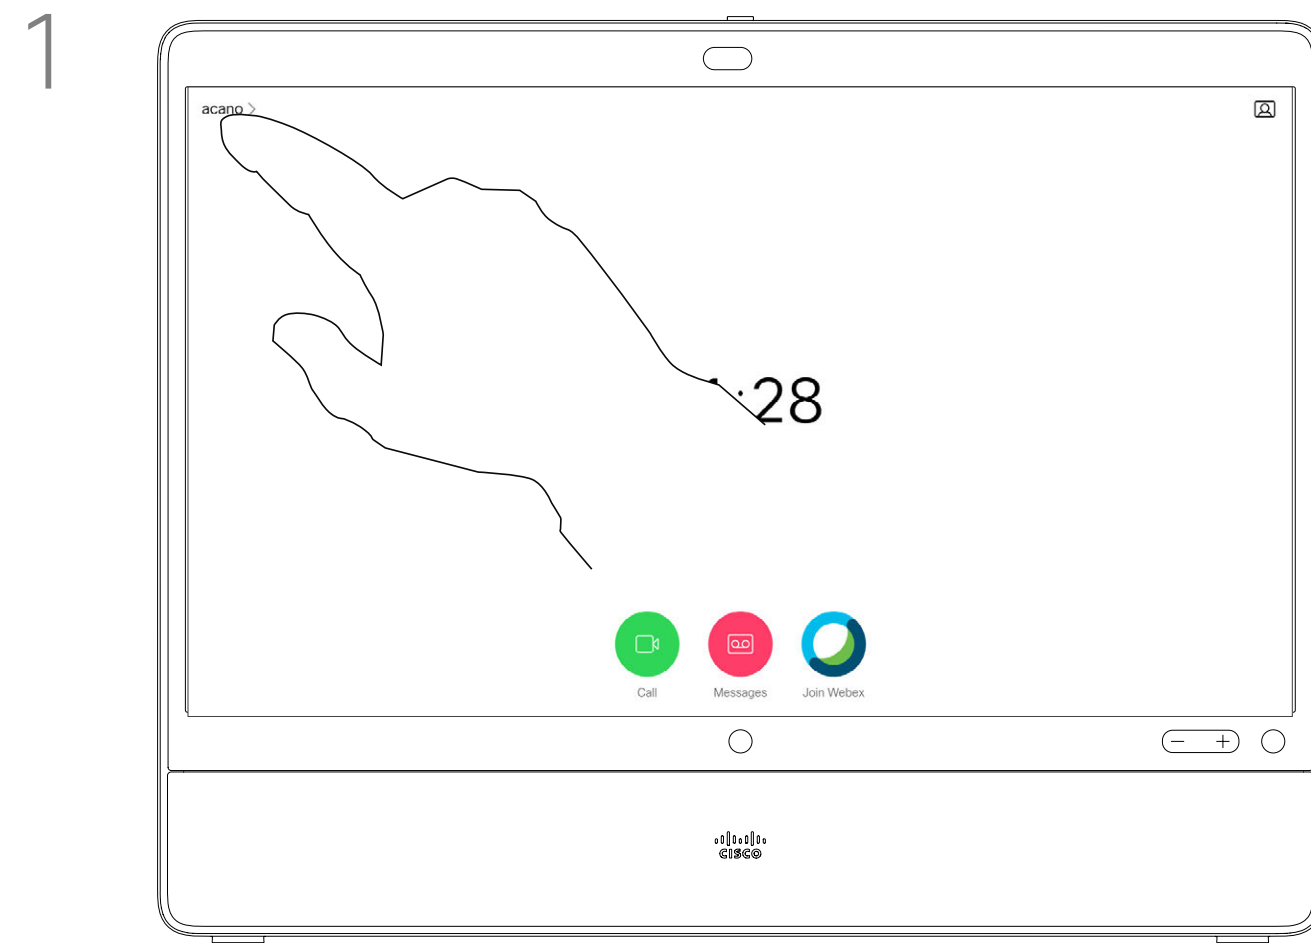

Tap in the upper left corner, as shown.

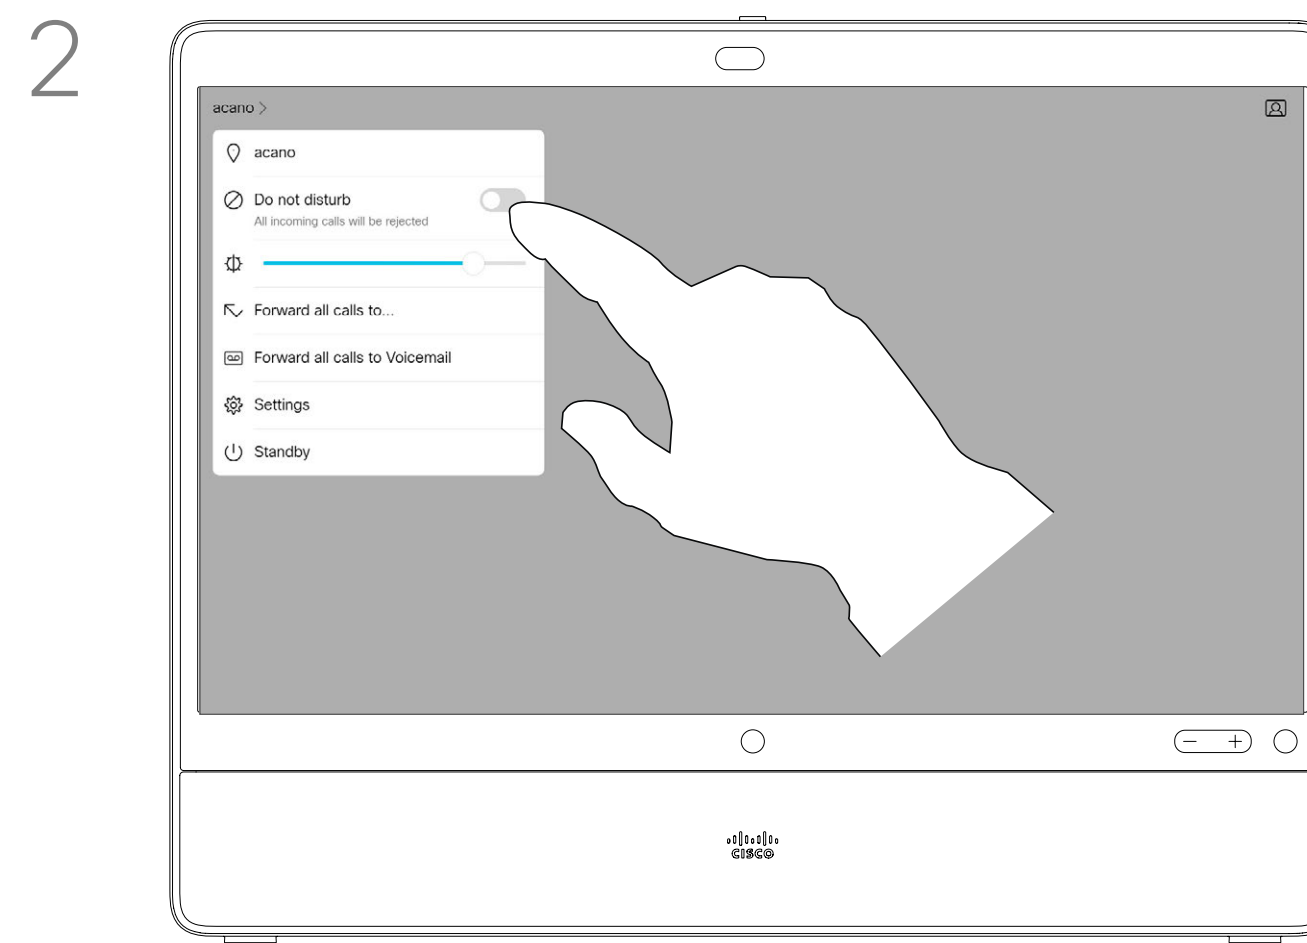 

Tap **Do not disturb** to activate the feature. Tap again to deactivate.

 
Your device can be set to not respond to incoming calls. You can still call others.

Your video support team may have set a time-out on this feature, after which the device responds to incoming calls as usual. Default time-out setting is 60 minutes.


Note that access to this feature may have been removed by your video support team.

Automated Forwarding of All Calls

About Forwarding Calls

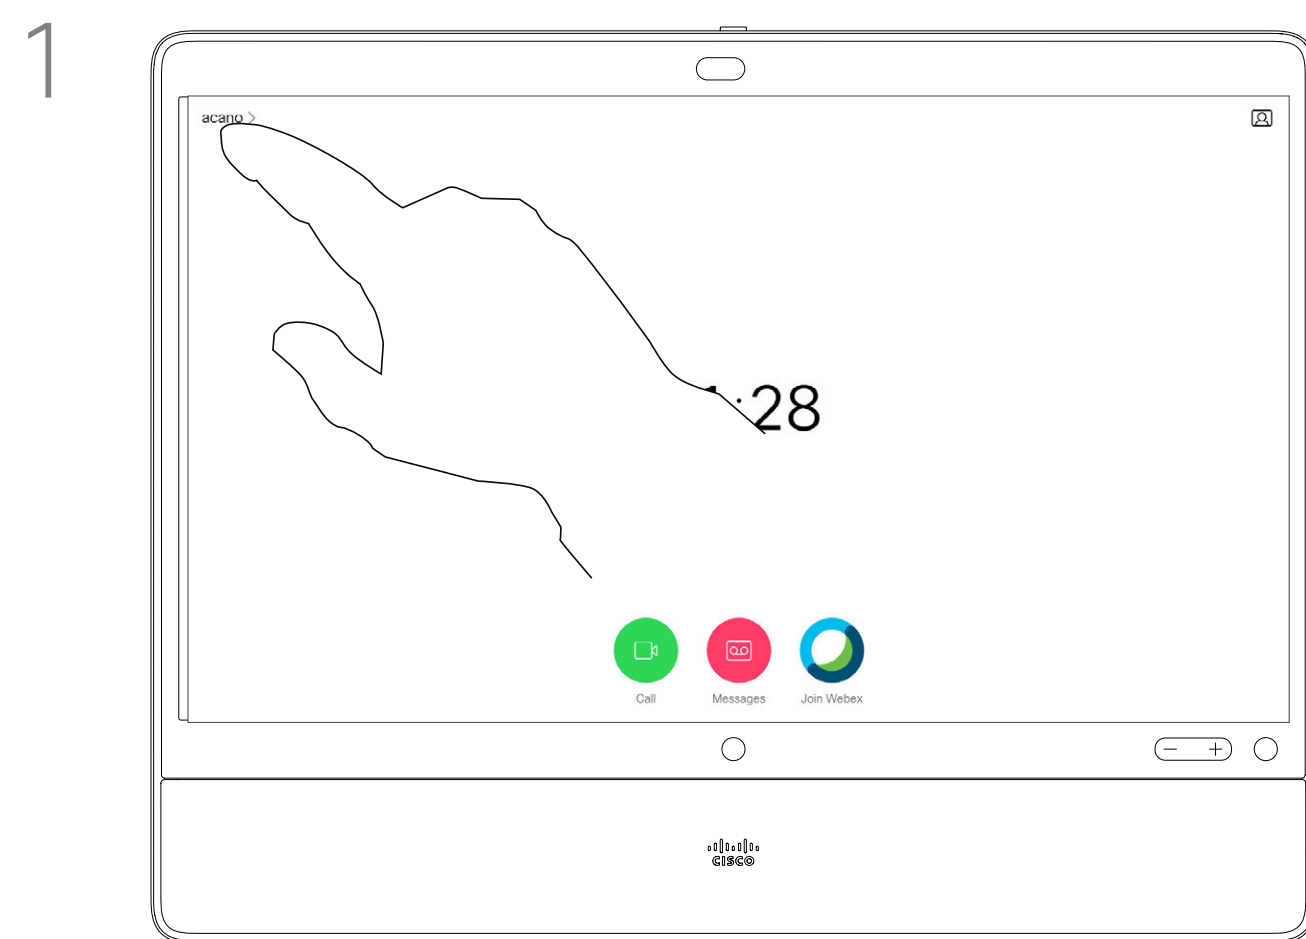

Tap in the upper left corner, as shown.

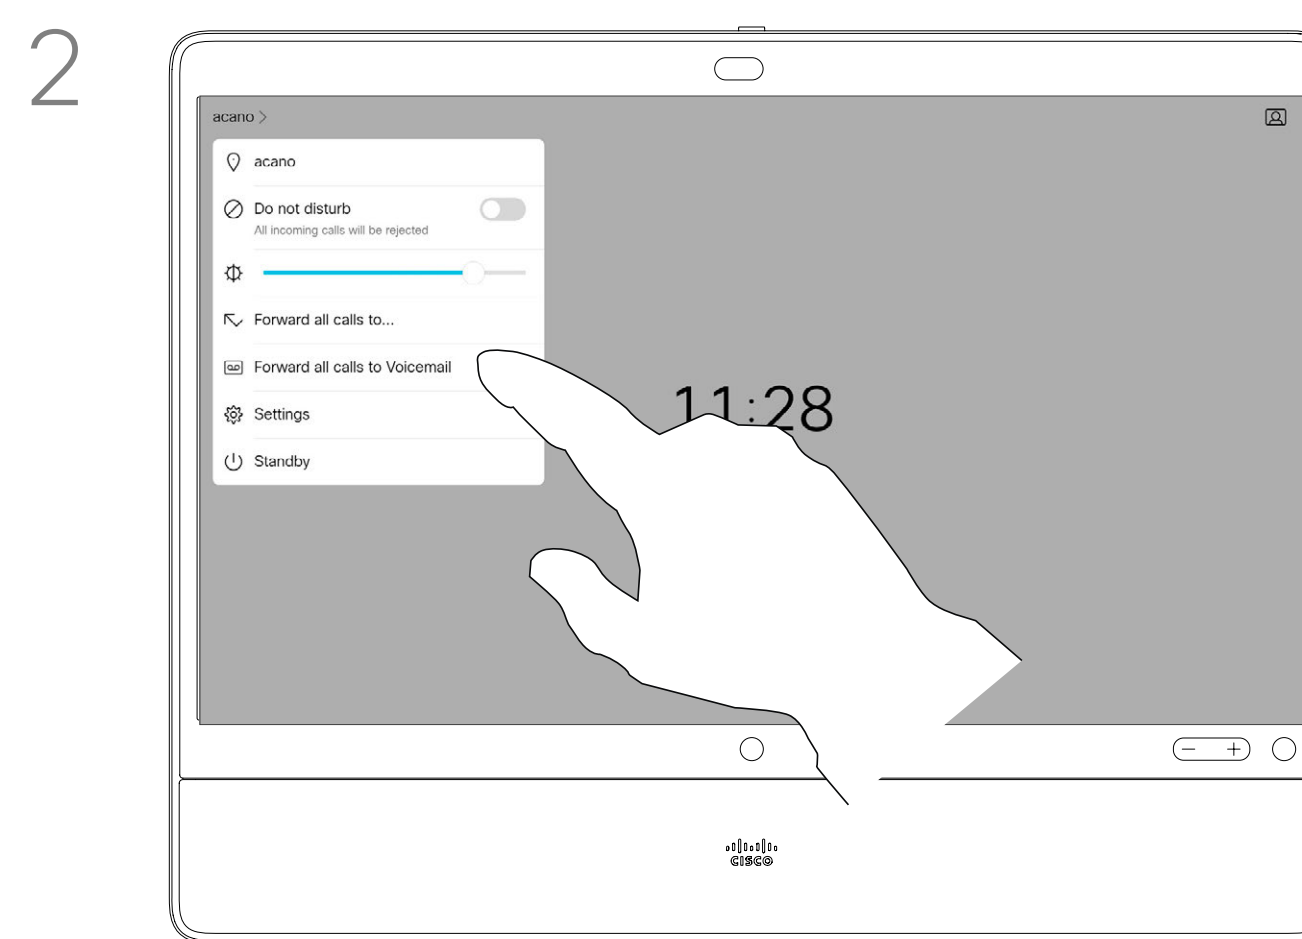 

You may now choose to forward all calls to either a receiver specified by you, or to your voicemail.

Your video support team may have activated the option of forwarding all calls received. You may then choose between voicemail and a receiver appointed by you.

If you tap **Forward all calls**, the familiar **Call** menu appears letting you specify whom to receive your calls.

 
Note that access to this feature may have been removed by your video support team.

View Keypad While in a Call

Using Keypad in a Call

In a call you may get prompted to submit numbers to be able to reach an extension or otherwise gain entrance to something (for example by means of a PIN-code).


To enter the numbers, you need to invoke the keypad on the touch screen.

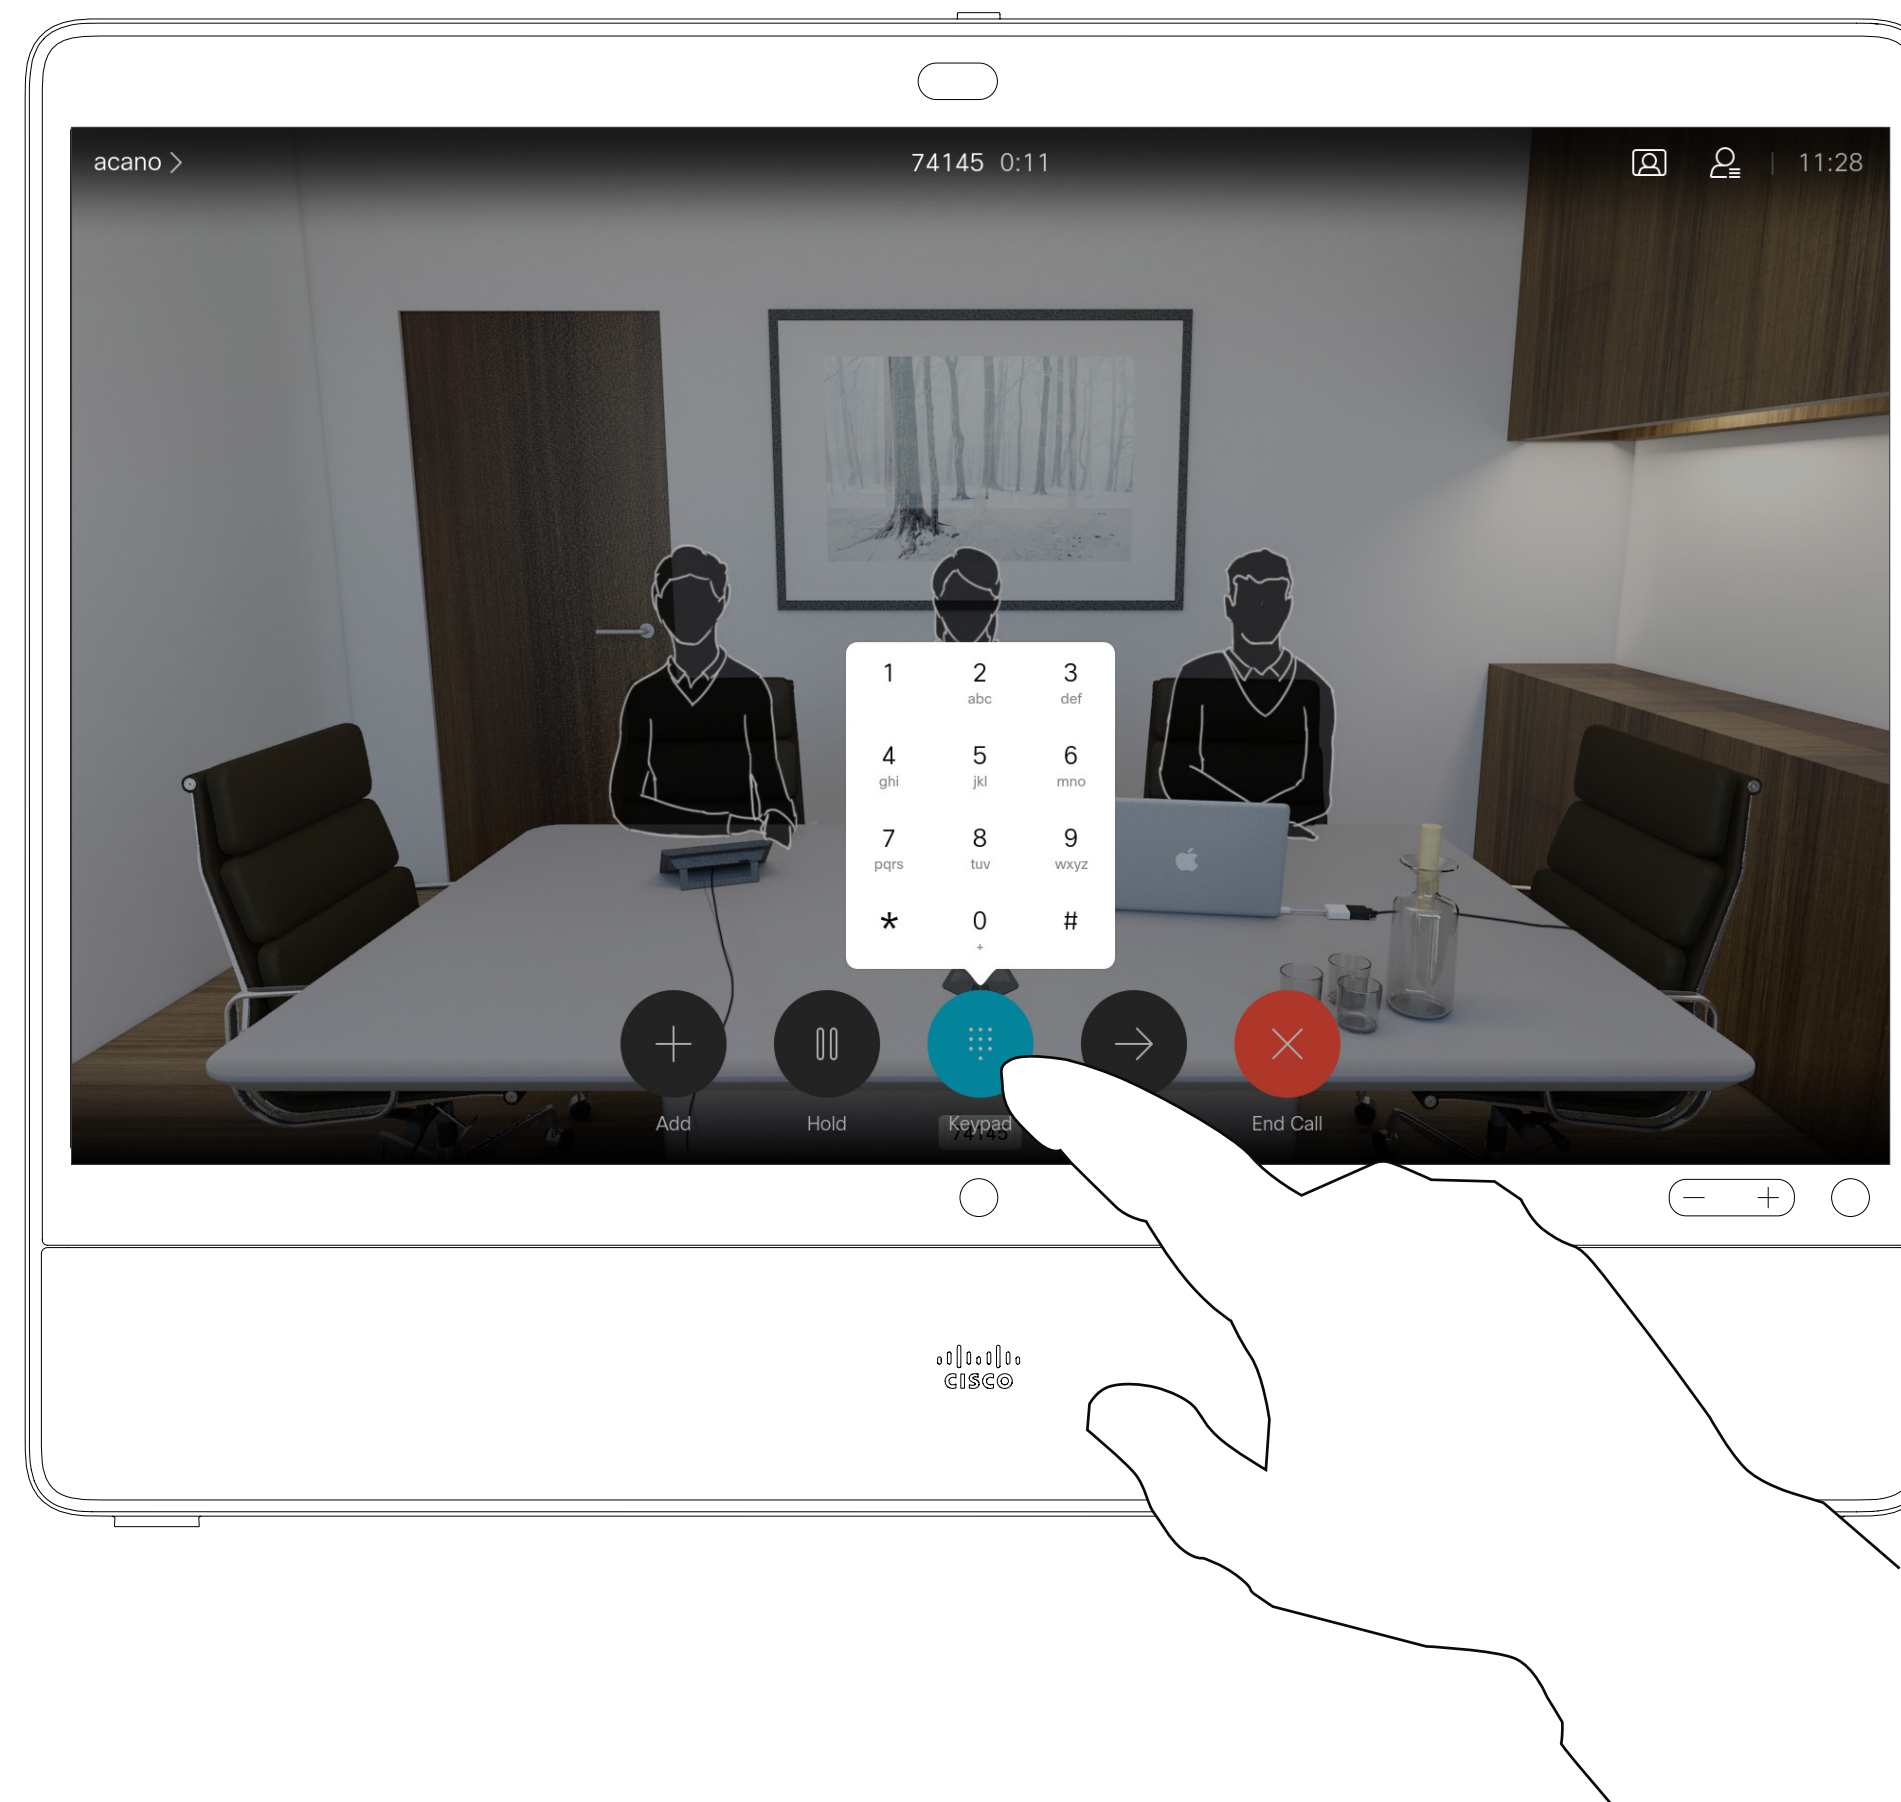


In a call, tap **Touch Tones** to invoke the dial pad.

Add Additional Participants to an Existing Call

 
About Video Conferences

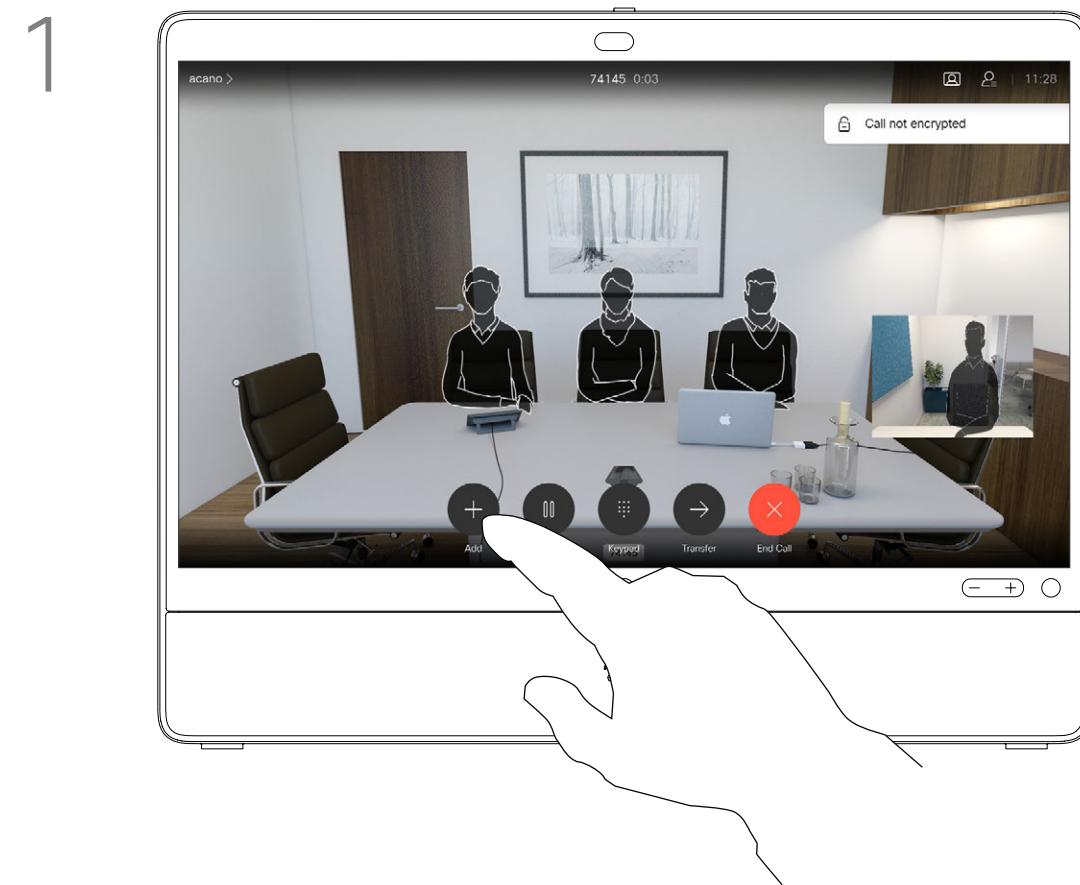

In a call tap **Add**.

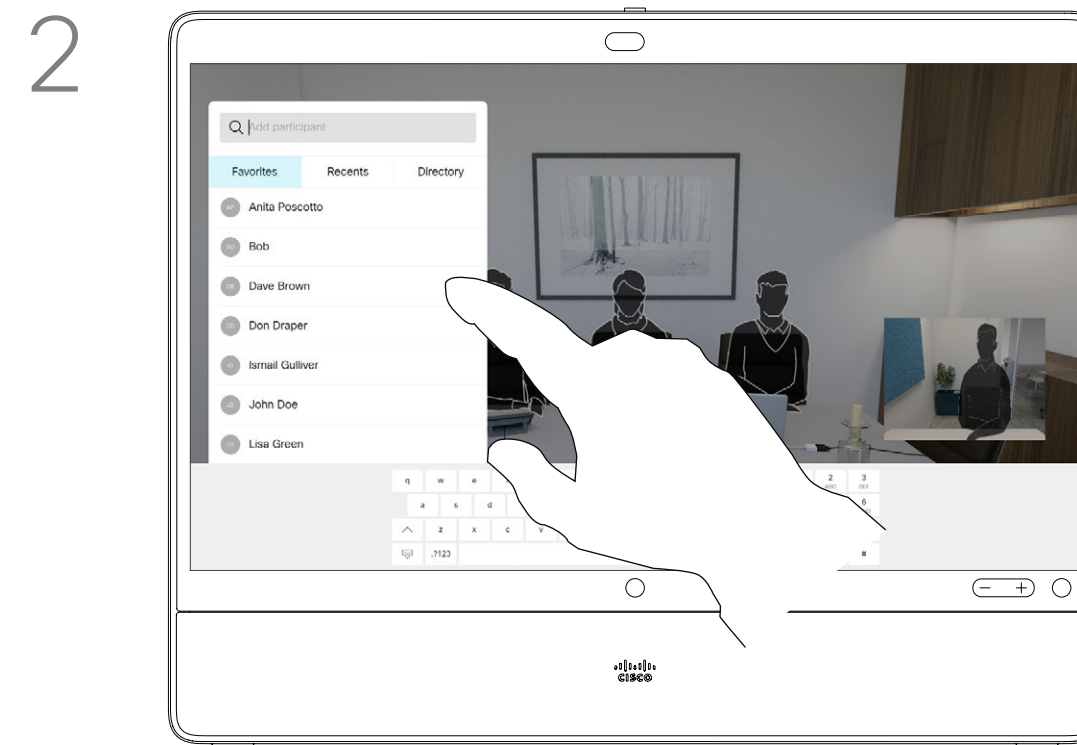 

Locate whom to call, in the usual way.

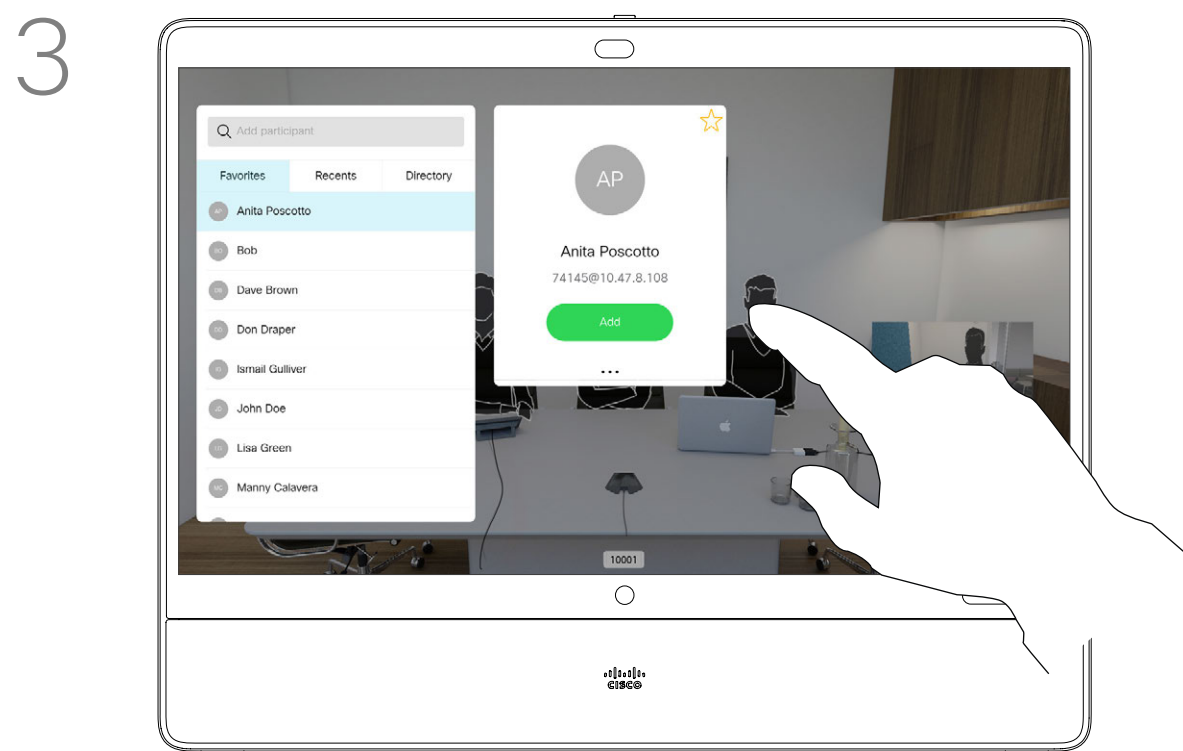 

Place the call, in the usual way. You may alter the Call settings of that call before you place it—see side bar for more.



This new call is added to the existing and you have now established a conference.

You may repeat this procedure to the extent permitted by your video infrastructure.

Your network may be equipped with the capability to initiate a video conference with several participants.

The maximum number of participants supported by your device depends on device configuration and the video infrastructure. If in doubt, contact your video support team.

 
If you want to initiate a video conference, you must call each participant one by one.

If you are the one who initiated the conference you can terminate the entire conference. The other participants can only disconnect themselves from the conference.


Disconnect a Participant From a Conference

About Video Conferences


The ability to conduct a video conference from your Desk Pro is an optional feature that may, or may not, be available for your device.

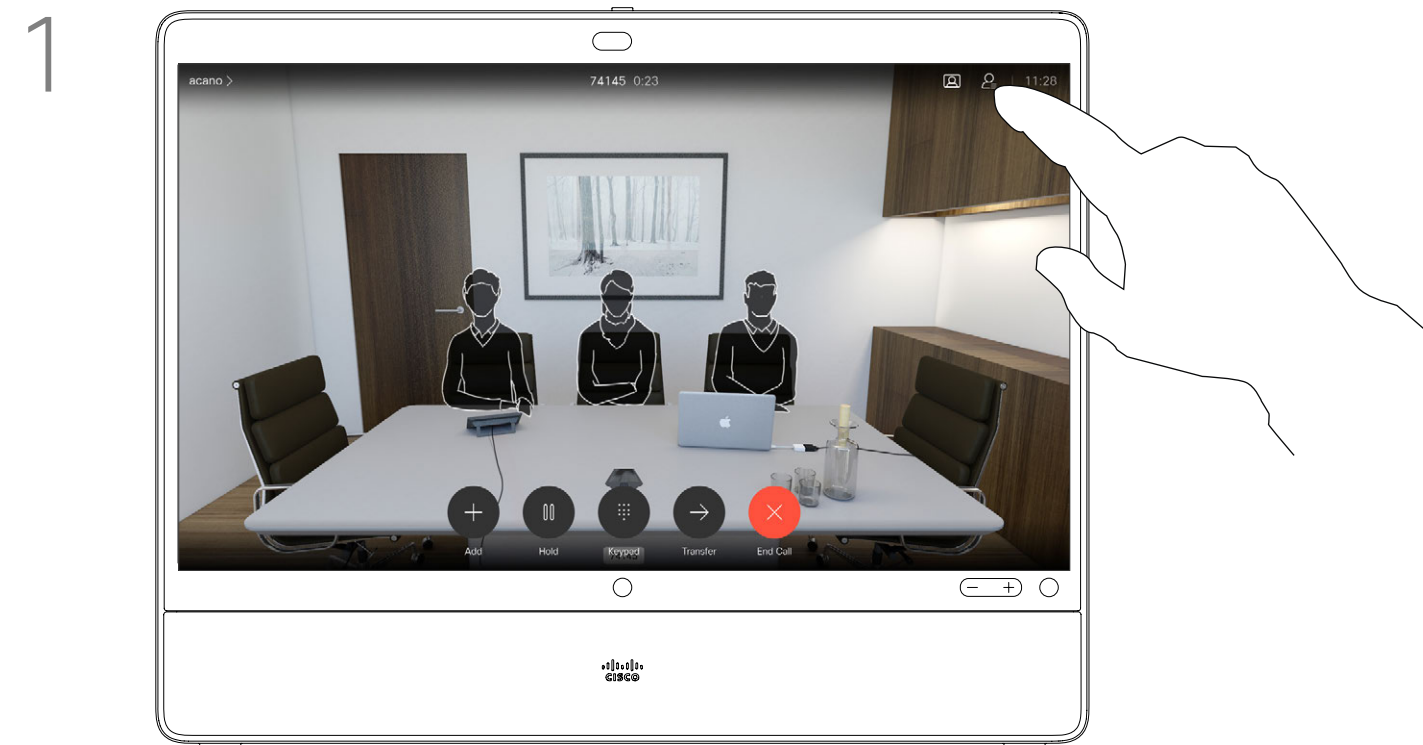

 In a call, tap the **Participants** icon in the upper right corner, as shown, to invoke the list of participants.

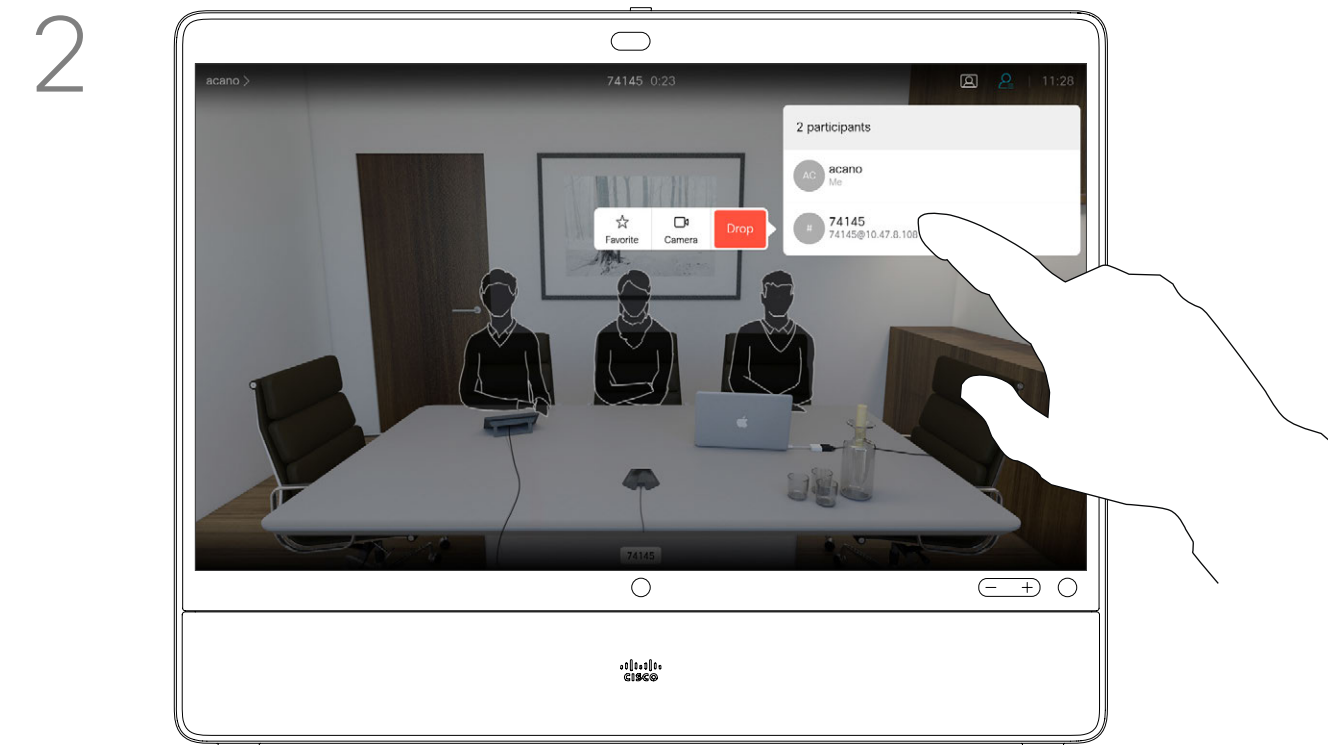

 Tap the participant to be dropped from the conference.

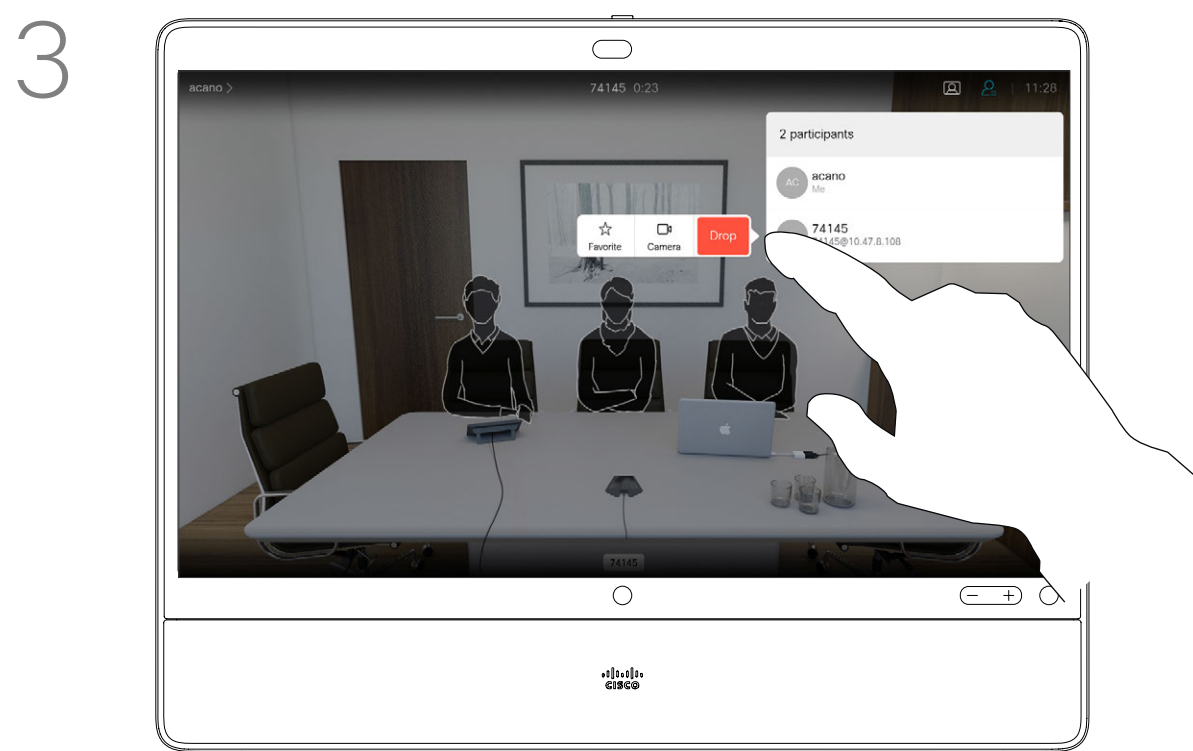

Tap Drop.

Intelligent Proximity

 


Cisco Proximity Ultrasound Signal

Cisco devices emit ultrasound as part of the Proximity feature. Most people are exposed to ultrasound more or less daily in many environments, including industry, commercial applications, and home appliances.

Even if airborne ultrasound may cause subjective effects for some individuals, it is very unlikely that any effects occur for sound pressure levels below 75dB. Guidelines for ultrasound exposure limits vary heavily between countries, but 75dB is the lowest limit presently found for the frequency band around 20kHz, which is where the Cisco proximity signal is emitted.

A good reference for this information is Health Canada's guidelines, http://www.hc-sc.gc.ca/ewh-semt/pubs/radiation/safety-code_24-securite/index-eng.php#a2.2.2.

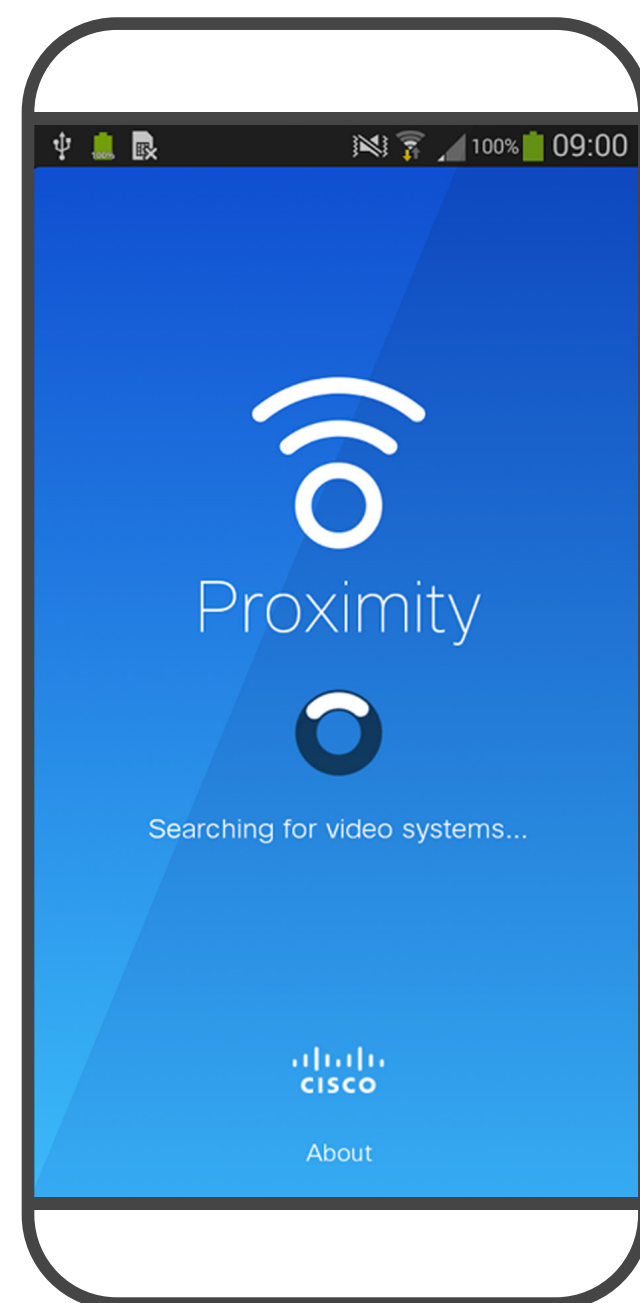

These guidelines state that sound pressure levels lower than 120dB have not been demonstrated to cause hearing loss, neither permanently nor temporarily.

For Cisco devices for personal use the ultrasound sound pressure level is below 70dB at a distance of 20 cm or more from the loudspeaker.

In most practical cases the level at the ear of the user will be much lower than these max levels, due to loudspeaker directivity, distance attenuation, and high degree of high frequency absorption in typical rooms. The levels will range from what for audible sound would be typical background / ambient noise levels in meeting spaces up to so-called conversational levels of normal speech.

It is therefore deemed safe for humans to be continuously subjected to the proximity signal. Most people will not be aware of the presence of the signal, and suffer no effects from it. A few individuals with especially acute high frequency hearing can, however, be able to hear it, this is most likely to happen directly in front of and close to the loudspeaker.

It is obvious that animals like dogs will hear the proximity signal, since their frequency range of hearing is so much wider.

However, the effect of sound is also level dependent, and the level range of a dog's hearing is not significantly different from that of a human. The hearing threshold of dogs at 20kHz can be as low as 0-10dB, similar to the threshold of a human ear in its most sensitive frequency range.

Cisco has not done testing or qualification of the possible effects the signal can have on dogs. Due to the limited levels it is believed that while the signal is clearly audible, it is not bothersome to dogs.

A dog in an office or meeting room will be subject to ultrasound at levels comparable to normal background noise, or at most conversational levels. There has been no reports of animals

being bothered by the signals in the years we have had this feature in our products.

However, the question of ultrasound effect on dogs is fair, since dog repeller devices using ultrasound do exist. These devices typically claim to use discomforting, but not harmful ultrasound. Cisco does not have insight into dog repeller design, but scanning the specifications of such devices typically reveals that the exposure levels typically are 100dB and upwards.

For solutions using Cisco video codecs with 3rd party loudspeaker systems Cisco is not able to control the ultrasound sound pressure level. In most cases the necessary loudspeaker sensitivity and frequency response will result in levels below the 75dB limit. However, if excessive external amplification is applied, or the loudspeaker system has an emphasized high-frequency response, levels in excess of the limit can be produced.

About Proximity

The Intelligent Proximity feature allows you to share content from a computer wirelessly on the device. Smart phones and tablets are also able to view the shared content directly on their own screens.

You can even use your own smart phone, tablets, PC or MAC to control calls on the device.

Observe the following:

You can download the Cisco Intelligent Proximity app from App Store or Google Play (free of charge).

Windows or OS X users, go to <https://proximity.cisco.com/>.

Your video support team may have activated none of the features, all of them, or just a subset of them.

Intelligent Proximity makes use of ultrasound when connecting users (see more at left). Do not block the microphone of your computer, smart phone, or tablet.

Intelligent Proximity has been designed not to work outside the meeting room when doors to the room are kept closed. You need to be in close proximity of the video device to use the feature.

When privacy dictates, always keep the meeting room entrance doors closed to avoid possible eavesdropping from adjacent rooms.



 
Content Sharing




Content Sharing

Share Content In a Call

About Content Sharing

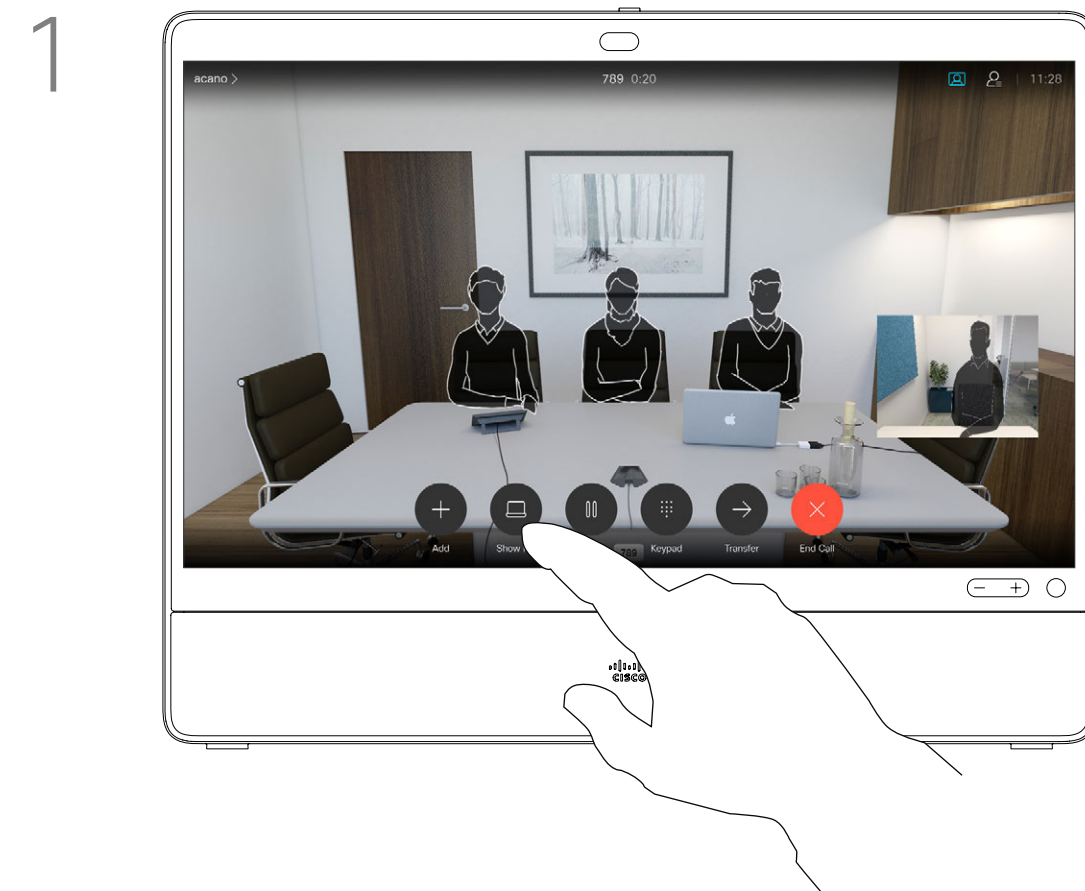

 In a call, connect your source and make sure it is switched on. Tap **Sharing options** and **Preview** to display the screen of your PC locally on your Desk Pro. What you see on the screen when you do this, is not shown to the other participants.

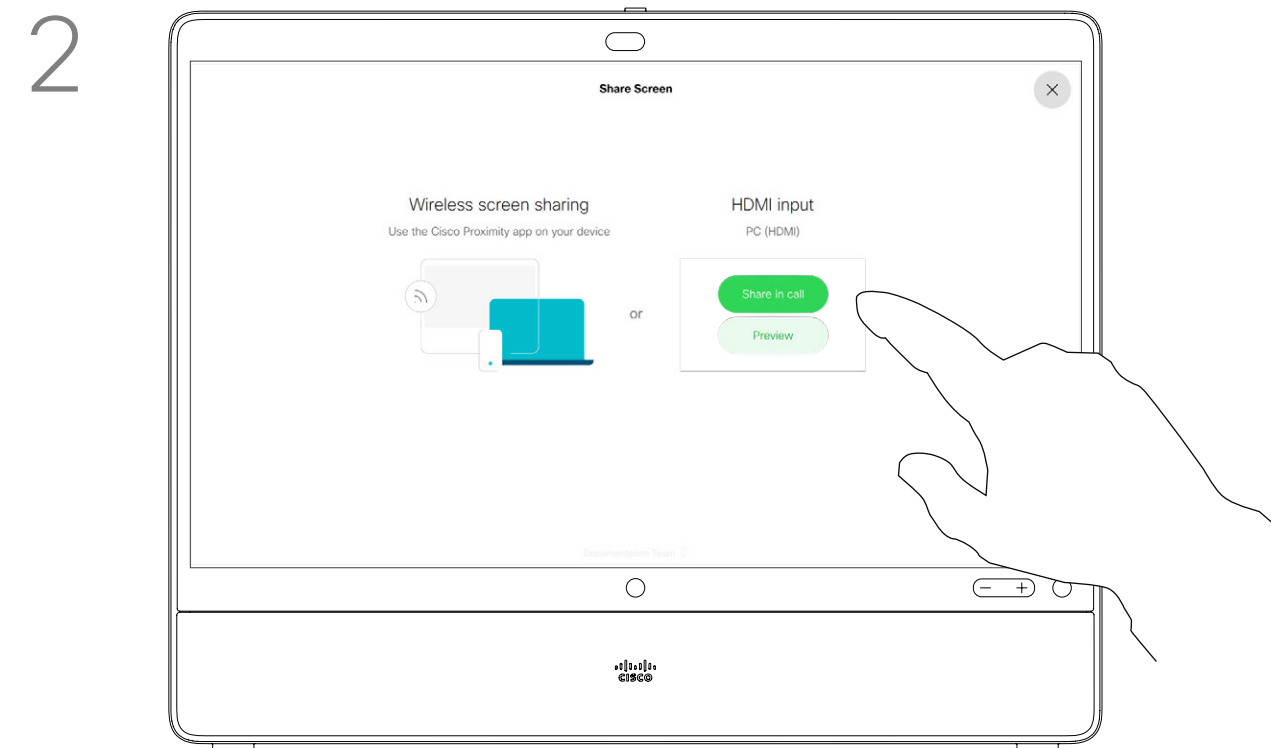


If you don't want to share your PC screen with the others tap **Sharing options** and **Stop preview** to return to the previous state. Otherwise, tap **Share in call**, as shown to proceed to sharing content.

Your device supports the ability to show presentations in a video call or video conference.

Note that you may change the layout of the screen during presentations, see the next page for more on this.



 
The content of your PC screen is now shared with the other participants.

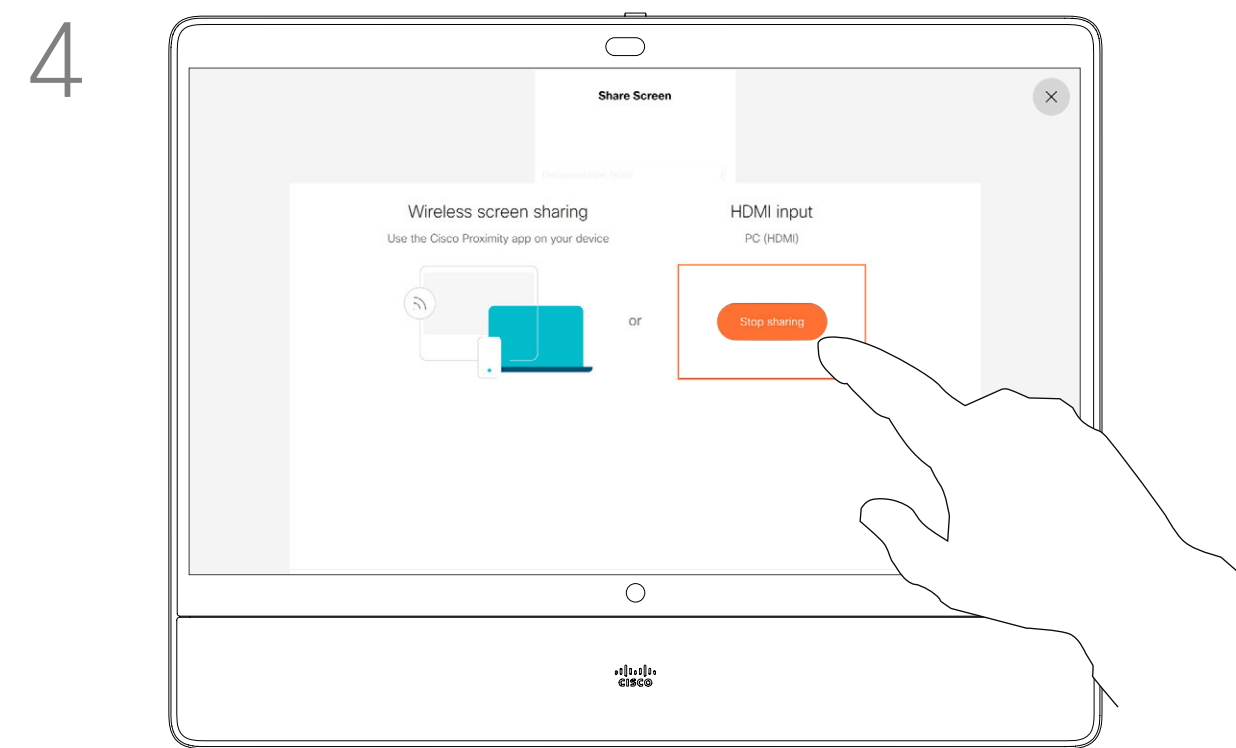

To stop sharing content, tap **Sharing options** and **Stop sharing**.

Content Sharing Change Presentation Layout In a Call

 About Presentation Layout

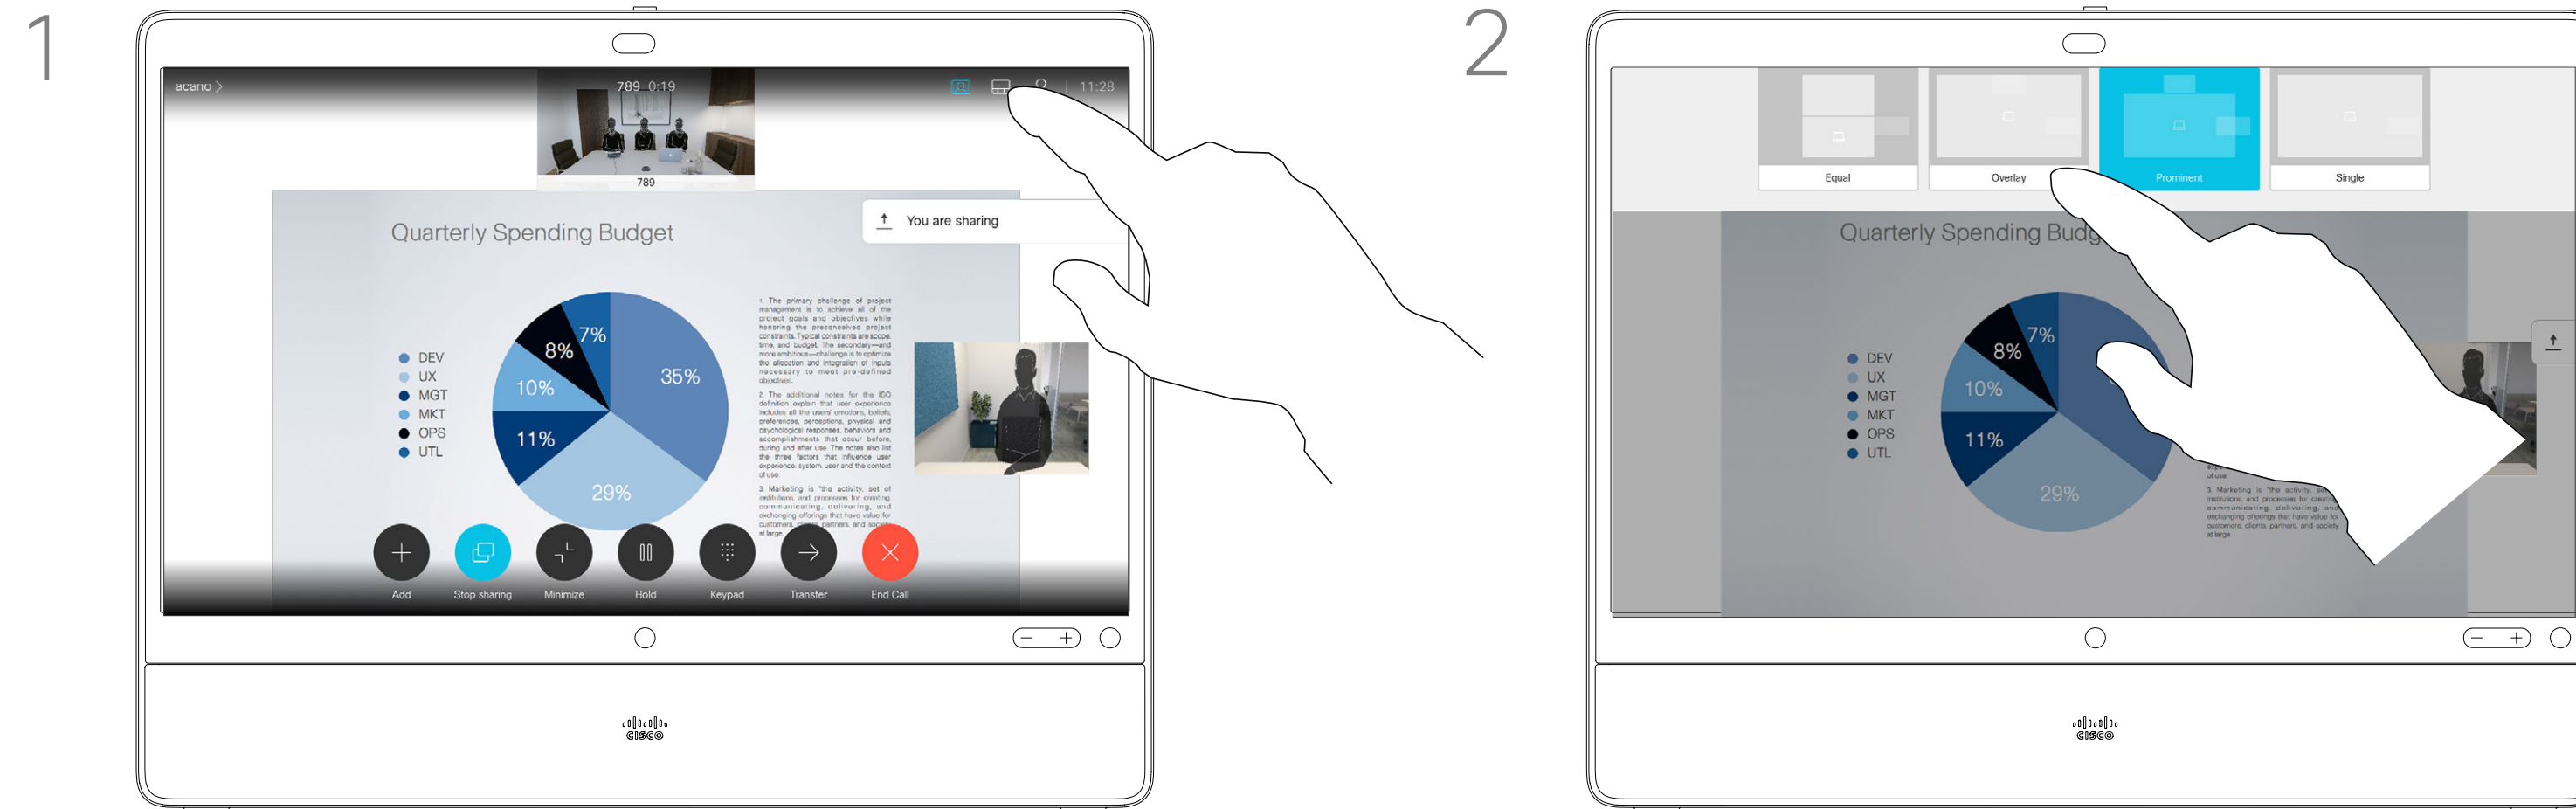

Tap the **Layout** to invoke the layout options, as shown.

 
Select your preferred layout by tapping it.

You may change the layout of the screen during presentations. Typical options available are with or without showing the presenter and showing the presenter as either a PiP (Picture in Picture) or PoP (Picture outside Picture).

The layout options available on your device may differ from those shown here, but the layouts shown are always those you may choose between.

Use as a Digital Whiteboard

About Whiteboard

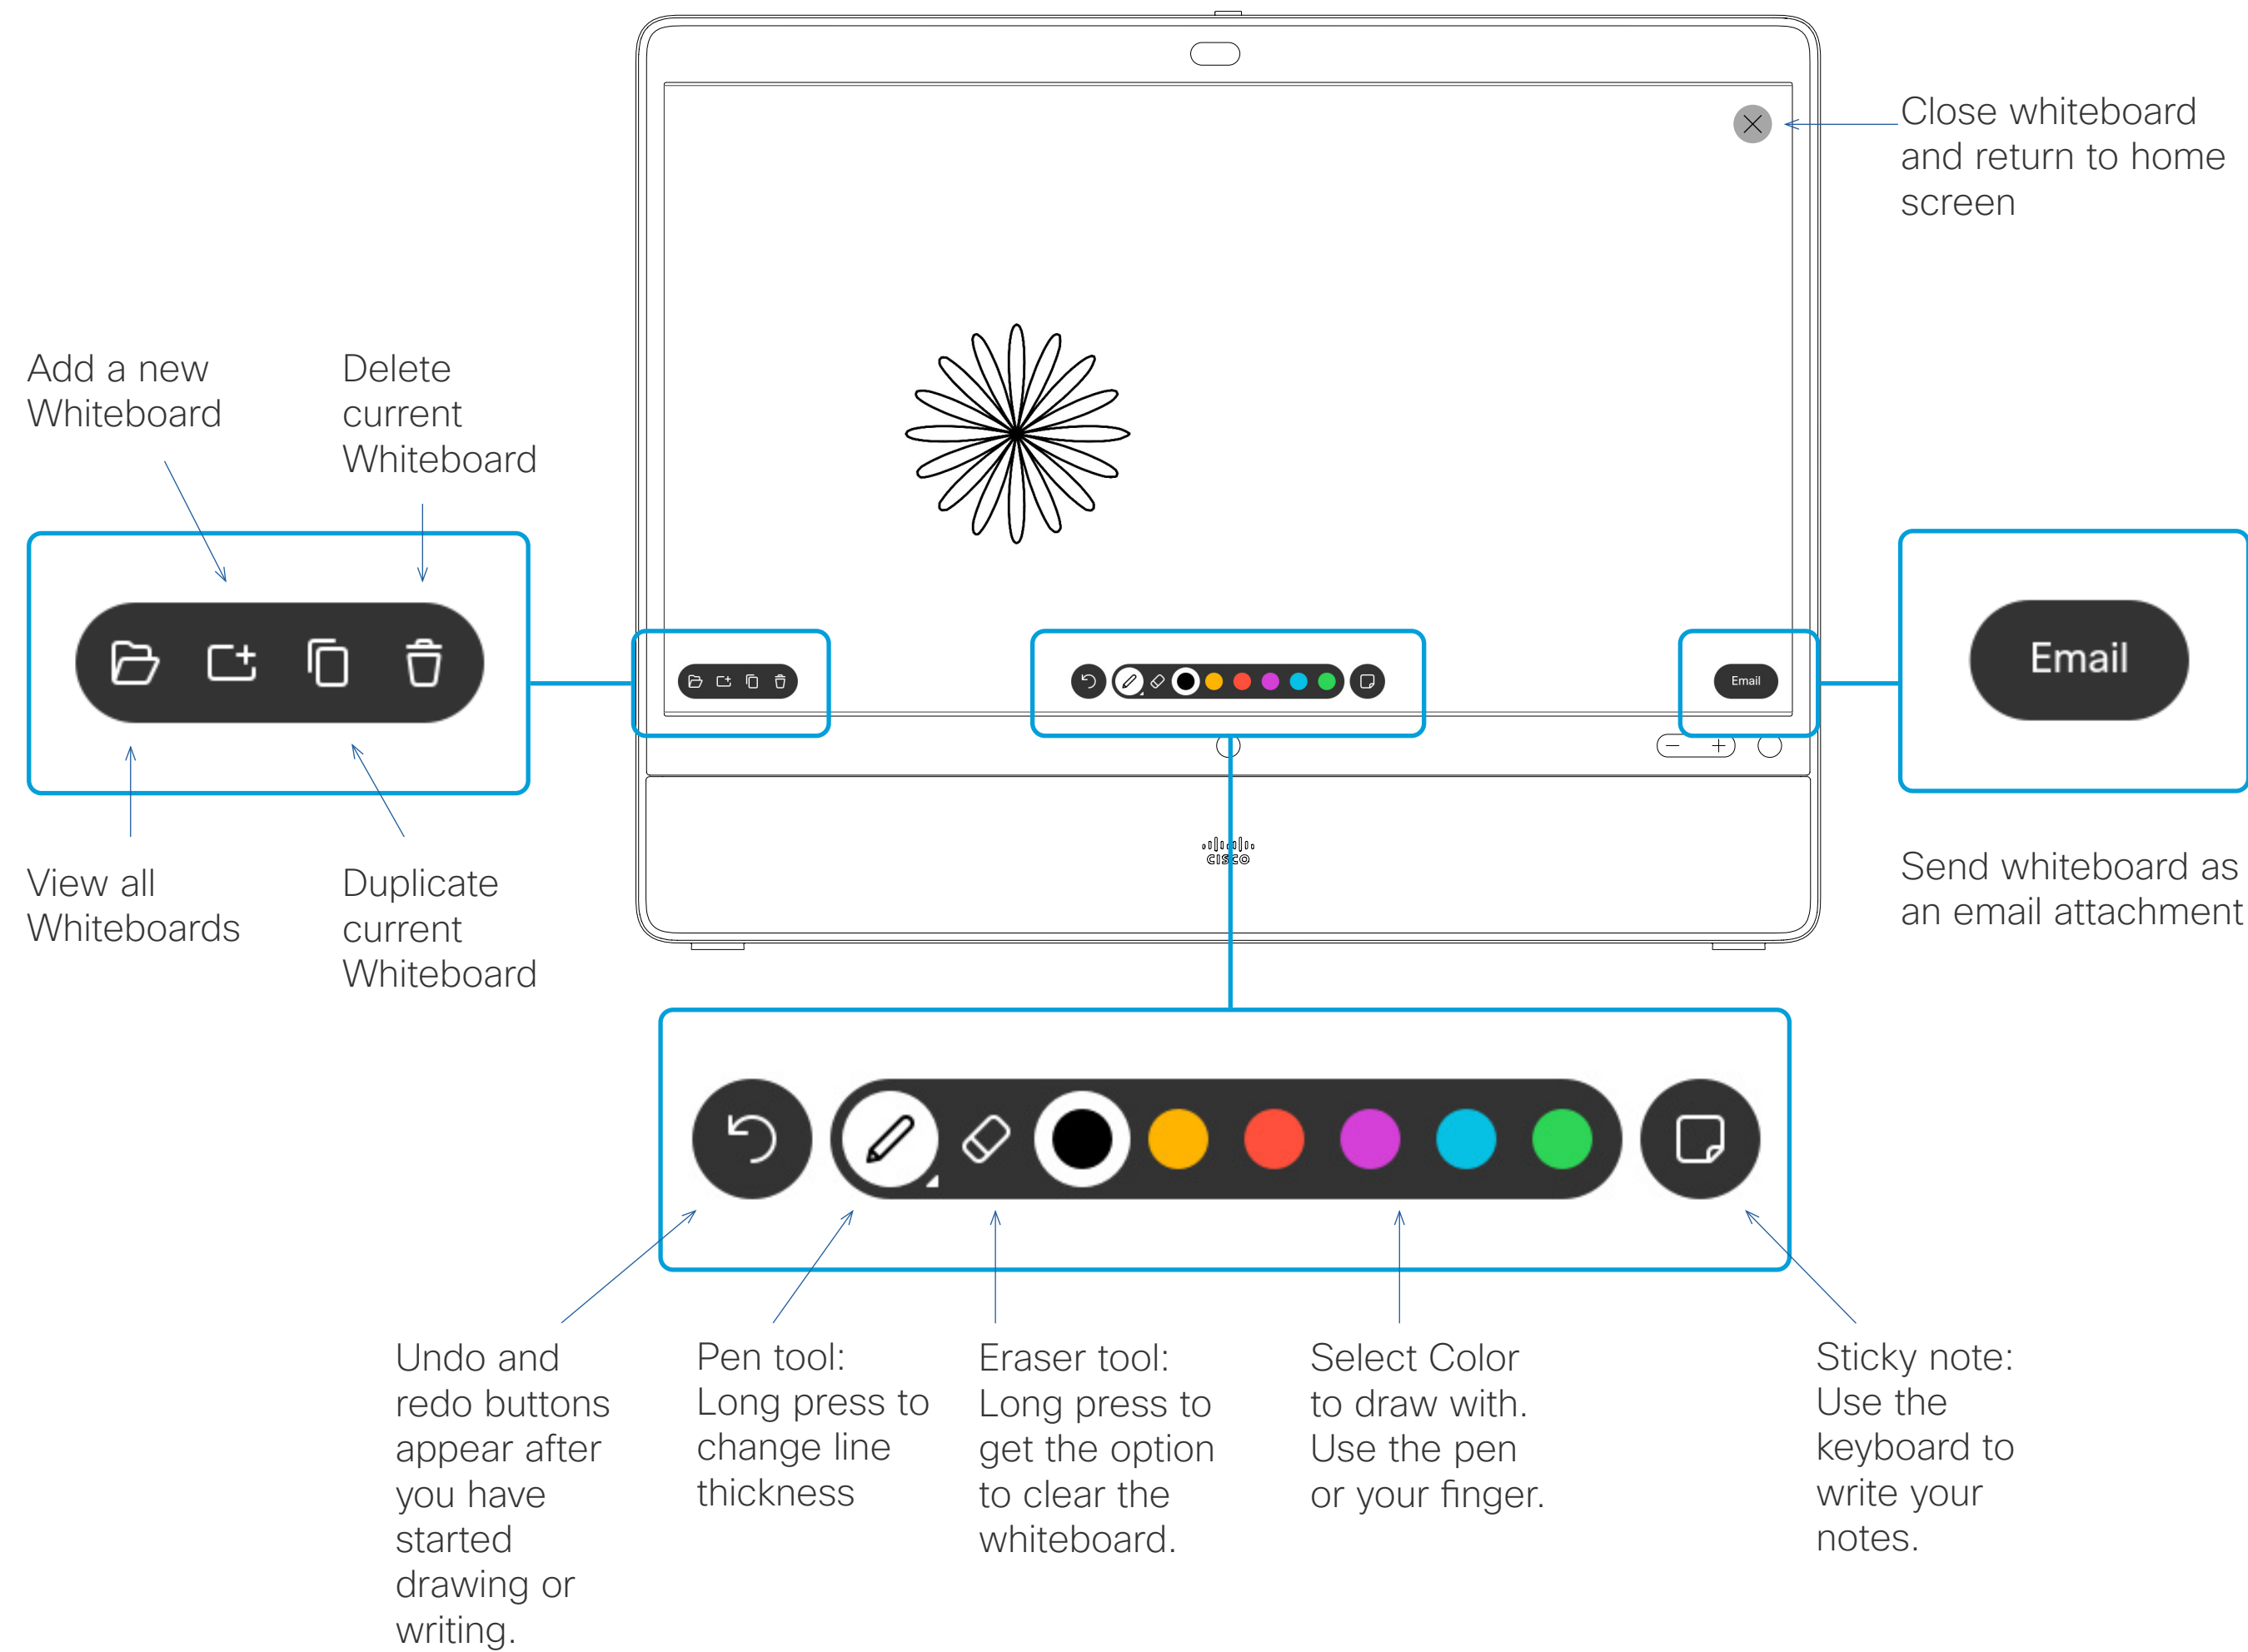

You can use your Desk Pro for digital whiteboarding.

To access the whiteboard function go to the home screen and then tap **Whiteboard**.

Use the stylus or your finger to write and draw.

The size of a whiteboard page is as large as you want. Use two fingers to drag the whiteboard and pinch to zoom.

To save your whiteboard drawings you may send them as emails. To be able to do this, your video support team must have configured your Webex Board to make use of a mail server.

The whiteboards are shared in PDF format.

To delete all whiteboards, tap the device name on the home screen and tap **End Session**.

Wired Touch Redirect

You can control your laptop from the Desk Pro screen. This works when you have connected your Windows 10 laptop to the Desk Pro with an HDMI cable and a USB-C cable. It is well suited for tasks that involve drag and drop, drawing programs, and maps.

Touch redirect is only available when you are not in a call.

The feature is tested and verified with Windows 10. Basic functionality should also work with another OS.

Limitations:

- If you accept a call while using touch redirect, the connection is automatically turned off. To continue touch redirect after the call, you must connect the cables again.
- When you use touch redirect, you can't use annotation on the screen you are sharing.
- Volume control on the Desk Pro is not available when touch redirect is in use. Use the volume control from your laptop.

Enable Drag and Drop in Your Browser

To use touch redirect for drag and drop on your browser, you need to enable this on your browser.

- Chrome: go to **chrome://flags/#touch-events** and set to **Enabled**.
- Firefox: go to **about:config** and set **Dom.w3c_touch_events.legacy_apis.enabled = true**.
- Edge: go to **about:flags** and set **Enable Touch Events = always on**.

Use Touch Redirect with Windows 10 Laptops

1. Switch your laptop to tablet mode by selecting the action center on the taskbar next to the date and time, and then select **Tablet mode** to turn it on.
2. Connect your laptop to a Desk Pro with an HDMI cable and a USB-C cable. You can use either a USB-C-USB-C cable, or a USB-C-USB-A cable.
Note: USB-C-USB-A cables are supported for longer cable lengths.
3. Select **Share** from the home screen and tap the **Touch Redirect** button.

If you want to switch to other activities on the Desk Pro while you are using touch redirect, tap the **Touch Redirect** button and tap the screen to get access to home screen.



Scheduled Meetings



Join a Scheduled Meeting

 
Joining a Meeting

Your device may be connected to a management system capable of scheduling video meetings. Any meetings scheduled then appear as shown at left.

Tap **Join** to participate in the meeting.


Should the meeting have started already, you may still join.

When a scheduled meeting appears on the device screen, the device wakes up from stand-by.

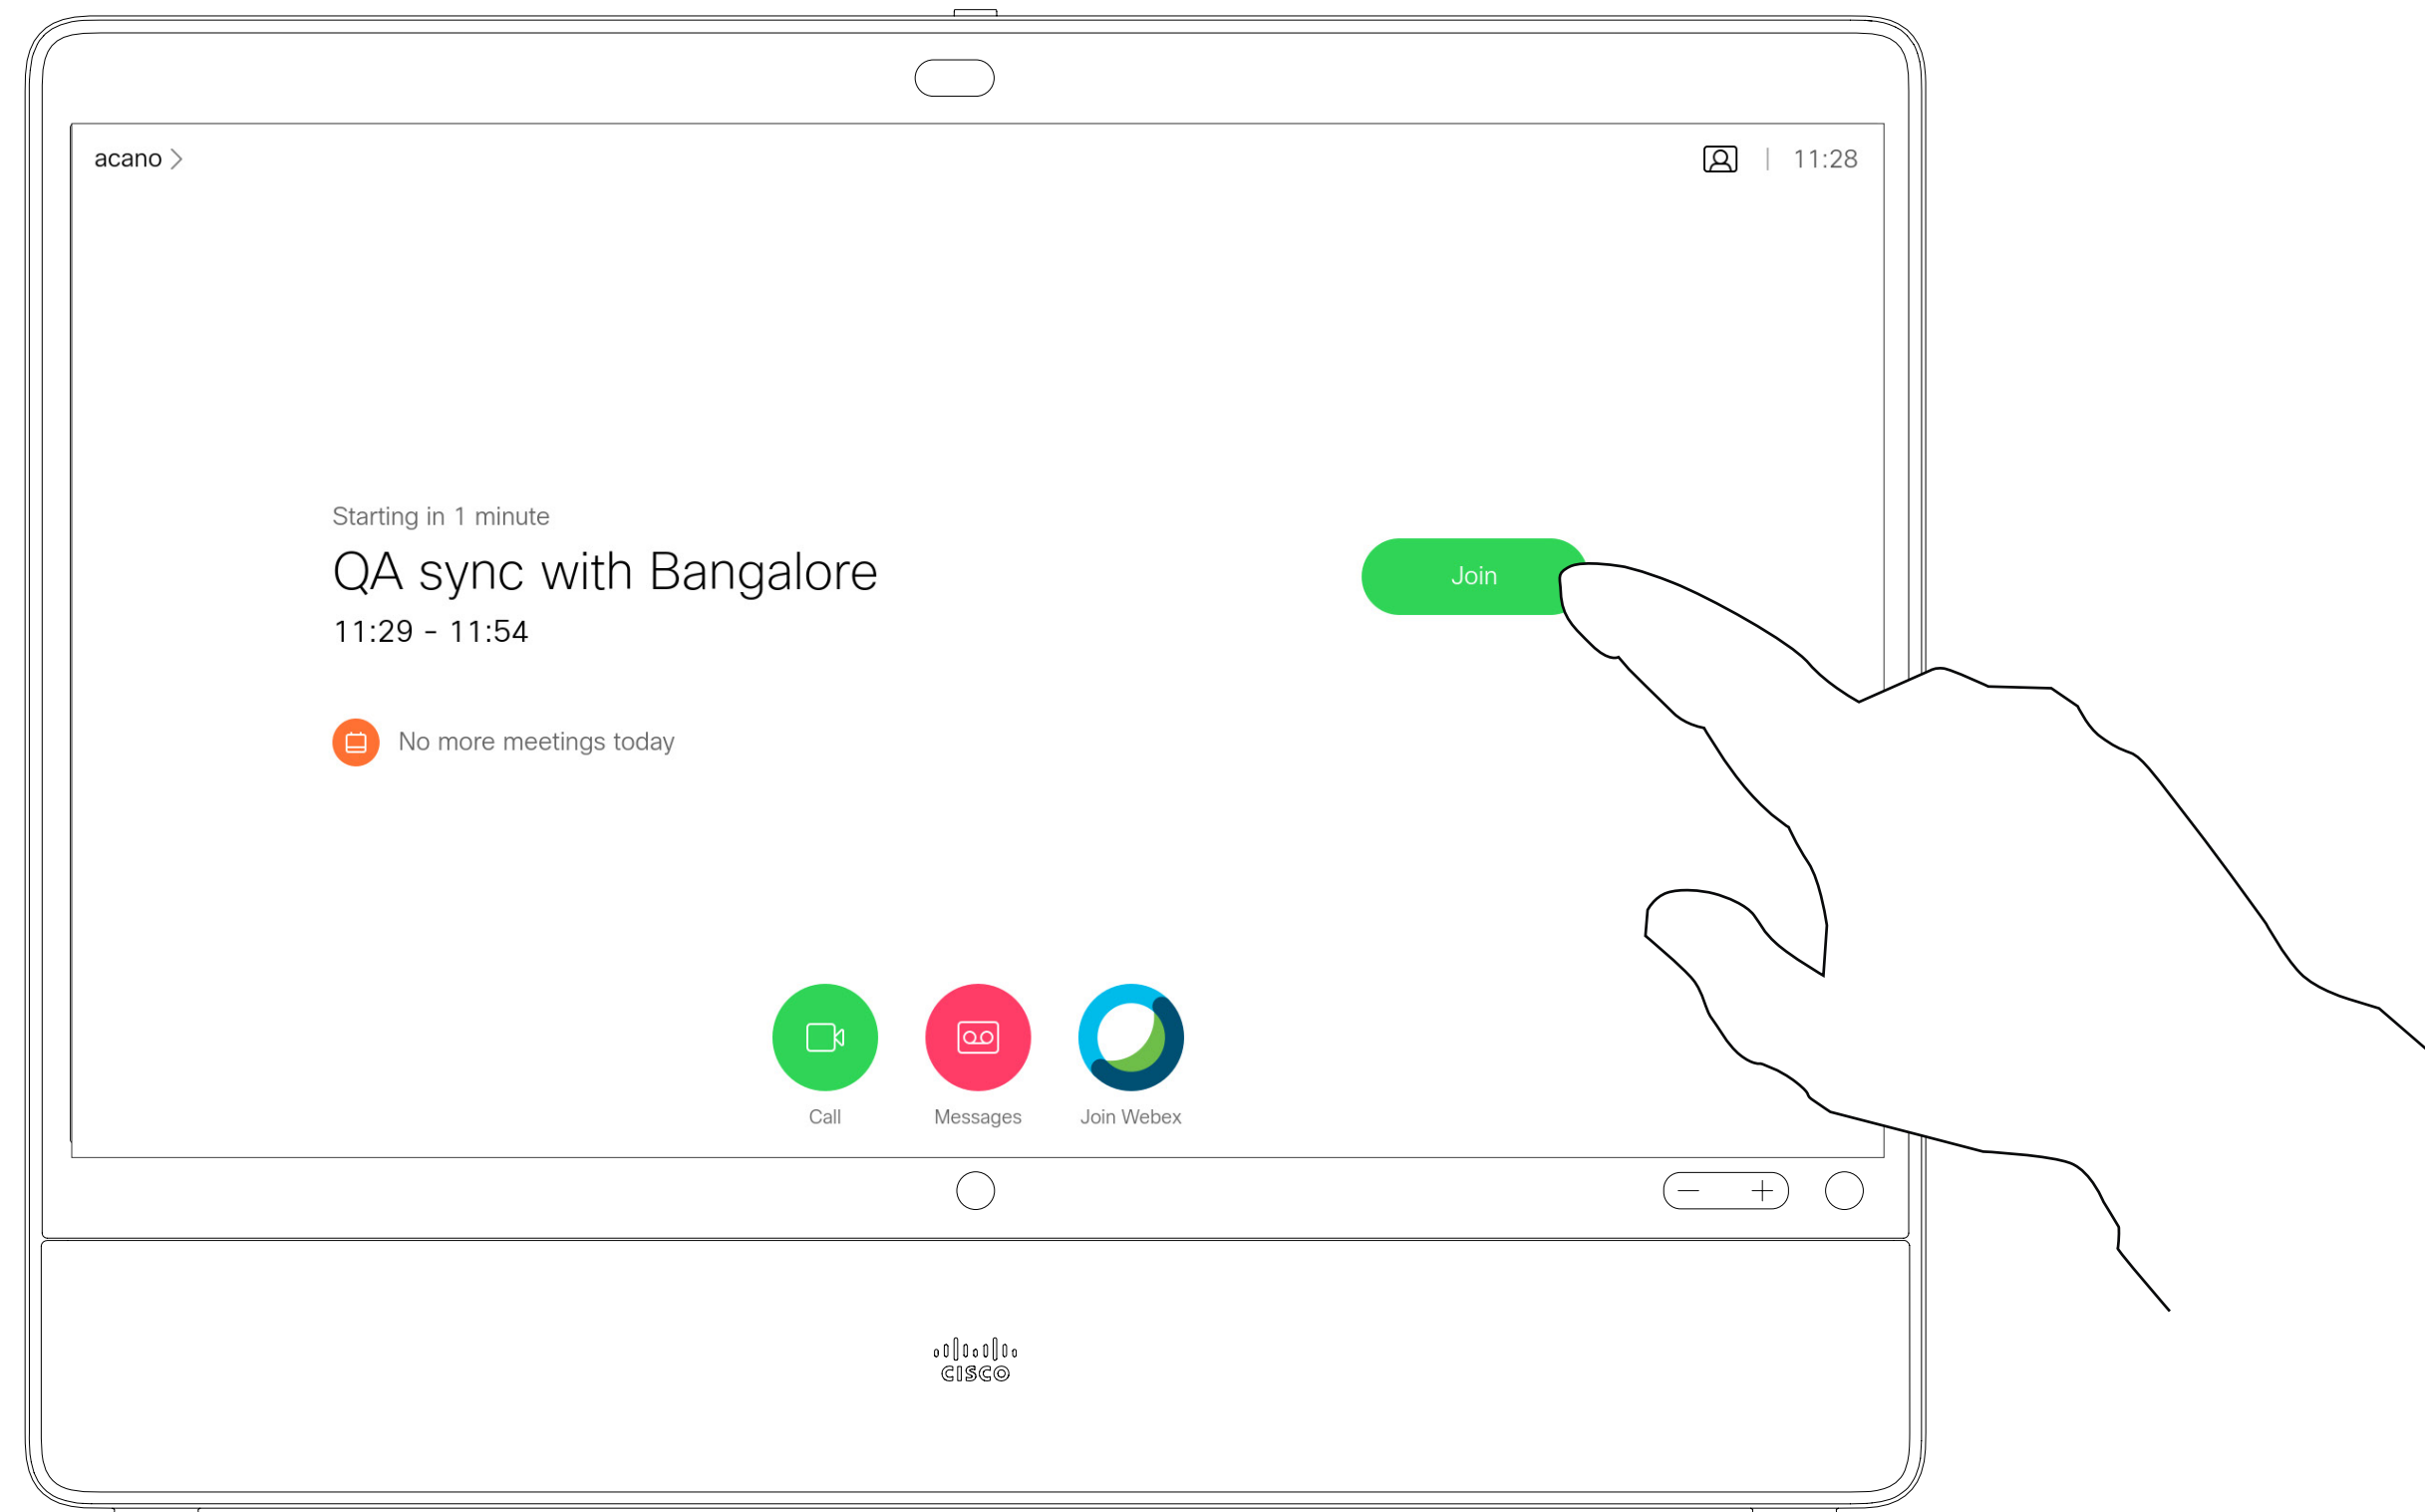

Scheduled Meetings

 Join a Webex Meeting

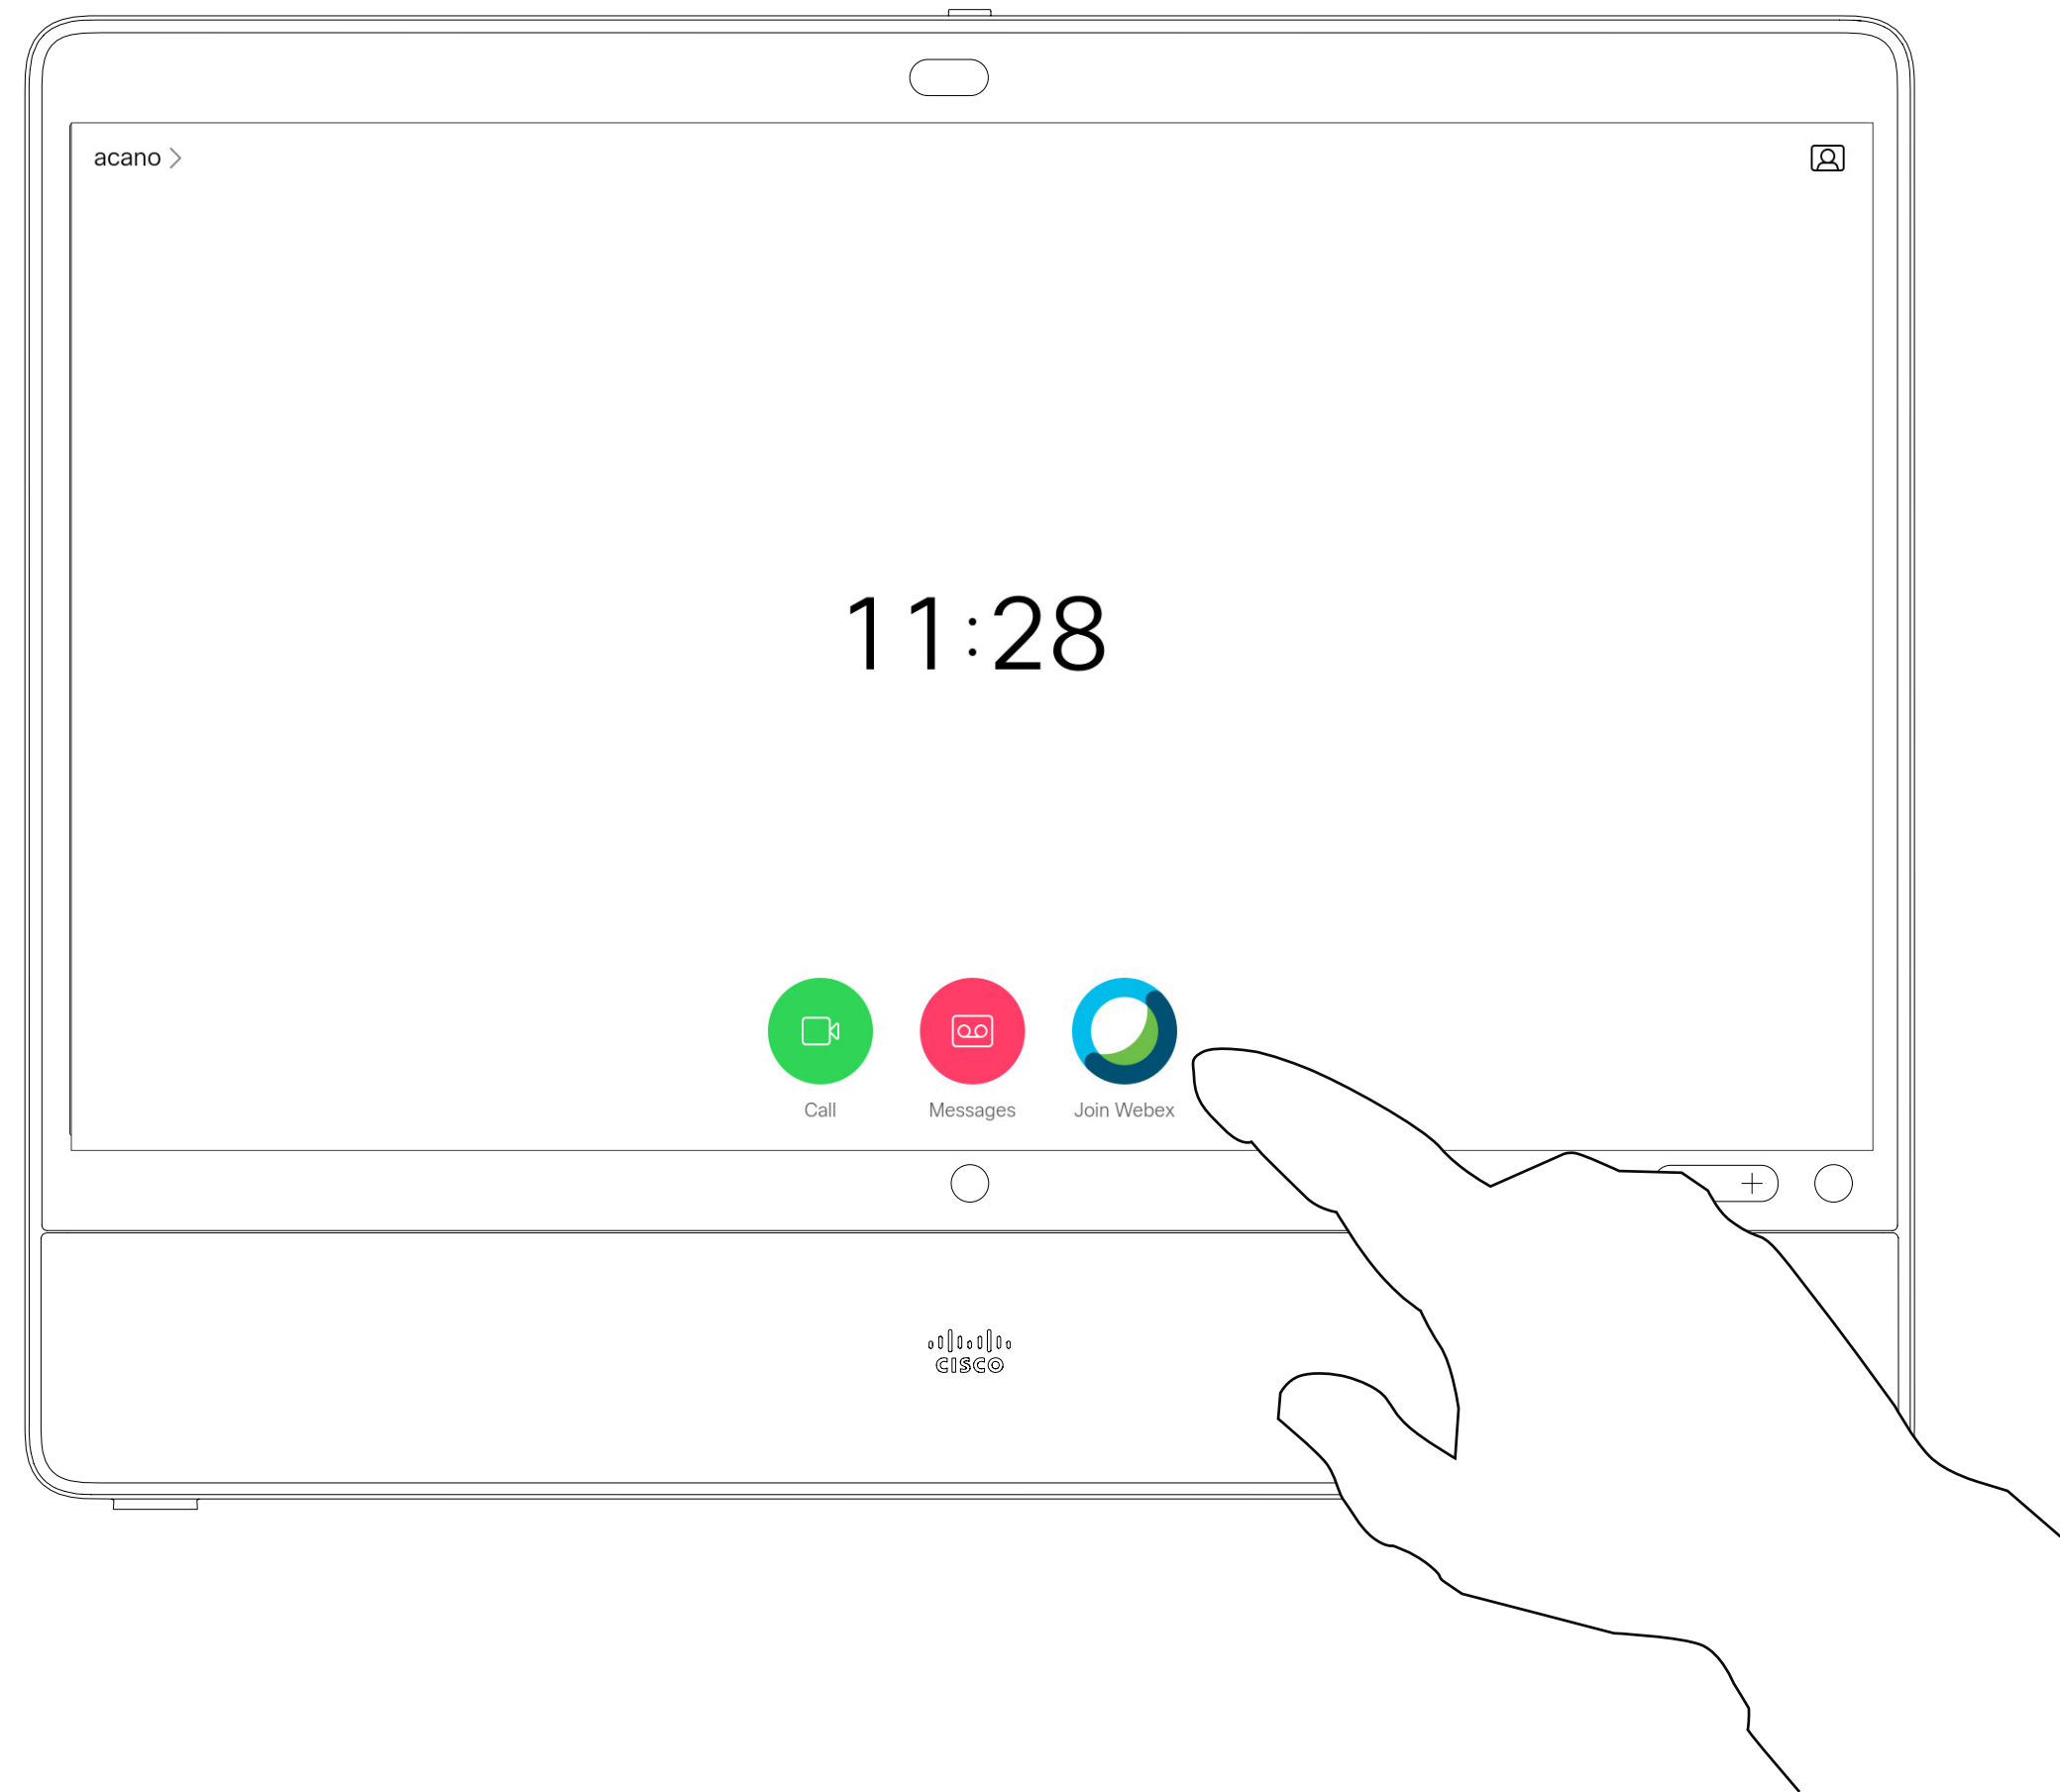

Tap **Join Webex**. You are prompted to key in the meeting number you received in your invite. Tap **Join** to join the meeting.



Contacts

Contacts Favorites, Recents, and Directory

About the Contacts Lists

 
Your lists of Contacts consist of three parts:

Favorites. These contacts are put there by you. These entries are those you call frequently or otherwise need to access in a swift and convenient manner from time to time.

Directory is typically a corporate directory installed on your device by your video support team.


Recents is a list of calls you have placed, received or missed earlier.

Note that removing entries from *Recents* can only be done from the web interface.

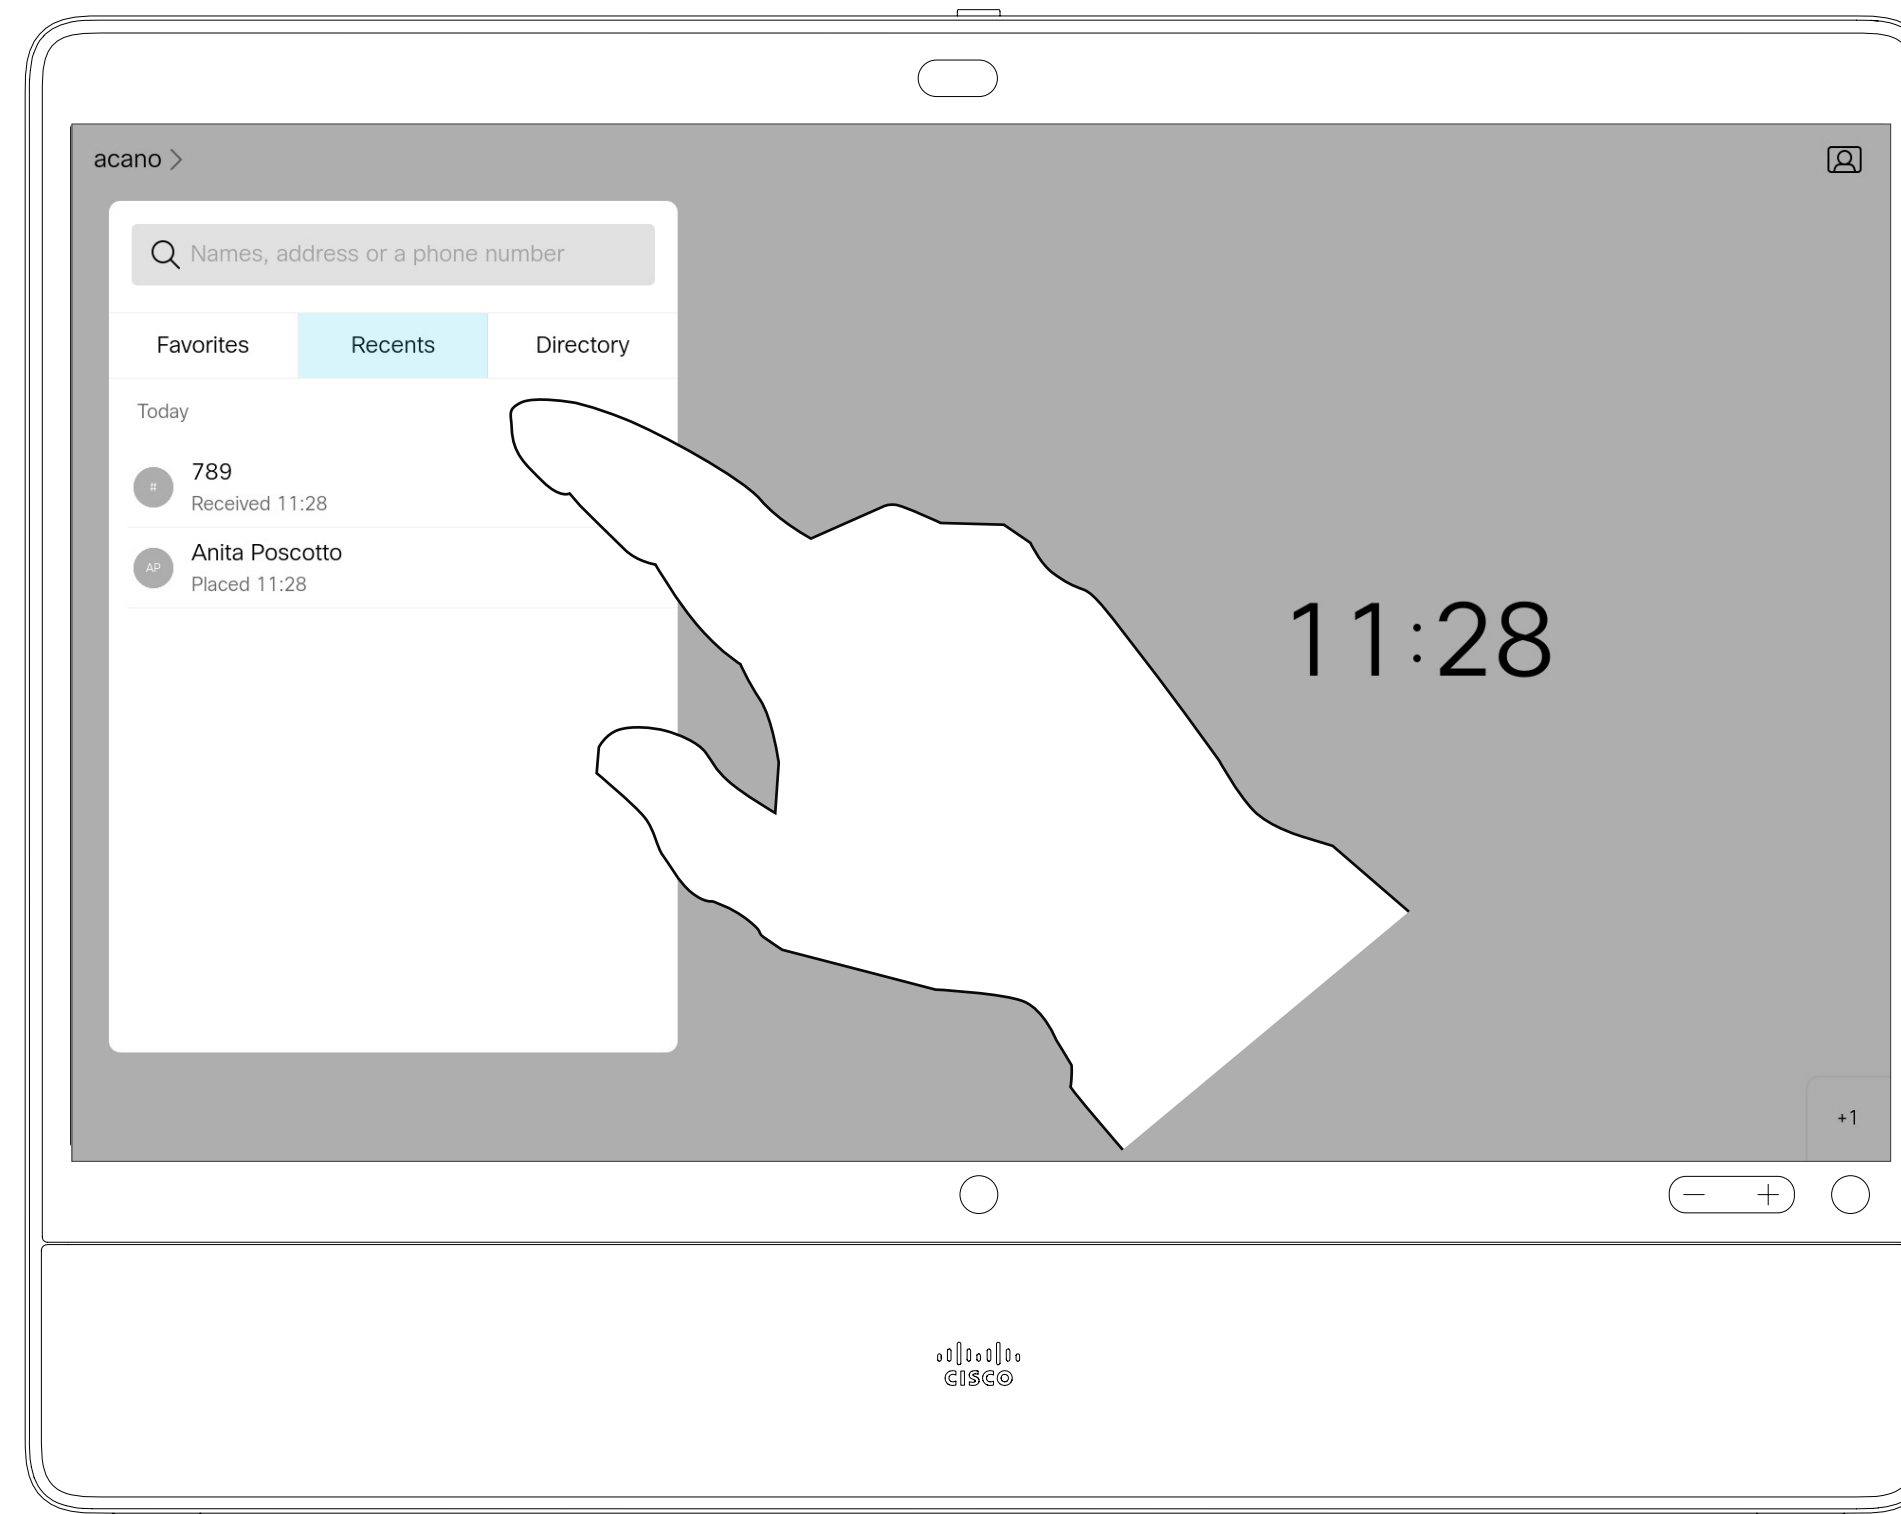


Add Someone to Favorites, While in a Call

 
About Favorites

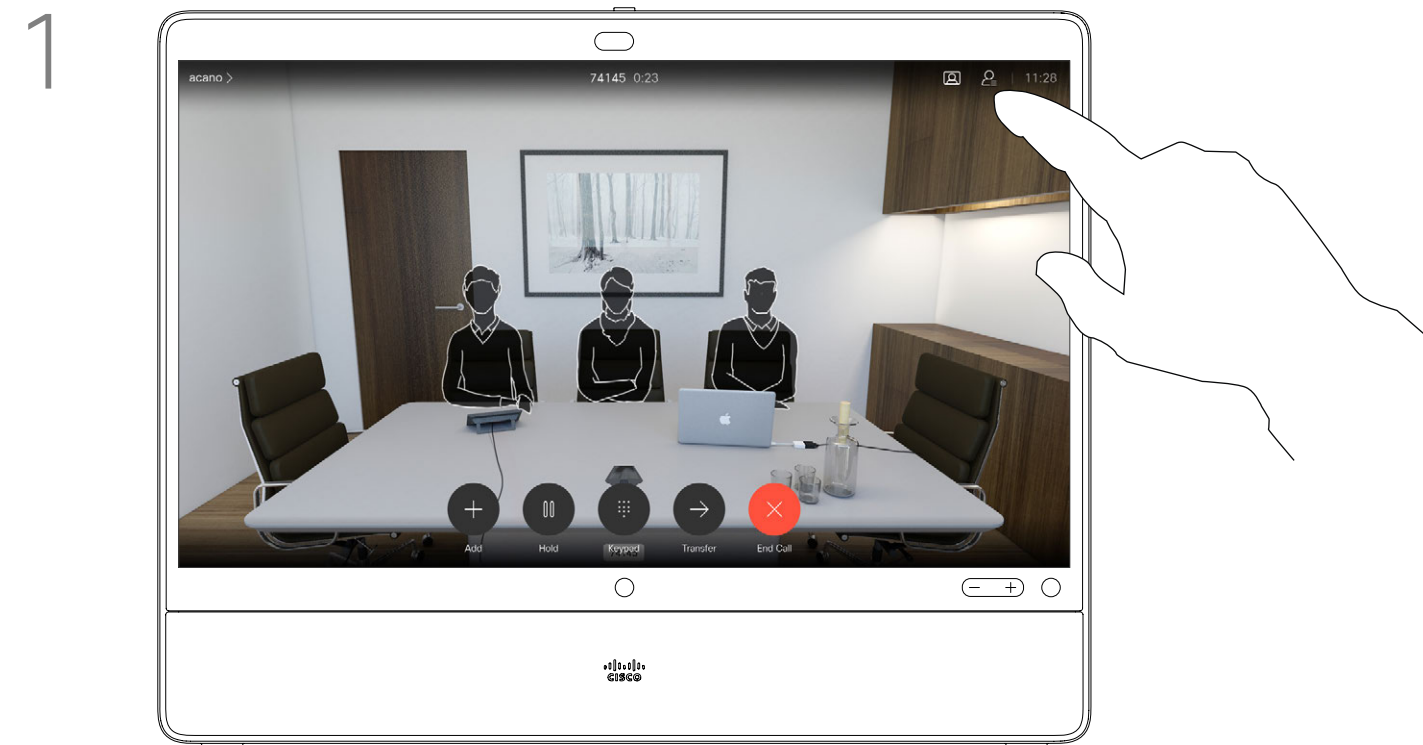

 In a call, tap the **Participants** icon in the upper right corner, as shown, to invoke the list of participants.

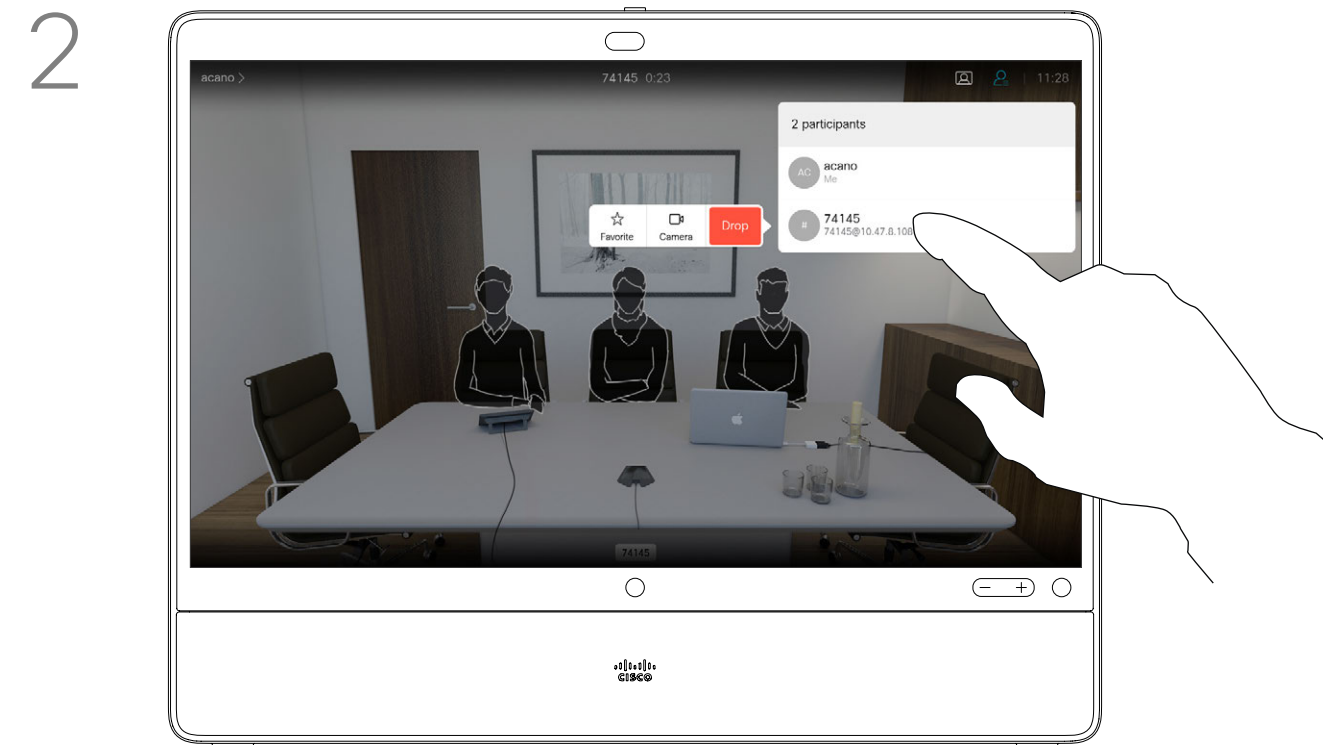

 Tap the participant to be turned into a Favorite. A small menu allowing you to drop that participant (terminate that participation) or to add the participant to the list of favorites.

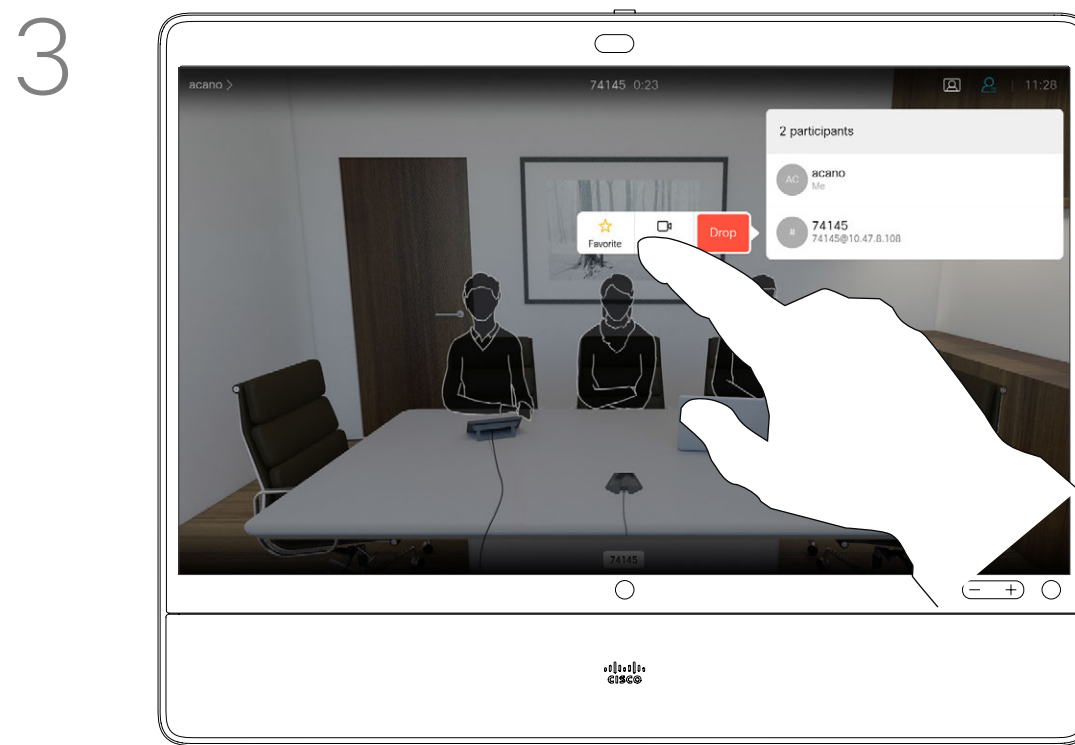

Tap **Favorite**.

 
The *Favorites* is your own shortlist of contacts you frequently call or otherwise want to have easy access to.

Favorites may be populated from the *Recents* or *Directory* lists as well as from manual entries.


Contacts

Add Someone to Favorites, Outside a Call

About this feature

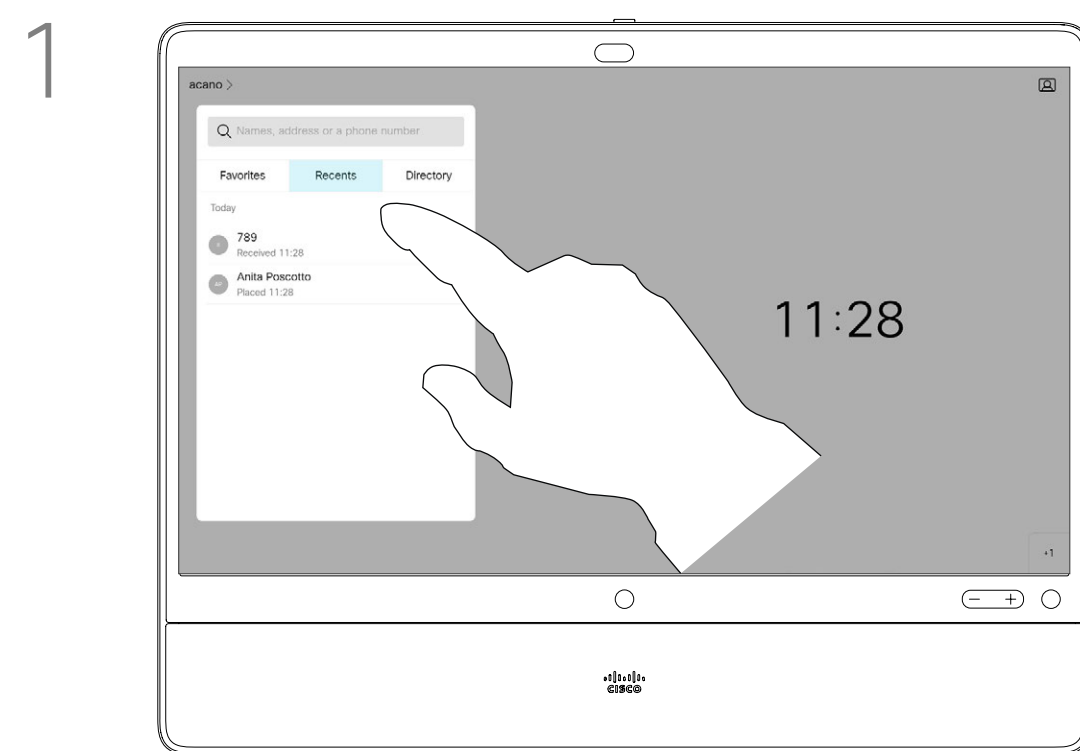

 
While not in a call, tap **Call** (not shown) to invoke the *Contacts* list, as shown. Tap **Recents** or **Directory** and search for the entry to become a Favorite.

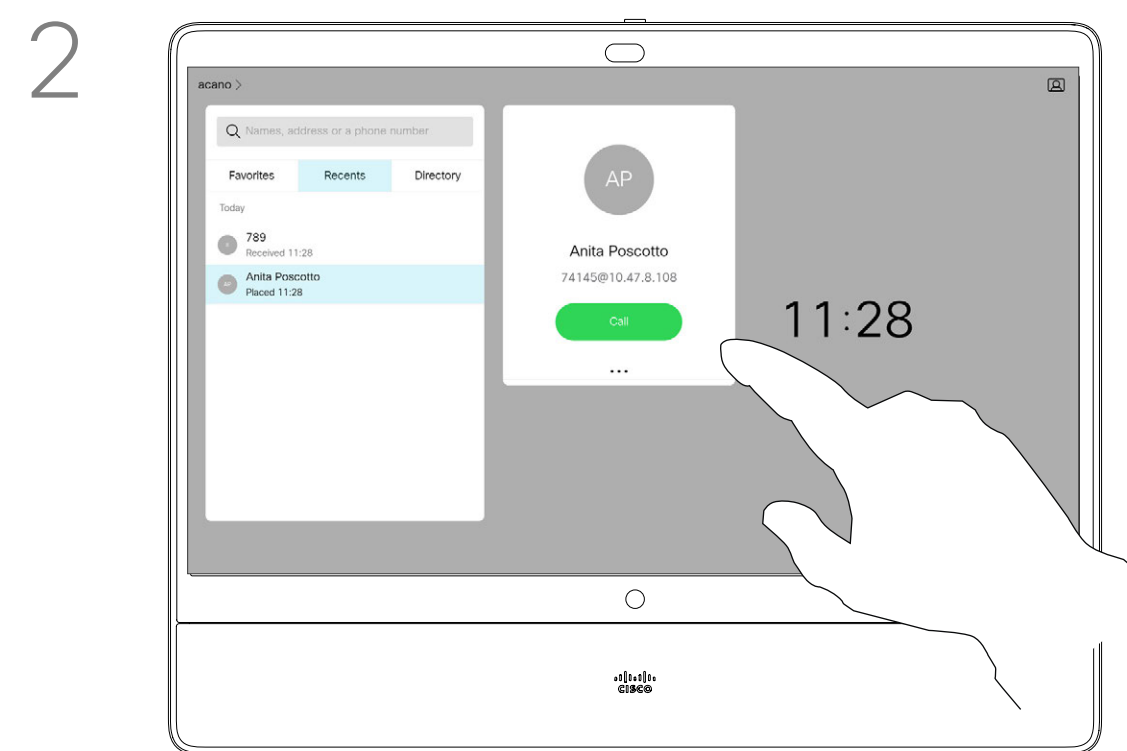

Tap the participant you want to add the *Favorites* list. Tap the **More** (...) icon below the green **Call** button.



 Tap **Mark as Favorite**. The entry has now become a Favorite. Tap anywhere outside the menu to exit.

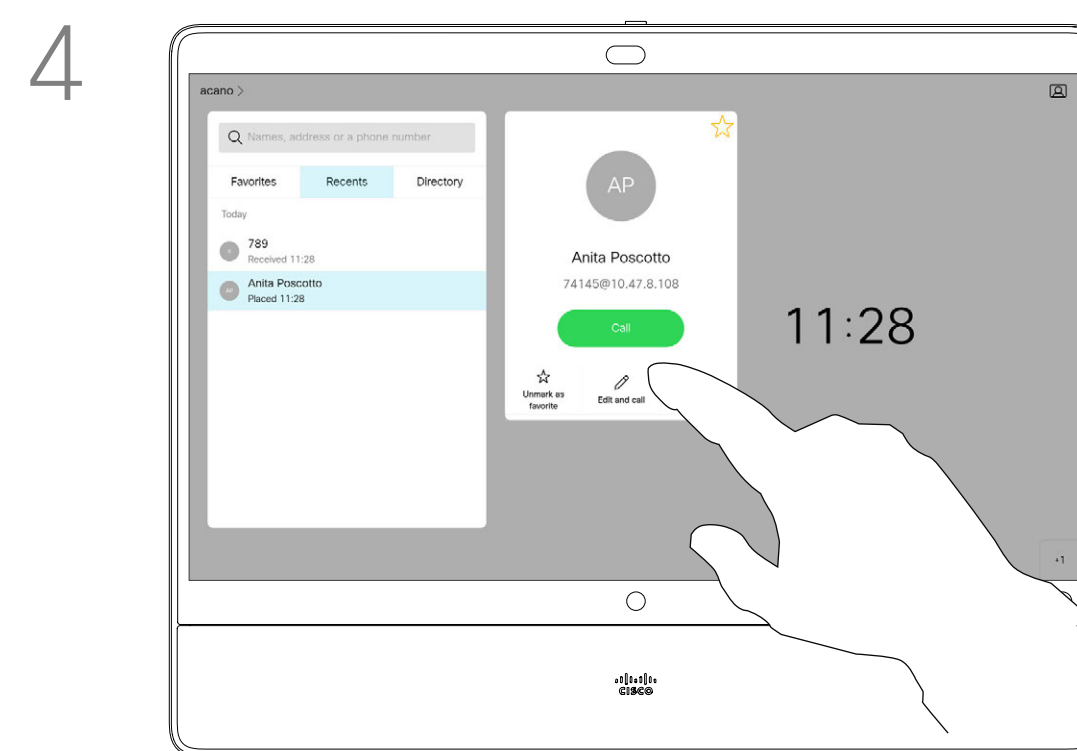

A Favorite is denoted by a golden star, as indicated. To remove an entry from the list of *Favorites*, go to **Favorites** in the *Contact* lists and repeat the procedure.

The *Favorites* is your own shortlist of contacts you frequently call or otherwise want to have easy access to.

Favorites may be populated from the *Recents* or *Directory* lists as well as from manual entries.

 
To add a manual entry to the list of Favorites, type the name or address in the *Search* or *Dial* field as explained in [“Place a Call Using Name, Number, or Address” on page 11.](#)

Contacts


Edit an Existing Favorite

About this feature


This feature allows you to update a Favorite at all times.

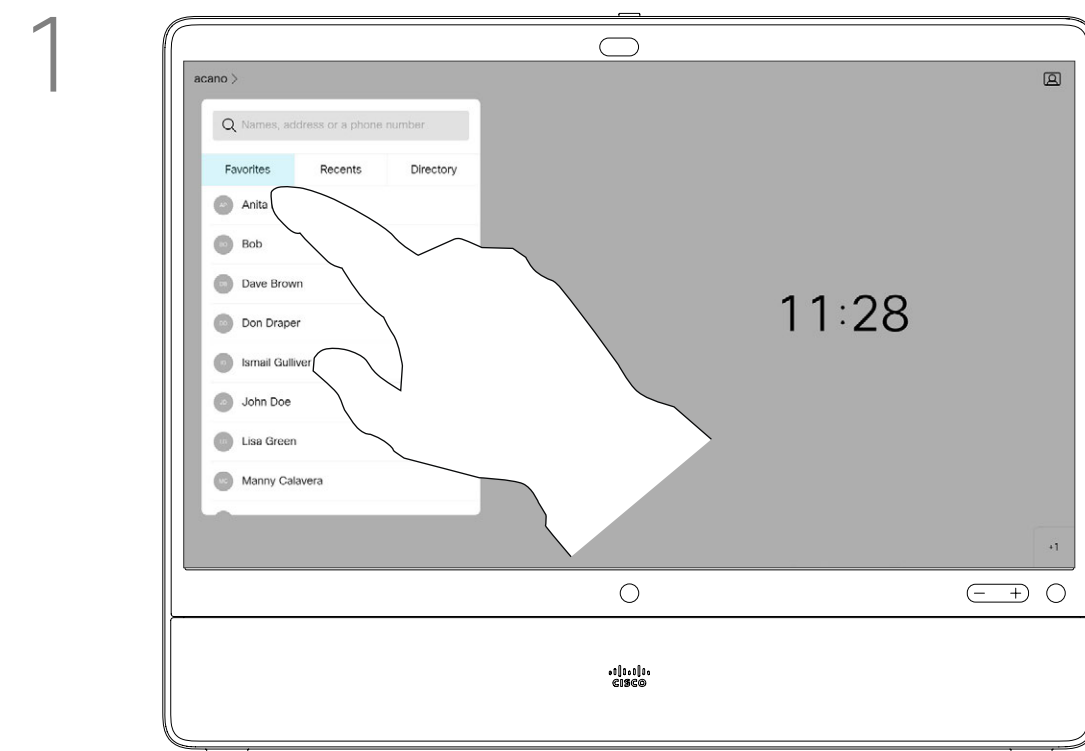

 
Tap **Call** (not shown) to invoke the Contacts list, as shown. Then tap **Favorites** to gain access to the list of Favorites.

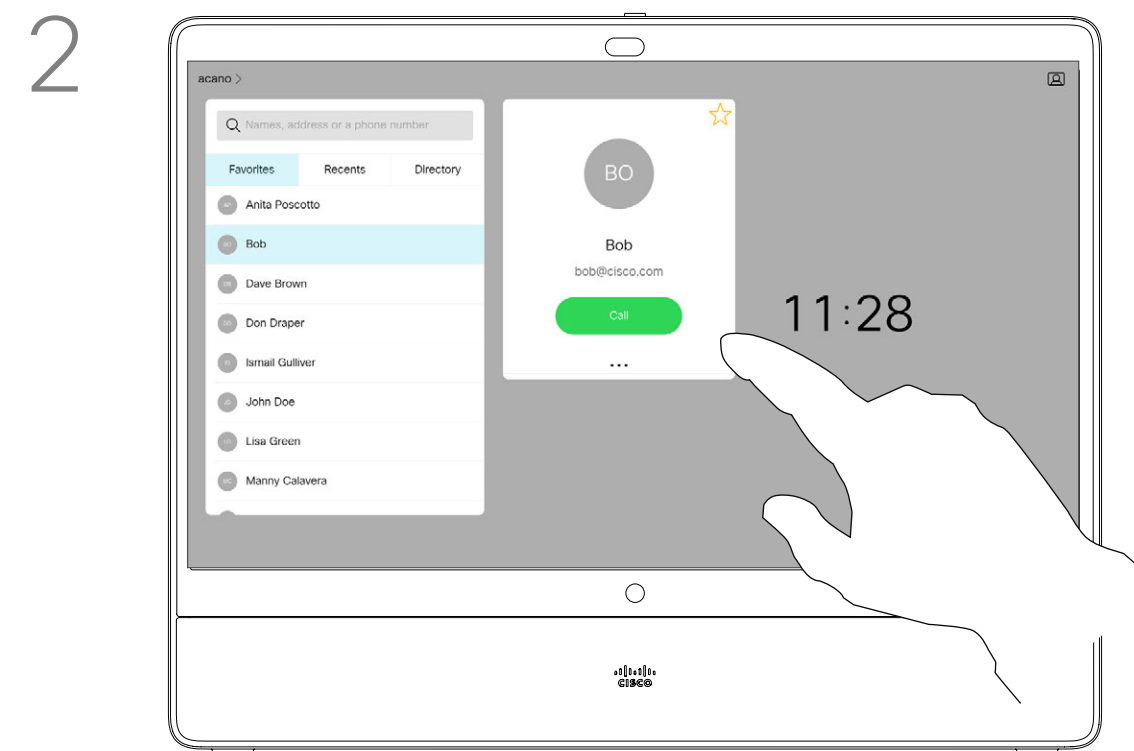

 Tap the Favorite to be edited. Now tap **More**.

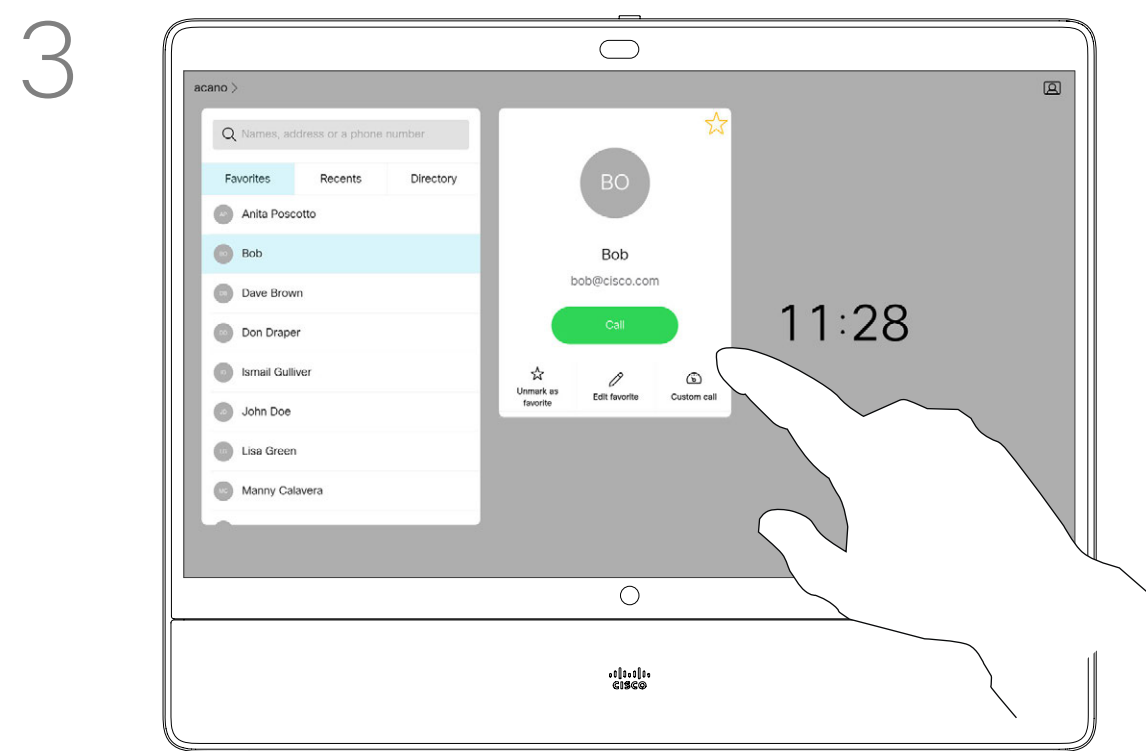

Tap **Edit Favorite**.

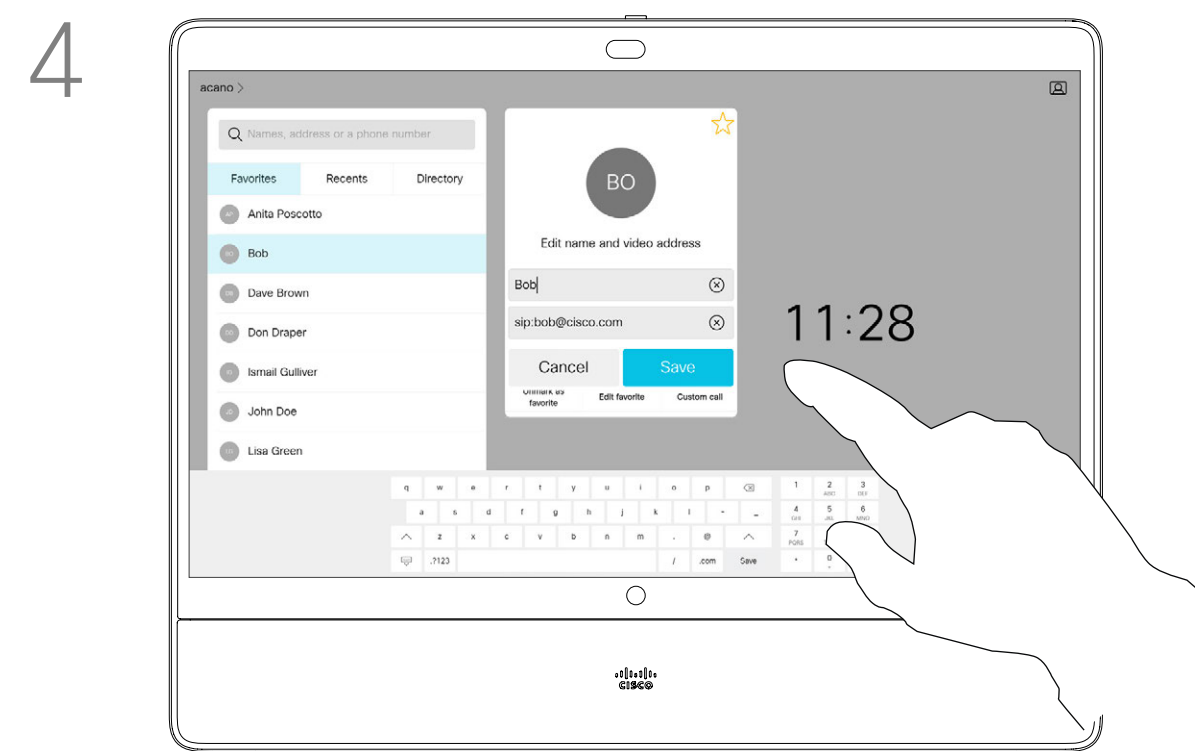 

Edit the Favorite entry and tap **Save** to exit putting changes into effect. Otherwise tap **Cancel**.



Camera Control



Turn Selfview On and Off

Why Selfview?

 
Selfview shows what others see from your device. You can use it to confirm that they see what you want them to see.

The selfview appears as a PiP (Picture-in-Picture).

From time to time you may want to have the selfview activated during the meeting. This could, for example, be to ensure that you remain seen on the screen.

Tap as shown at left to activate or deactivate the Selfview.


It may happen that the current position of the selfview blocks important parts of the image on your screen. You may therefore want to move it (see the next page for more).

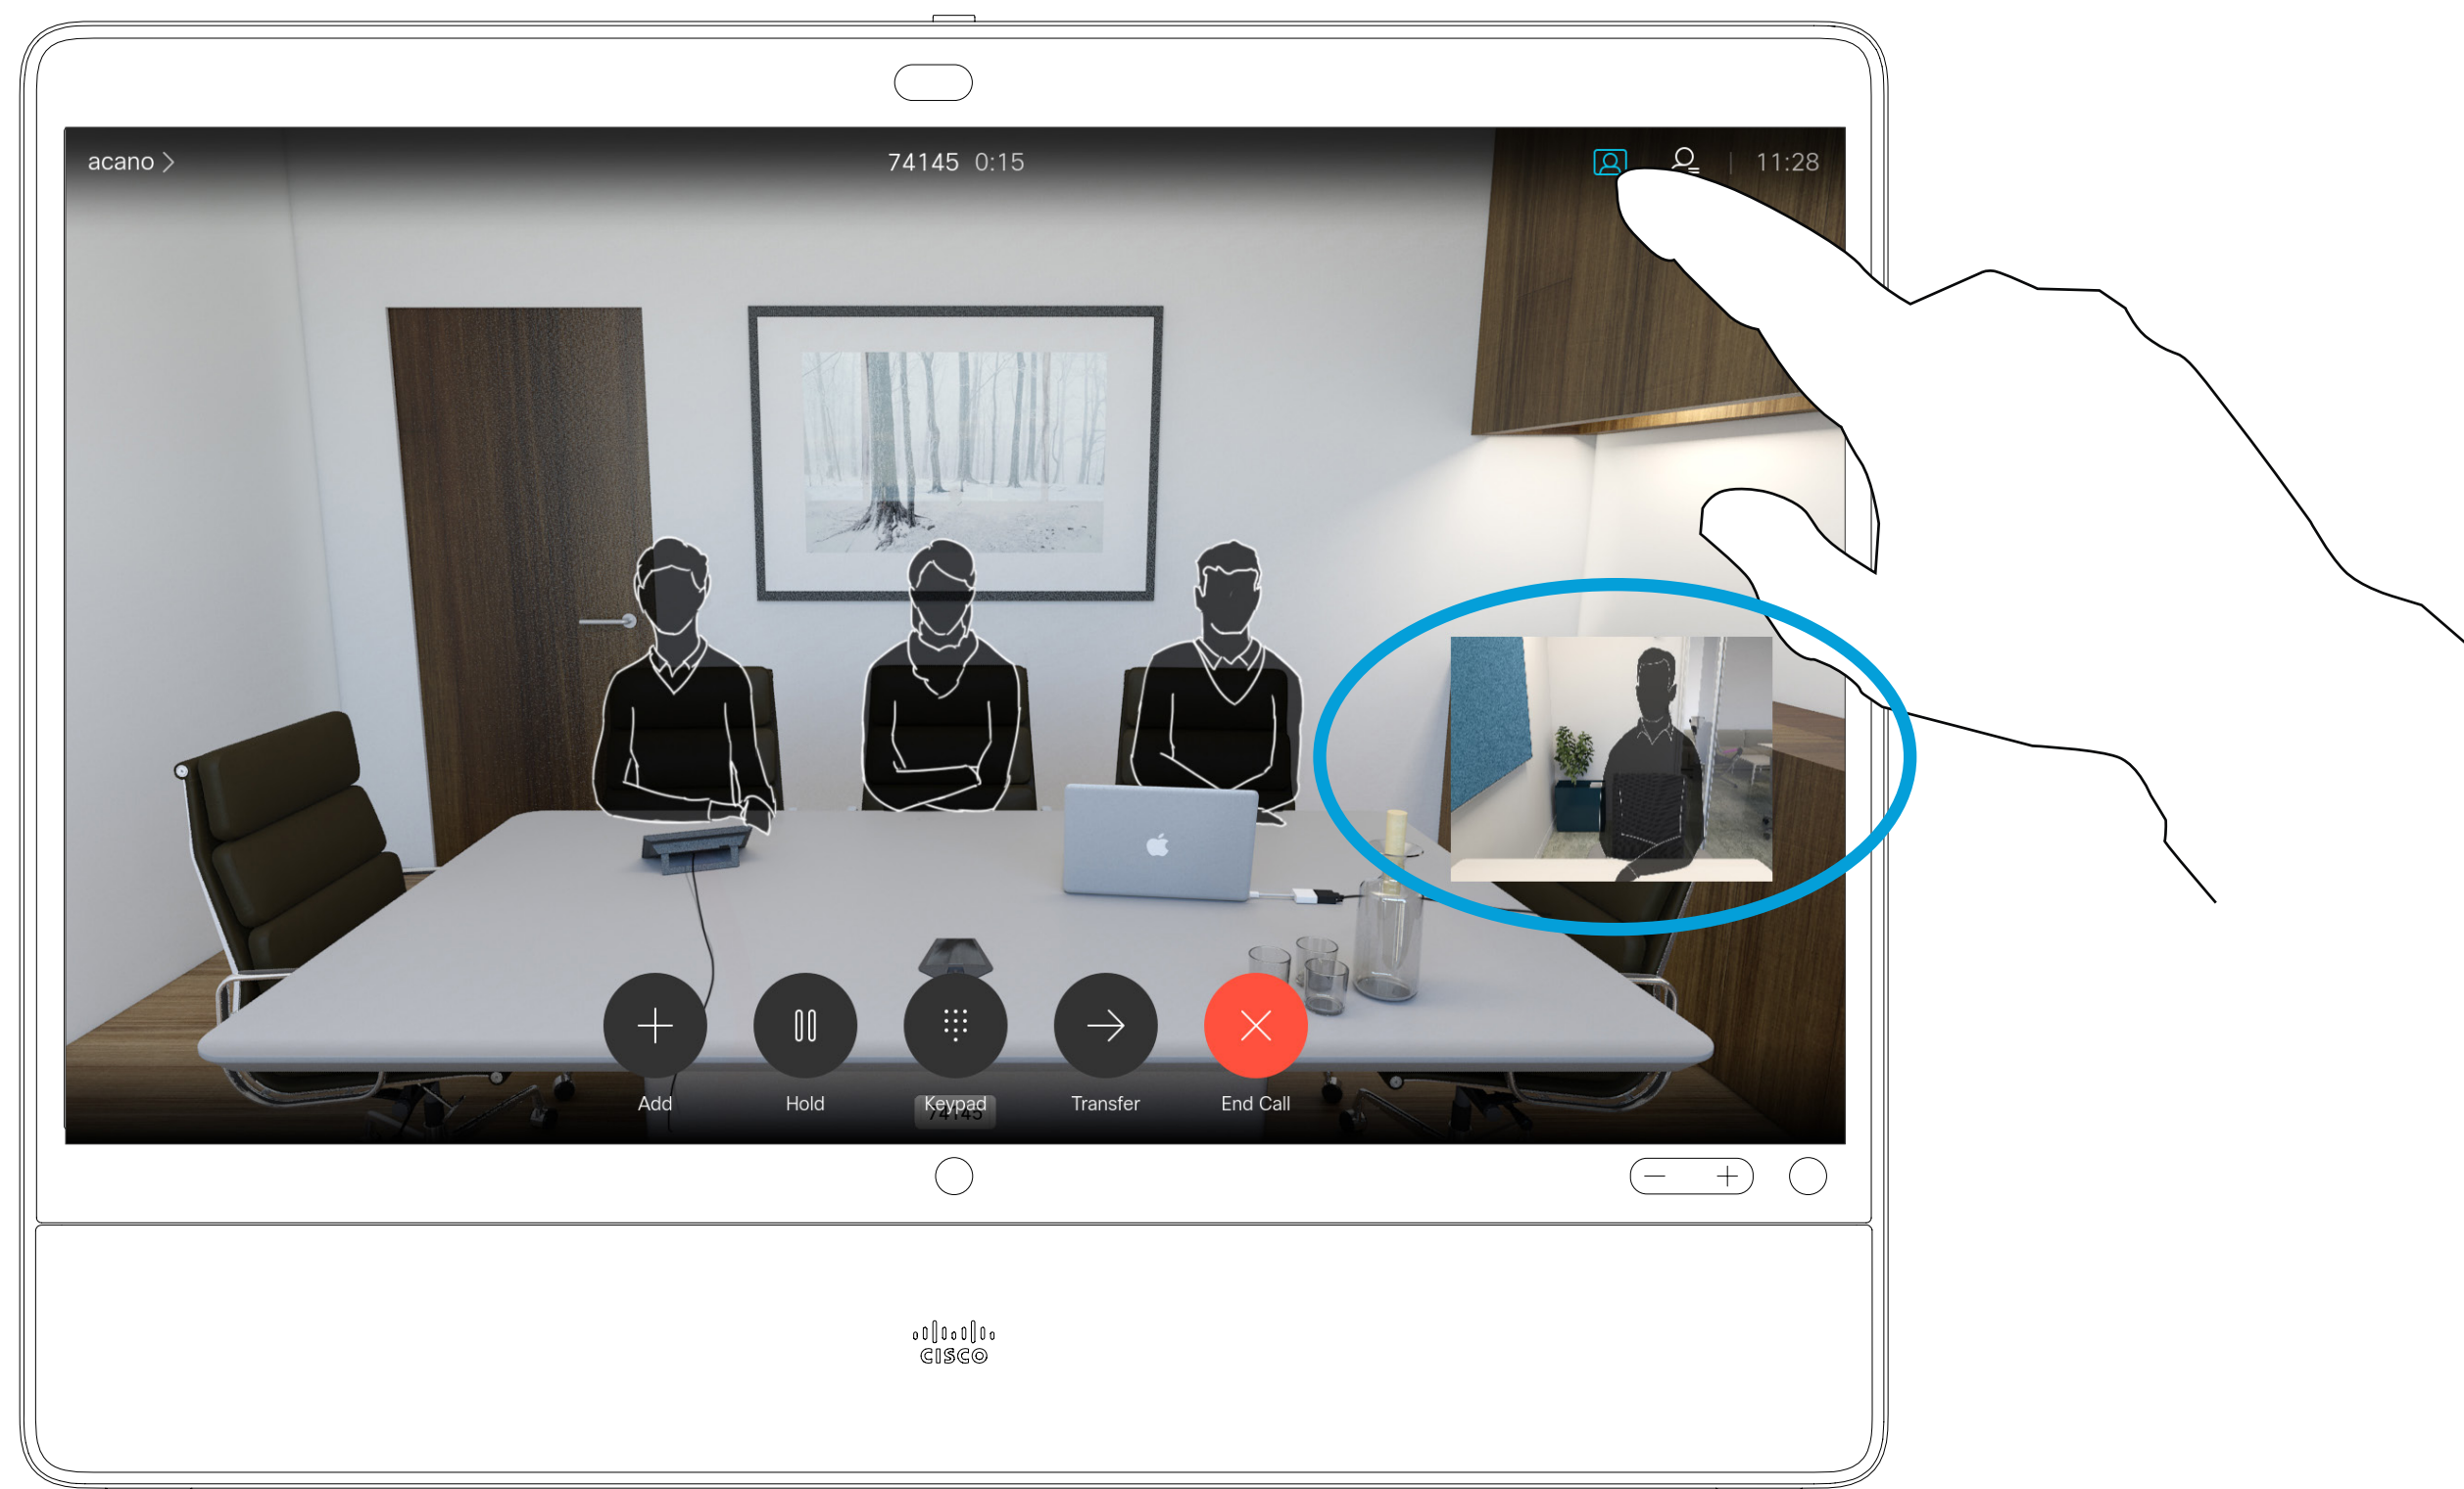


Camera Control

Move the Selfview PiP

 
Why Move the Selfview?

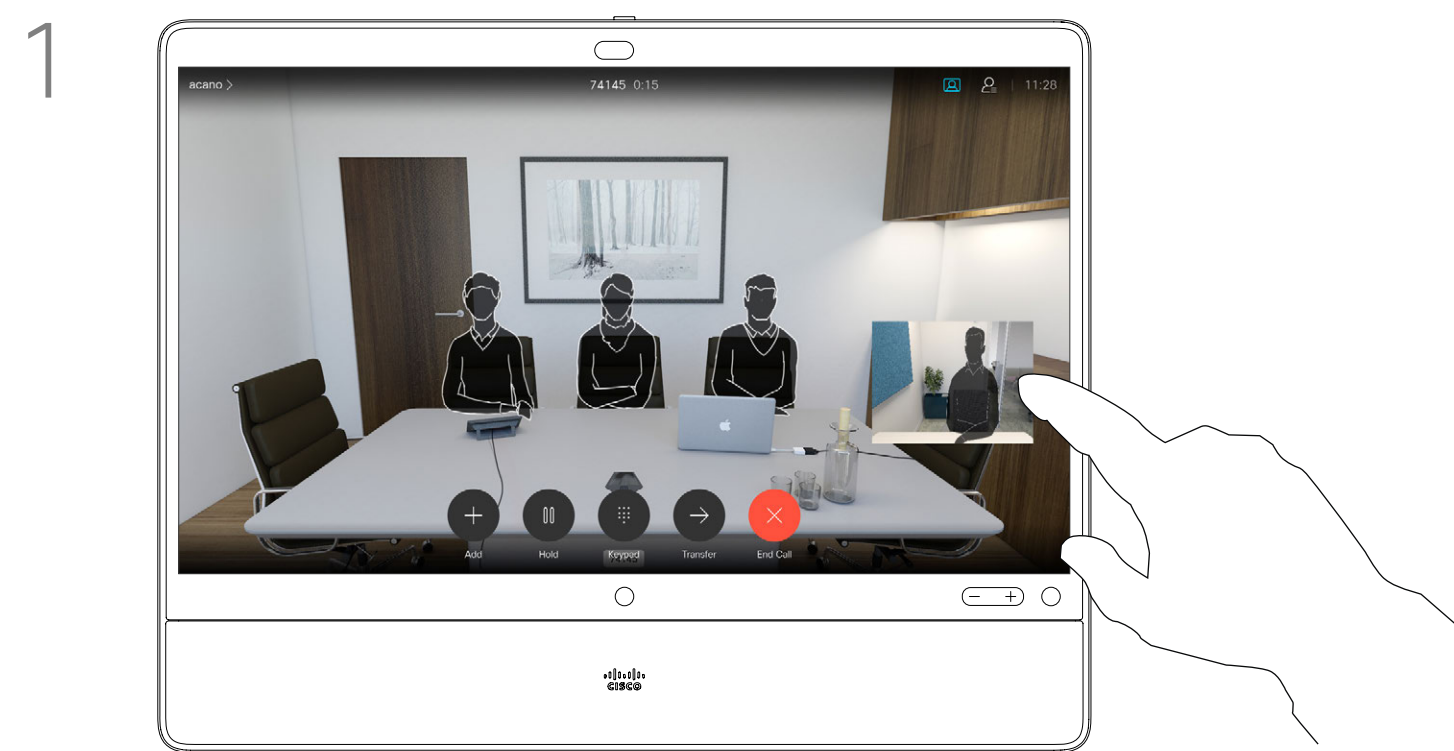


Tap and hold the selfview image.

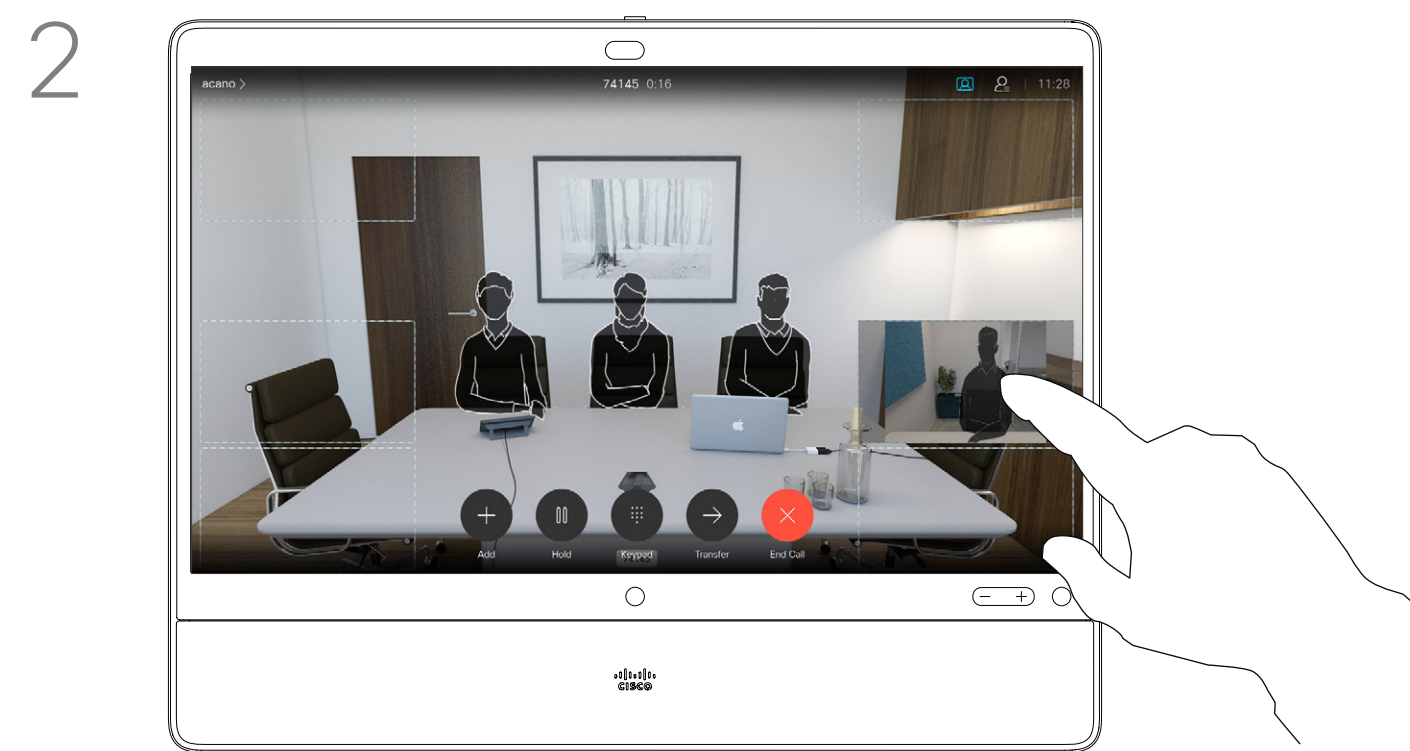 

 You will now see the alternate positions available for the selfview image. Keep holding the image.

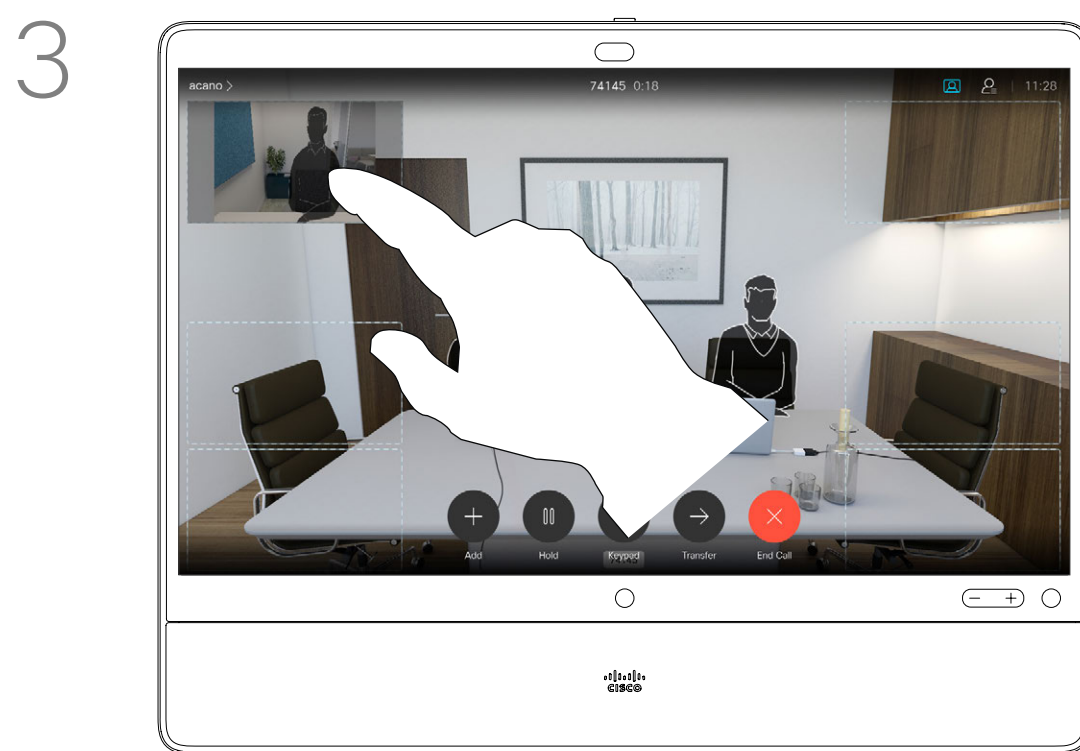

Drag the image to a new position, shown here is the upper left corner.

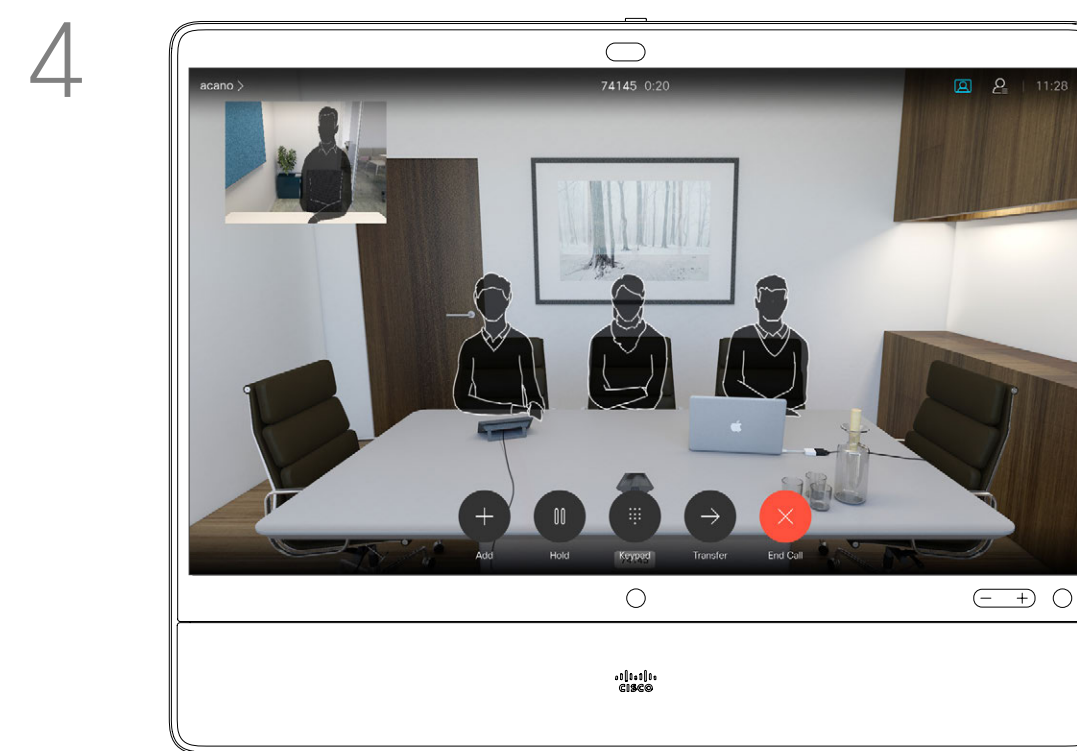 

Release the image by lifting your finger from the screen. The selfview image has now assumed its new position.

Selfview shows what others see from your device. You can use it to confirm that they see what you want them to see.

The selfview appears as a PiP (Picture-in-Picture).

 
From time to time you may want to have the selfview activated during the meeting. This could, for example, be to ensure that you remain seen on the screen.

It may happen that the current position of the selfview blocks important parts of the image on your screen. You may therefore want to move it.


Camera Control

Far-End Camera Control


About Camera Control

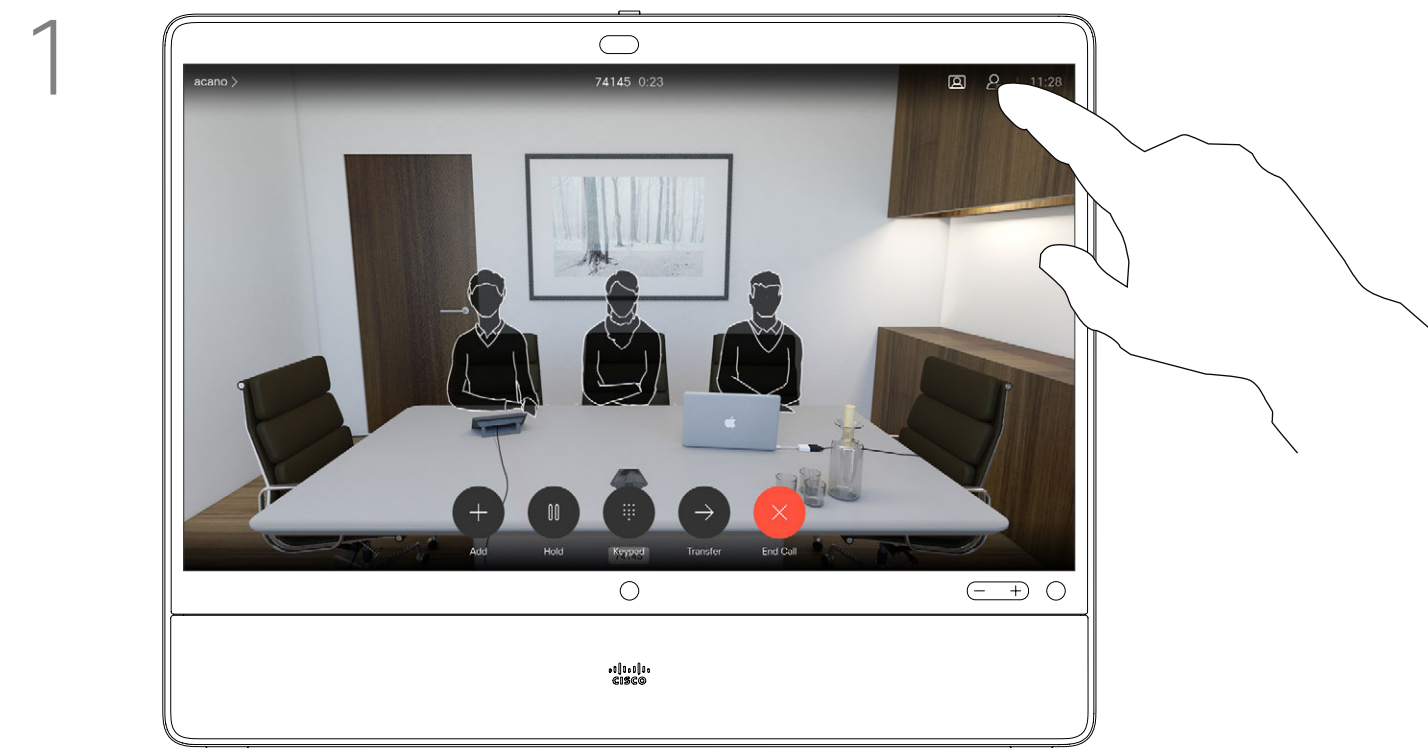


Tap the **Participant** icon.

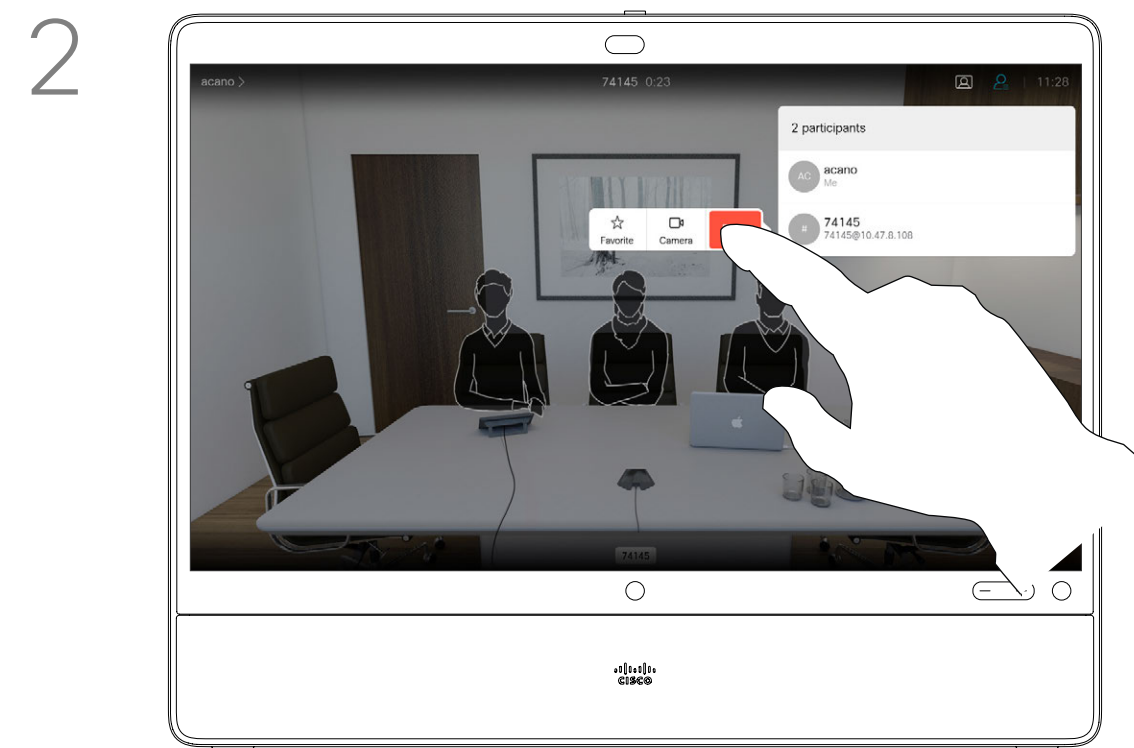 

 Tap the participant, whose camera you want to control, then tap **Camera**.

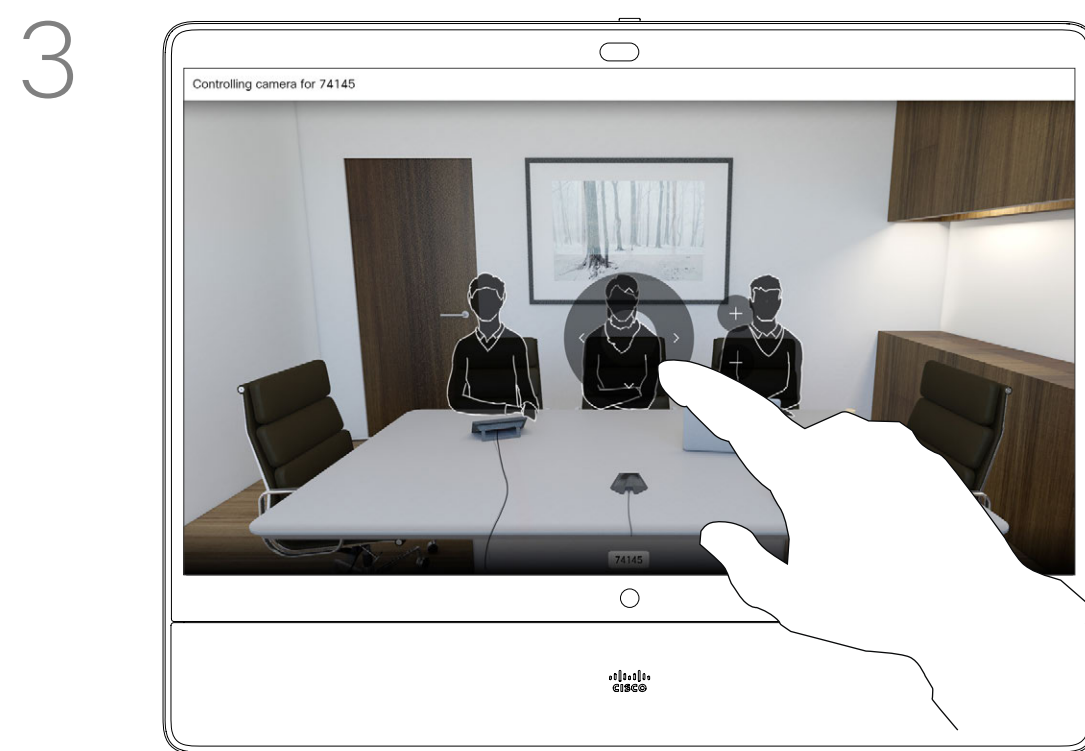

 Use the Pan, Tilt, and Zoom controls as required.

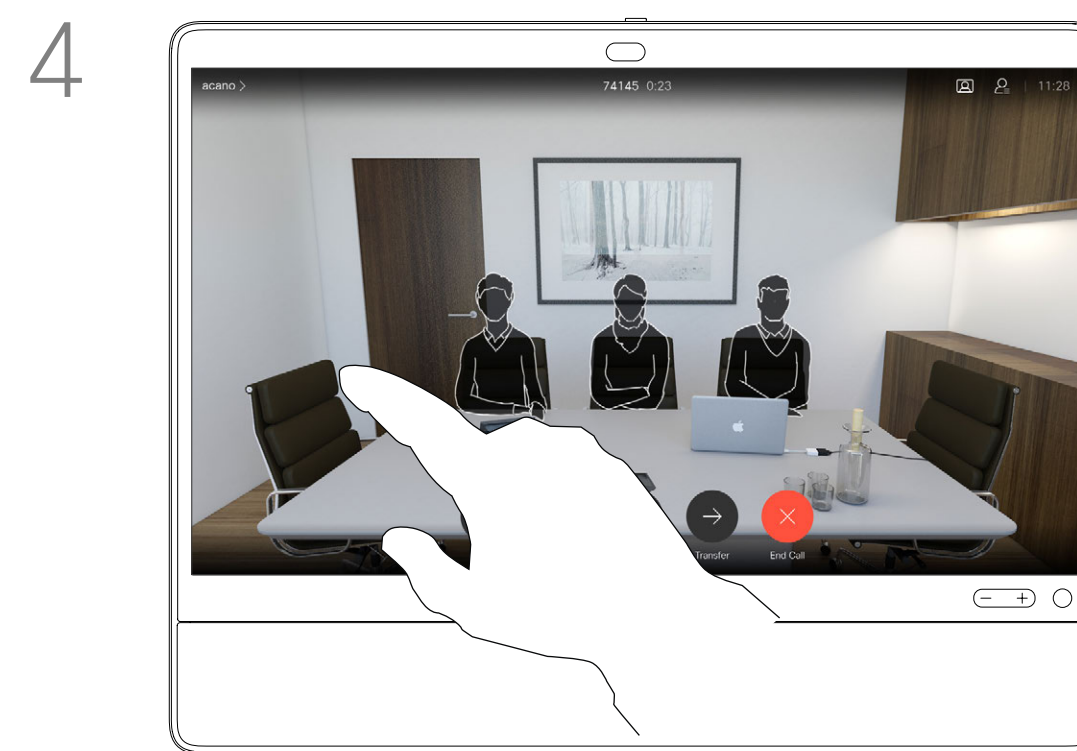

Tap somewhere outside the controls when you are done.

You may be in a video call, in which one or more of the other devices have a remotely controllable camera.

 
You can then control those cameras from your own device. This is referred to as Far-End Camera Control (FECC).

If the far-end device has activated camera tracking (which takes place when the camera tracks and shows who is speaking) you don't see the option of FECC.


Camera Control

Video Backgrounds


About Backgrounds

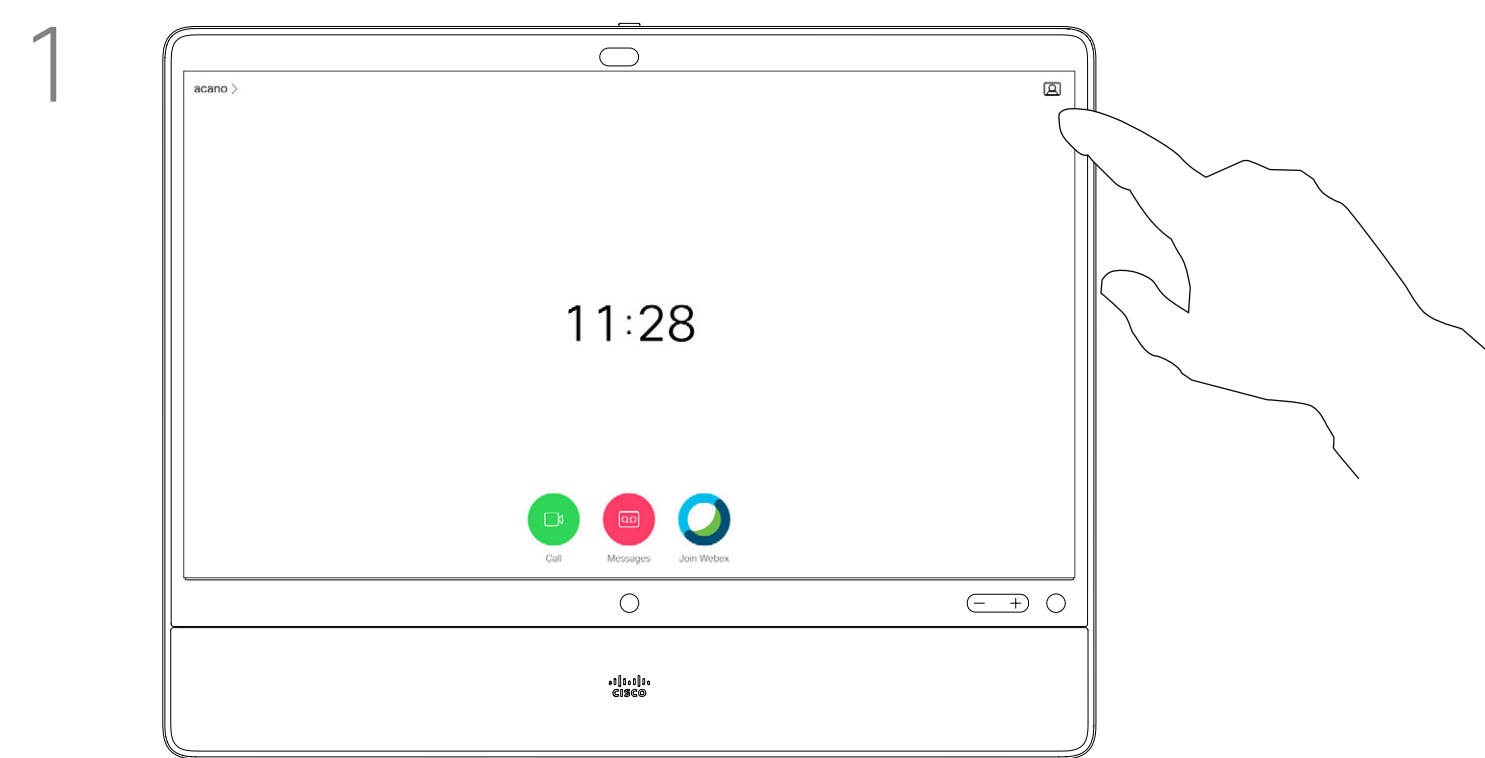


Tap the **Selfview** icon.

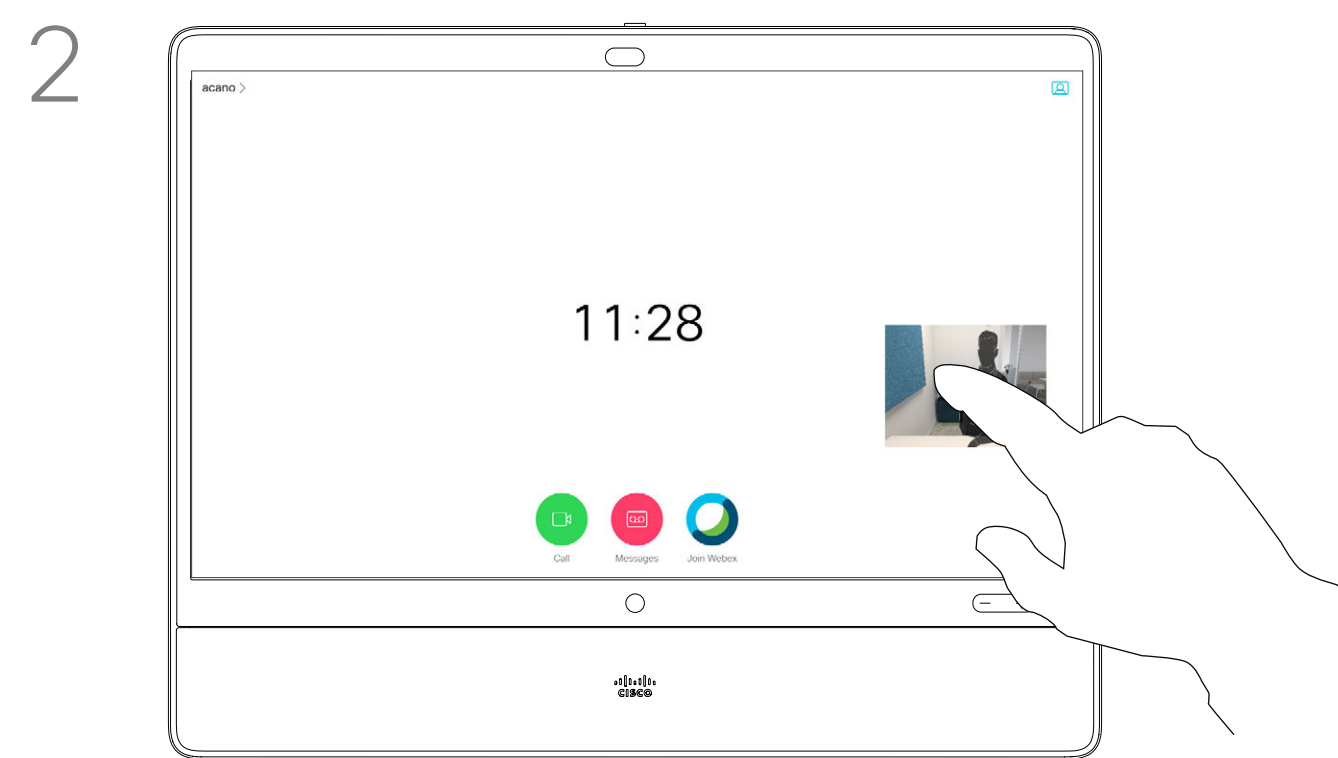 

 Tap the selfview image to open background options.

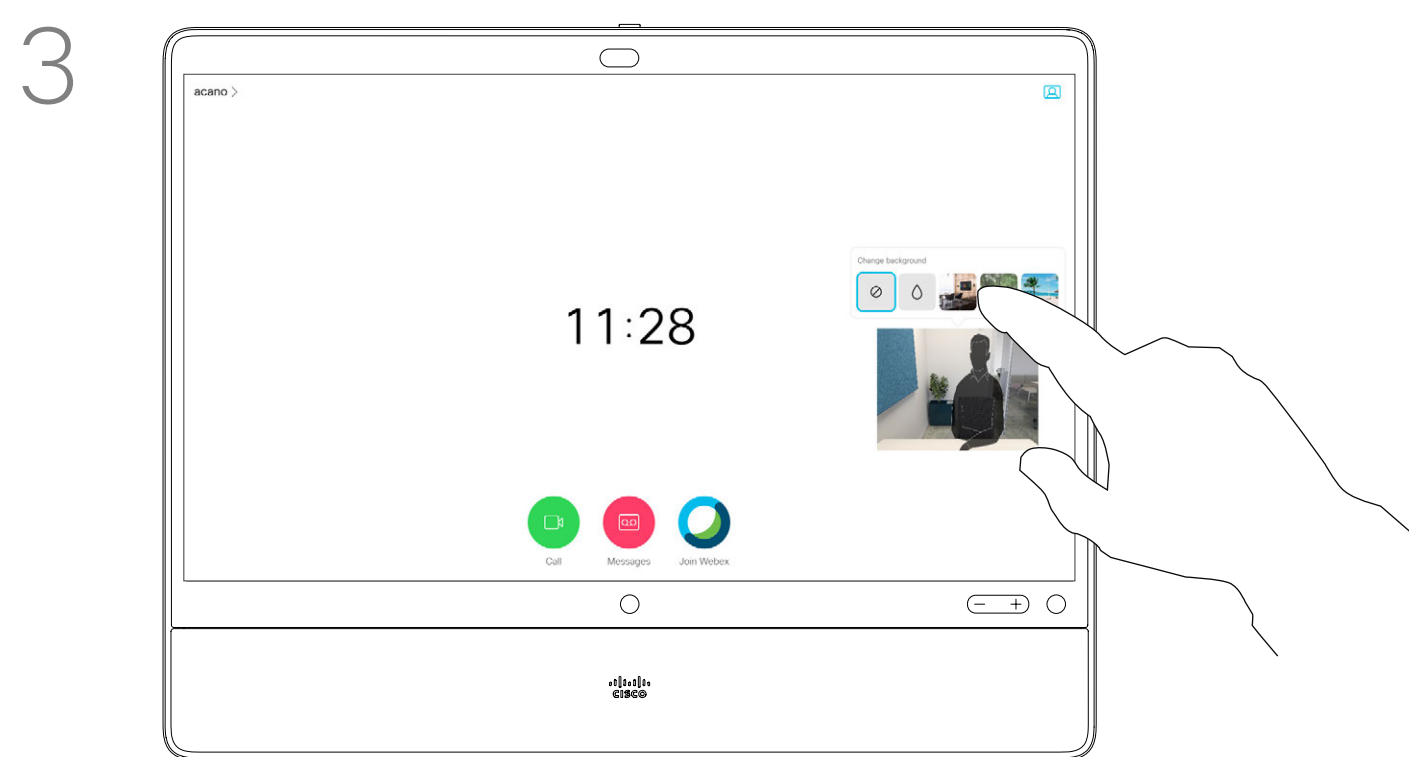

Select blurred or image background.

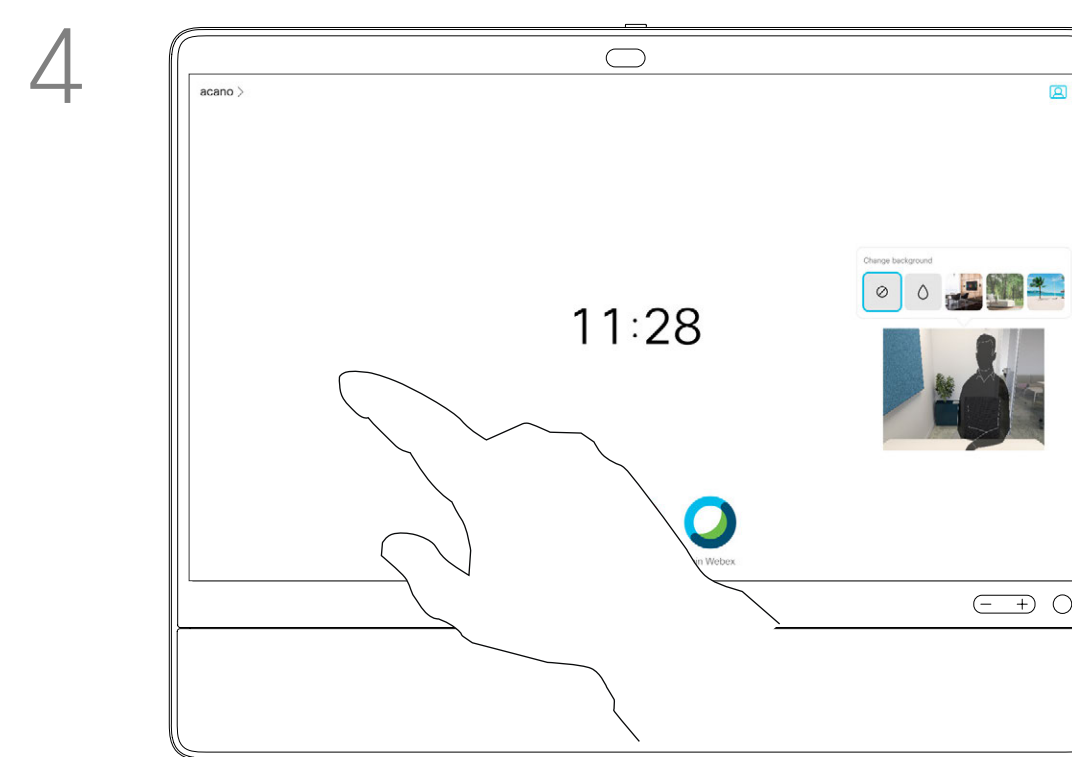 

Tap the screen outside the controls when you are done.

To close selfview, tap the **Selfview** icon again.

With video backgrounds you can change or blur the background of the image others see in the video meeting. This helps you to be the focus of the image or hide a messy background at the office.

To enable video backgrounds, go to **Settings**, select **Video Backgrounds** and toggle **Backgrounds On**.

NOTE: The blurring may not cover the background entirely and possible sensitive information may be visible to others in the video meeting.



Settings



Available Settings

Access Settings

From the **Settings** menu you can check device information and change several settings. Which settings are available may have been restricted by your administrator.

- Provides video address information, IP and MAC address, SIP Proxy, and the current software version.
- Turn video backgrounds on or off.
- Activate and deactivate Bluetooth.
- Select ringtone and set the volume of the ringtone.
- Choose a call service.
- Select between Wired and Wireless (Wi-Fi) connection.
- Restart the device.
- Perform a Factory Reset to return to Factory default settings. By doing this, you lose your current registration. You cannot undo a factory reset.

To get to Settings, tap the device name in the upper left corner of the home screen. Then tap **Settings**.

